 

INSTALLATION INSTRUCTIONS

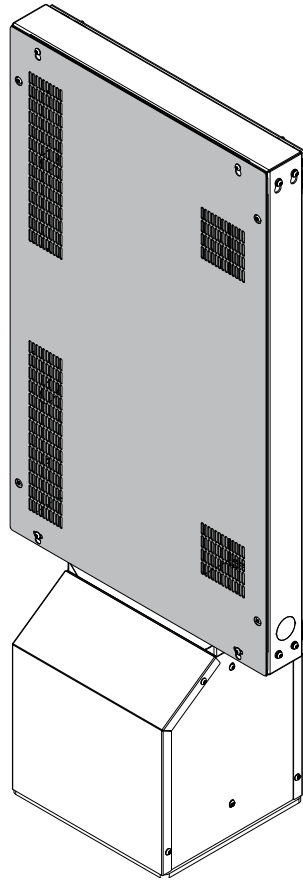

Velocity™ Outdoor Pedestal Rear Cover (LG)

DISCLAIMER

Legrand | AV and its affiliated corporations and subsidiaries (collectively Legrand | AV), intend to make this manual accurate and complete. However, Legrand | AV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Legrand | AV makes no representation of warranty, expressed or implied, regarding the information contained herein. Legrand | AV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Legrand AV Inc,

DEFINITIONS

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

MOUNTING SYSTEM: A MOUNTING SYSTEM is the primary product designed by Chief® to mount the projector or display.

ACCESSORY: An ACCESSORY is any product designed by Chief® to complement the primary mounting system either by mounting any supporting components or enhancing the mounting capabilities of the primary mounting system.

COMPONENT: A COMPONENT is any secondary product to be mounted to an accessory, i.e. speakers, CPU's, cameras, tablets, additional displays.



IMPORTANT SAFETY INSTRUCTIONS



WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all mounts/accessories are properly assembled and installed using the instructions provided.



WARNING: Use this accessory only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

 
 
 
 


WARNING: Never operate this accessory if it is damaged. Return the mounting system to a service center for examination and repair.

NOTE: ODMBCLG has no user serviceable parts.


--SAVE THESE INSTRUCTIONS--

DIMENSIONS

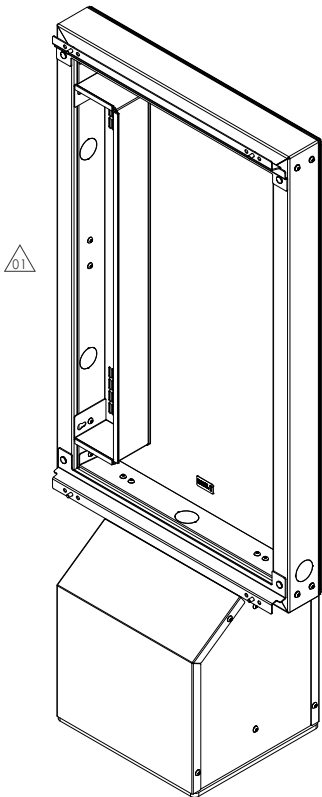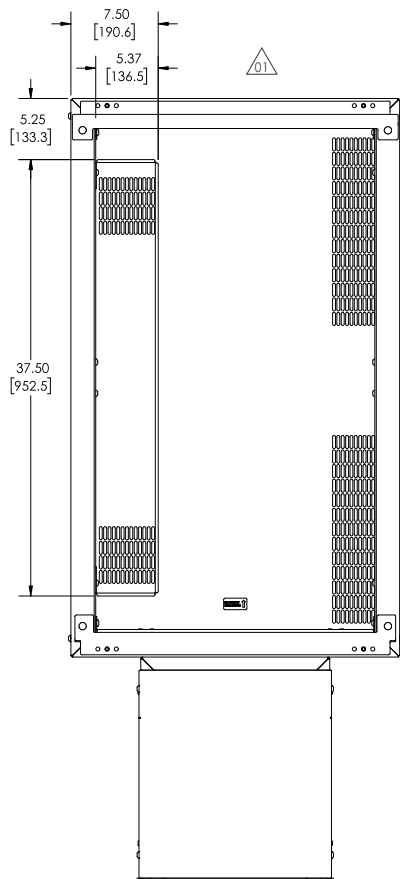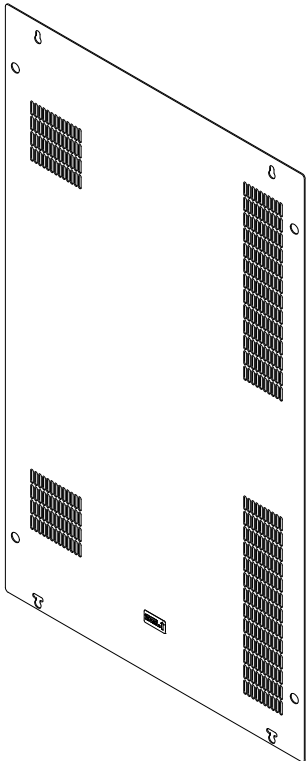
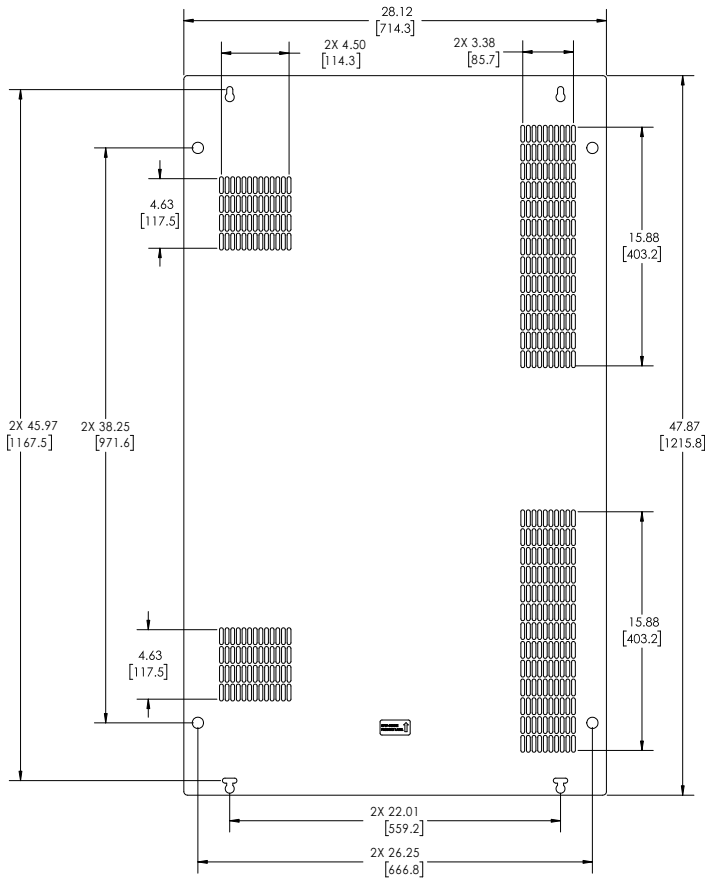


DIMENSIONS: INCHES
[MILLIMETERS]

 
DIMENSIONS

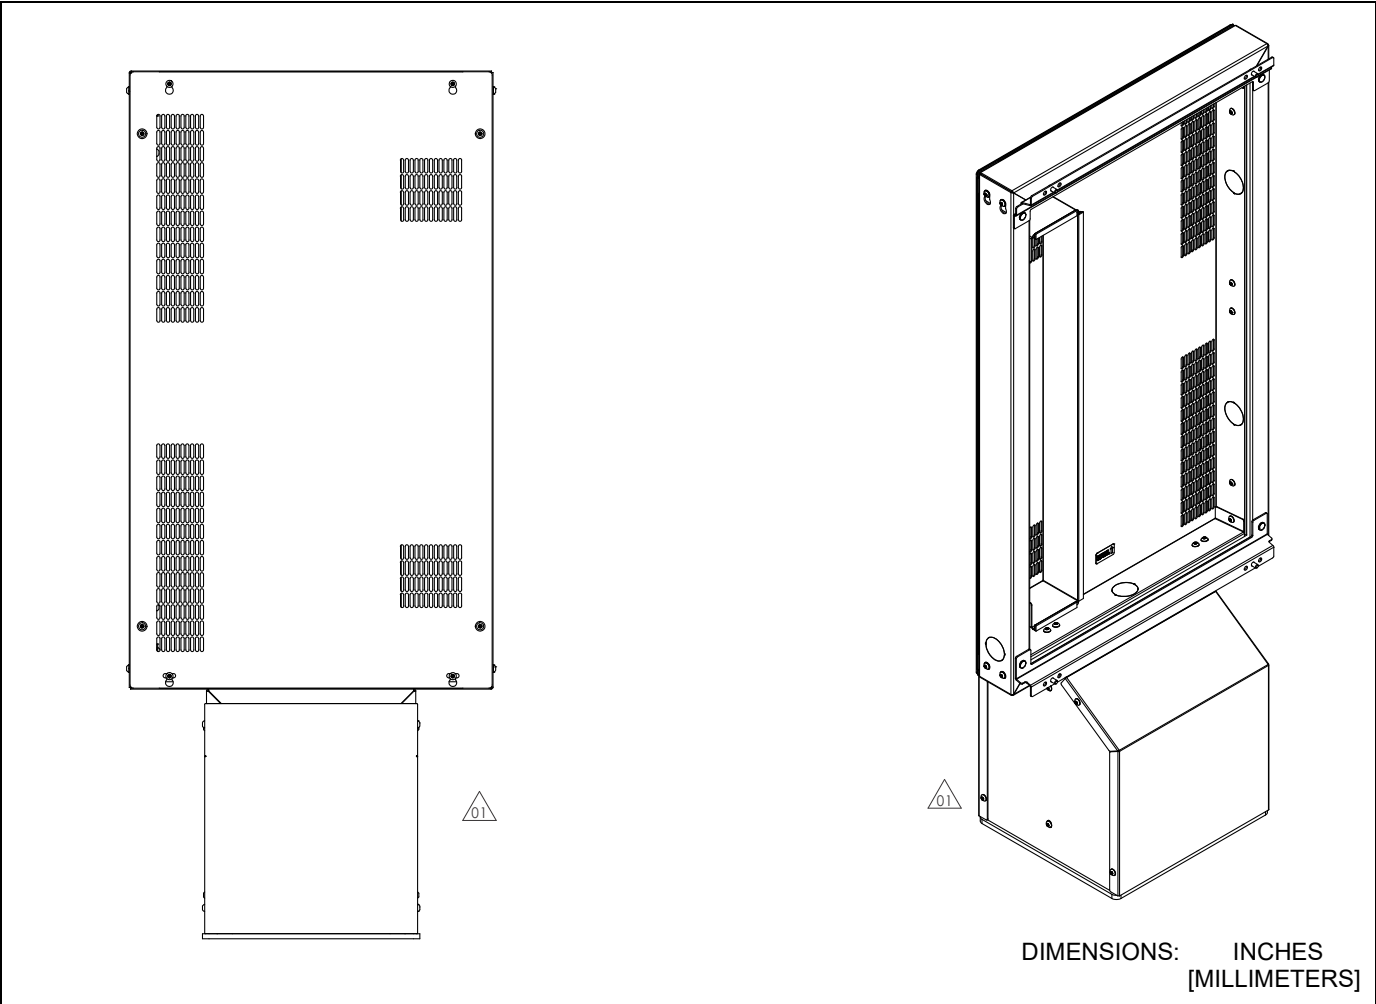


LEGEND

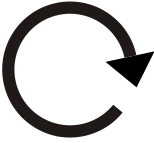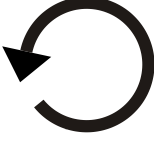  	Tighten Fastener Apretar elemento de fijación Befestigungsteil festziehen Apertar fixador Serrare il fissaggio Bevestiging vastdraaien Serrez les fixations		Pencil Mark Marcar con lápiz Stiftmarkierung Marcar com lápis Segno a matita Potloodmerkten Marquage au crayon
	Loosen Fastener Aflojar elemento de fijación Befestigungsteil lösen Desapertar fixador Allentare il fissaggio Bevestiging losdraaien Desserrez les fixations		Drill Hole Perforar Bohrloch Fazer furo Praticare un foro Gat boren Percez un trou
	Phillips Screwdriver Destornillador Phillips Kreuzschlitzschraubendreher Chave de fendas Phillips Cacciavite a stella Kruiskopschroevendraaier Tournevis à pointe cruciforme		Adjust Ajustar Einstellen Ajustar Regolare Afstellen Ajuster
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche		Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez
	By Hand A mano Von Hand Com a mão A mano Met de hand À la main		Optional Opcional Optional Opcional Opzionale Optie En option
	Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale Zeskantsleutel Clé à tête hexagonale		Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza Veiligheidssleutel Clé de sécurité

 TOOLS REQUIRED FOR INSTALLATION

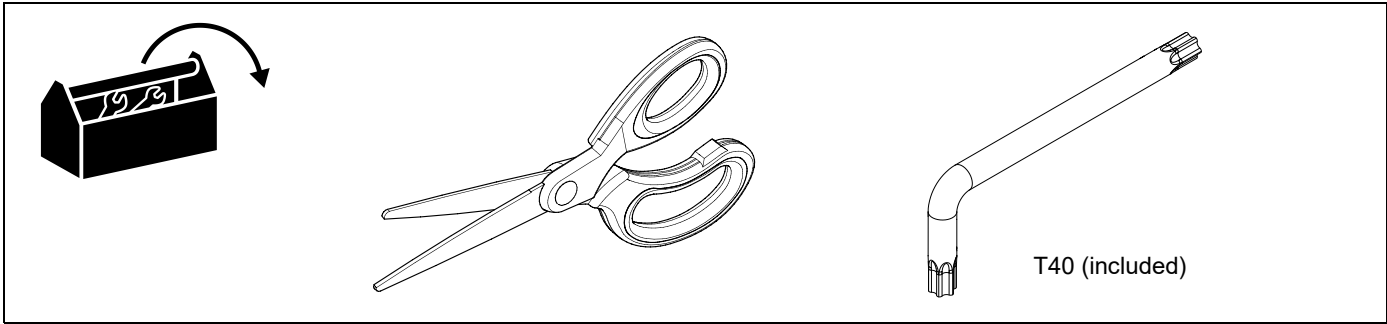

PARTS

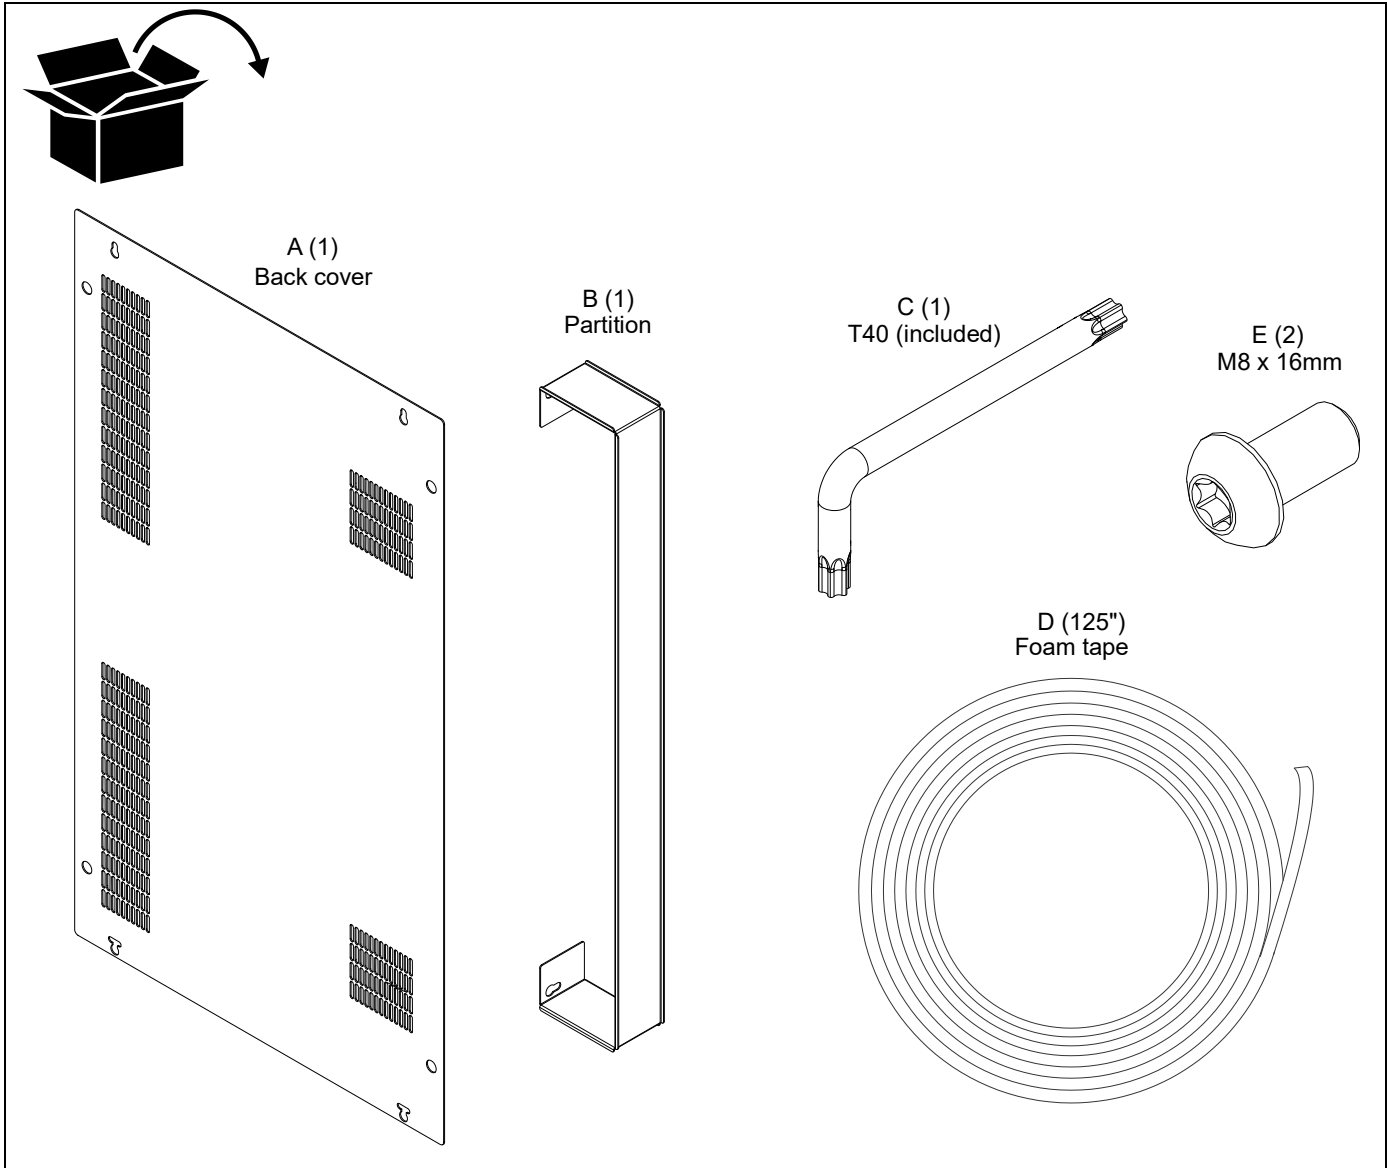 

Installation

1. Apply foam tape (D) to the edge of the partition (B).
2. Partially install two M8 x 16mm Torx screws (E) to the inside of the frame. (See Figure 2)
3. Position the slots in the partition (B) over the two M8 x 16mm Torx screws (E), then slide it towards the back of the display. Tighten the M8 x 16mm Torx screws. (See Figure 2)

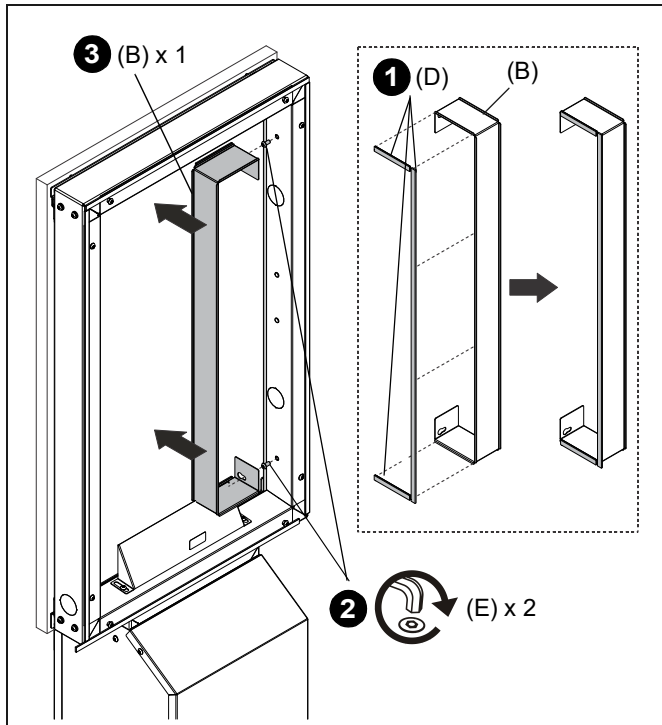 


Figure 1

4. Apply foam tape (D) along the outside edges of the back cover (A). (See Figure 2)

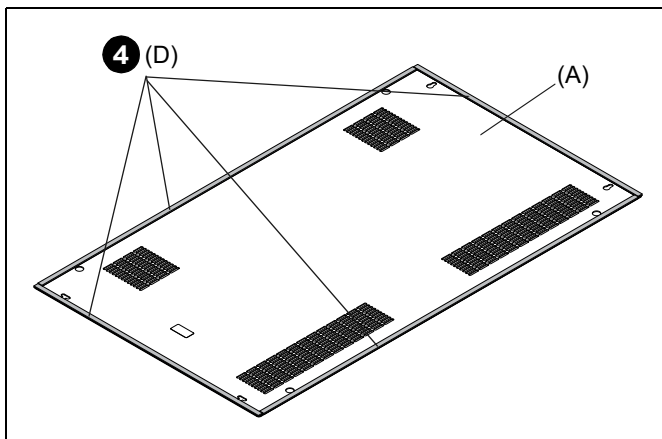 


Figure 2

5. Loosen the four M8 x 20mm security screws from the rear of the frame. Leave approximately half of the threads exposed. (See Figure 3)

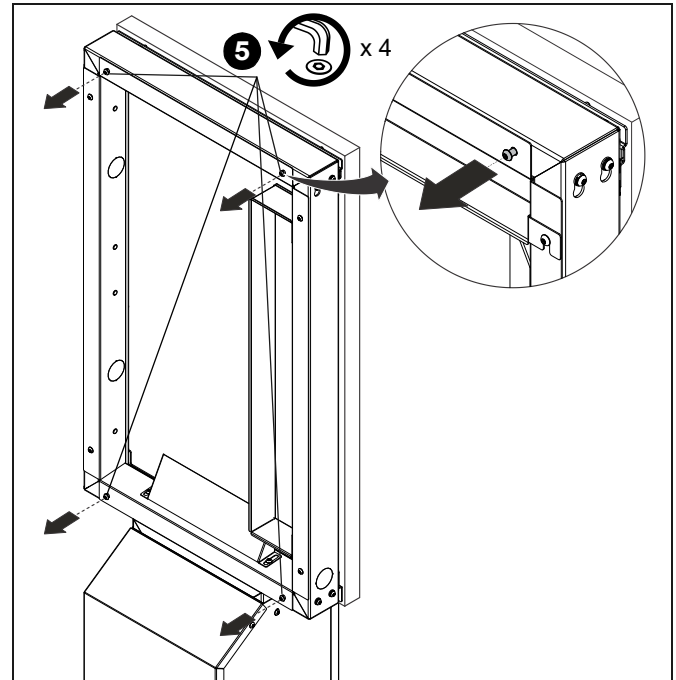 


Figure 3

6. Place the rear cover (A) over the frame. Position the exposed screws through the four slots in the corners of the cover, then lower the cover and hang it on the screws. (See Figure 4)
7. Re-tighten the four M8 x 20mm security screws using the included T40 security hex key (C). (See Figure 4)

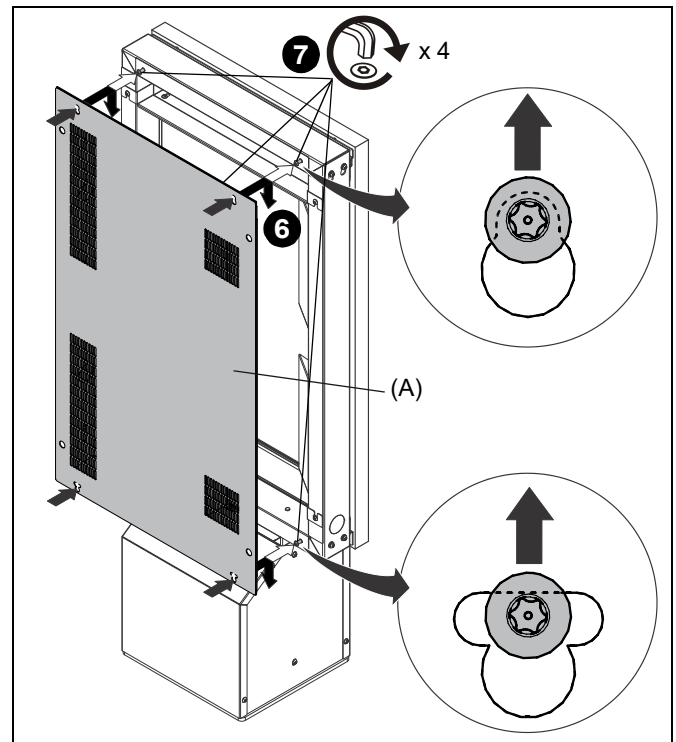 


Figure 4

CHIEF®
A brand of  **legrand®**

8800-003451 Rev00
©2025 Legrand | AV
www.legrandav.com
05/2025

- | | |
|--------------------------|--|
| USA/International | A 6436 City West Parkway, Eden Prairie, MN 55344
P 800.582.6480 / 952.225.6000
F 877.894.6918 / 952.894.6918 |
| Europe | A Franklinstraat 14, 6003 DK Weert, Netherlands
P +31 (0) 495 580 852
F +31 (0) 495 580 845 |
| Asia Pacific | A Office No. 918 on 9/F, Shatin Galleria
18-24 Shan Mei Street
Fotan, Shatin, Hong Kong
P 852 2145 4099
F 852 2145 4477 |

