

## SW-615-48P-F

RELEASE FIRMWARE IS RECOMMENDED 1.00.771

### ENHANCEMENTS

None – This was a bug fix release

### KNOWN LIMITATIONS

None

### FIXED

- Fixed issue of PoE Auto Checking not re-enabling PoE after 3 failures
- Fixed the conflict between IGMP Snooping and Aggregated ports
- UI and Help Updates
- Minor updates to Templates

## SWITCH UPDATE INSTRUCTIONS

### AUTO UPDATE

- Log in to your switch using its IP address and browse to Maintenance >> Firmware >> Firmware Upgrade.
- In the Firmware Location, Choose "Auto" and then click on the "Check" button at the bottom of the page.
- The system will look for the update and the "Check" button will change to "Update". Click on the "Update" button.
- Note: Please do not power the switch down or disconnect the switch during the upgrade process as this can damage the switch. Please be patient, as firmware updates can take up to five minutes to complete.
- Once the update is finished the page will refresh to the login page.
- Log back in (using default username and password), and configure the switch as needed.
- Another way to automatically update your switch is to click the Update Available Indicator located in the top right corner.

### MANUAL UPDATE

- Download the latest firmware release for your switch from the "Current Version" section on this page.
- Log in to your switch using its IP address and browse to Maintenance >> Firmware >> Firmware Upgrade.
- Click "Choose File", select the firmware you just downloaded, click "Open/OK", and click "Upload". A message stating "Firmware upgrade in progress" will appear. Note: You can ignore the "Skip certificate and signature verification", this is only to be used when instructed by Luxul support.
- Note: Please do not power the switch down or disconnect the switch during the upgrade process as this can damage the switch. Please be patient, as firmware updates can take up to five minutes to complete.
- Once the update is finished the page will refresh to the login page.
- Please contact Luxul support with any questions or if you experience any issues with the upgrade process.

**DOWNLOAD FIRMWARE**

**VISIT PRODUCT PAGE**

Alternatively, you may download the latest firmware release for your switch from the bottom of the product page on [LegrandAV.com](http://LegrandAV.com) and choose "a file on your PC" under the "Firmware Location" section of the Update Firmware page.

Note: As part of Luxul's ongoing commitment to product security, firmware updates will support a cryptographic signature. Implementing signed firmware will enable the product to verify that the firmware update came from Luxul.