

ONE-YEAR LIMITED WARRANTY

Your Deni Marinizer is warranted for one year from date of purchase or receipt against all defects in material and workmanship. Should your appliance prove defective within one year from date of purchase or receipt, return the unit, freight prepaid, along with an explanation of the claim. If purchased in the U.S.A. or other country, please send to: Keystone Manufacturing Company, Inc., 33 Norris Street, Buffalo, NY 14207. (Please package your appliance carefully in its original box and packing material to avoid damage in transit. Keystone is not responsible for any damage caused to the appliance in return shipment.) Under this warranty, Keystone Manufacturing Company, Inc. undertakes to repair or replace any parts found to be defective.

This warranty is only valid if the appliance is used solely for household purposes in accordance with the instructions. This warranty is invalid if the unit is connected to an unsuitable electrical supply, or dismantled or interfered with in any way or damaged through misuse.

We ask that you kindly fill in the details on your warranty card and return it within one week from date of purchase or receipt.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state or province to province.

CUSTOMER SERVICE

If you have any questions or problems regarding the operation of your Deni Marinizer, call our customer service department toll free:

Monday through Friday 8:30 a.m. to 5:00 p.m.

(Eastern Standard Time)

1-800-DENI-822

or email us at custserv@deni.com

Visit our website at
www.deni.com

Deni by Keystone Manufacturing Company, Inc.®



Model #4750

INSTRUCTIONS FOR PROPER USE AND CARE

IMPORTANT!

Please keep these instructions and your original box packaging.


IMPORTANT SAFEGUARDS

When using this appliance, safety precautions should always be observed, including the following:

- **Read all of the instructions.**
- This unit is recommended for household, indoor use only. Do not use outdoors.
- Use this appliance only for its intended use as described in this manual.
- Close supervision is necessary when this appliance is used by or near children and disabled persons.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to Keystone Manufacturing Company, Inc. for proper service, replacement or repair.
- All servicing of this unit must be preformed by an authorized service personnel only.

SAVE THESE INSTRUCTIONS

FEATURES

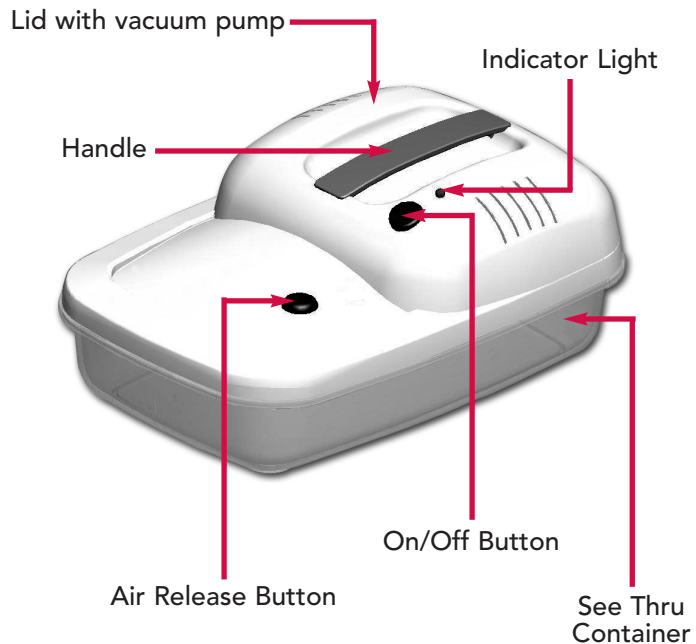

BEFORE USING THE MARINIZER

1. Remove all packing materials. Wash the see thru container with warm soapy water. Rinse and dry thoroughly. Wipe the lid with a soft, damp cloth. DO NOT immerse the lid in water or any other liquid.
2. The marinizer requires 4 AA batteries (not included). Open the battery door on the back of the lid and install batteries.

HOW TO OPERATE

1. Place food in the see thru container and cover with marinade. Note: Do not over fill or allow the food or marinade to touch the lid.
2. Place the lid firmly on the container. Note: In order to create a proper air seal, the lid must be pressed firmly over the container.
3. Push the on/off button. The red indicator light will come on and the marinizer will begin the vacuum process.
4. After approximately 2 minutes, the indicator light will go out, letting you know the vacuum cycle is complete. **The vacuum will hold for approximately 30 minutes. After approximately 30 minutes the vacuum will automatically release.**
5. Push the air release button to release the air from the container if it is less than 30 minutes.

Note: You can repeat the vacuum process 3-5 times to create a stronger marinade taste in the food.

6. Remove the lid by pushing down on the handle.
7. The food is now marinated and ready to serve or cook. Remove food from container. Do not cook or store food in the container.
8. Clean the marinizer thoroughly after each use.

HOW TO CLEAN

1. Wash the see thru container with warm soapy water. Rinse and dry thoroughly. Note: the container can be washed on the top rack of the dishwasher.
2. Be sure the lid and vacuum pump are cold. Wipe the lid with a soft, damp cloth. DO NOT immerse the lid in water or any other liquid.