

## Door Reversal Instruction for Model

- 1) Remove ( 4 ) Phillips head screws from the plastic top of the unit .  
then Lift and remove the top cover .
- 2) Lift and Remove Top Hinge and upper door and set it aside .
- 3) Remove middle hinge and lower door .
- 4) Lay down the unit and swap the door hinge to the other side making  
sure the shaft pivot is moved to the other side, then replace lower door .
- 5) Remove plastic plug at the middle to be able to move the center  
hinge to the opposite side , then replace upper door .
- 6) At the top you must install the hinge to the opposite side making sure  
the pivot pin is also relocated to the other side
- 7) You must tight all the screws firmly and adjust the door then replace  
the plastic top cover

Note : Make sure to wait 12 hours before starting the unit