www.bgelectrical.uk

(EU) Luceco SE C/ Bobinadora 1-5 08302 Mataró SPAIN Supplied by Luceco PLC Stafford Park 1 Telford TF3 3BD ENGLAND 7

yww. Manutacturing date code; year of manutacturing (yy) and week of manutacturing (Wxx)

BATCH CODE EXPLANATION



MAIN SWITCH ENCLOSURE, CUEMS1

 
TECHNICAL HELPLINE: 03300 249 279

SAFETY WARNING

The connection and installation of electrical devices must be performed by a skilled electrician only. Any intervention into or modification of the appliance shall lead to the lapse of all warranty rights. Comply with your national regulations and all relevant safety stipulations.

When installing the security seal, feed the wire through the head of the screw and the boss on the cover.

Assemble the cover and secure to the base. For the first installation ensure that the larger part of the cover is used on the incoming, power buply side. A safety screw is provided which allows a wire / security deal to be installed.



Use fixing screws to secure the base to the surface, the switch can be removed by pulling back the black clips on the bottom edge of the Main Switch. Note: - fixing screws not provided.

Prepare the incoming supply cable, a maximum diameter of 35mm² can be accepted by the terminals in the Main Switch.

Insert the cables into the terminals on the bottom edge of the Main Switch. Ensure that they are fully inserted and the screws tightened to 2.5Nm of torque.