

 
MONTAGEANLEITUNG – MA0089

SERVIERSTATION BARISTO INDUSTRIAL


EN Assembly instruction Serving station Baristo Industrial · FR Notice de montage Poste de service Baristo Industrial
IT Istruzioni d'assemblaggio Stazione di servizio Baristo Industrial · ES Indicaciones de montaje Estación de servicio Baristo Industrial
NO Monteringsanvisning Serveringsstasjon Baristo Industrial · DK Monteringsvejledning Serveringsstation Baristo Industrial
SE Monteringsanvisning Serveringsstation Baristo Industrial · NL Montage instructies Bedienend station Baristo Industrial
PT Instruções de montagem Estação de serviço Baristo Industrial · HR Upute za sastavljanje Stanica za posluživanje Baristo Industrial

VEGA




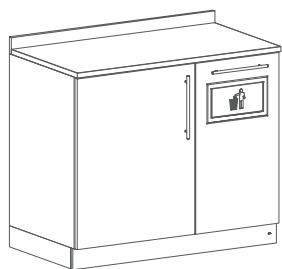



A - 1x

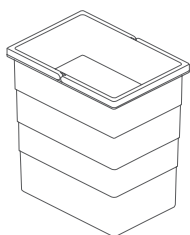 


1x

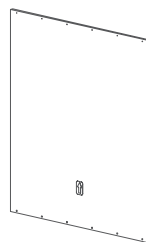 


C - 1x

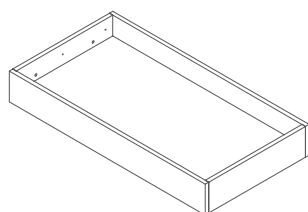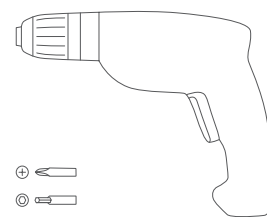  


D - 1x

 


E - 2x

 

F - 2x

 

G - 8x

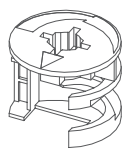 


H - 8x




I - 8x



 
5+11 mm

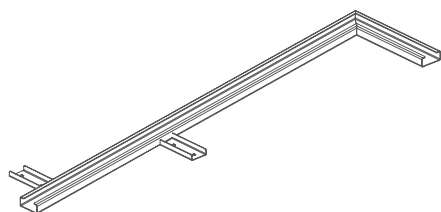


K - 1x

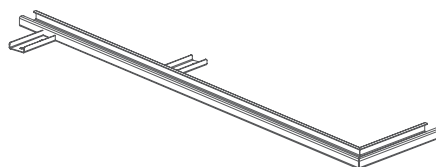 


L - 1x

 


17 mm

 


M - 6x
M7x50

 

N - 12x
M5x40

 

O - 6x
M4x35

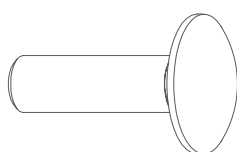 


P - 12x
M10x35








Q - 12x
M10





        R - 12x
M10





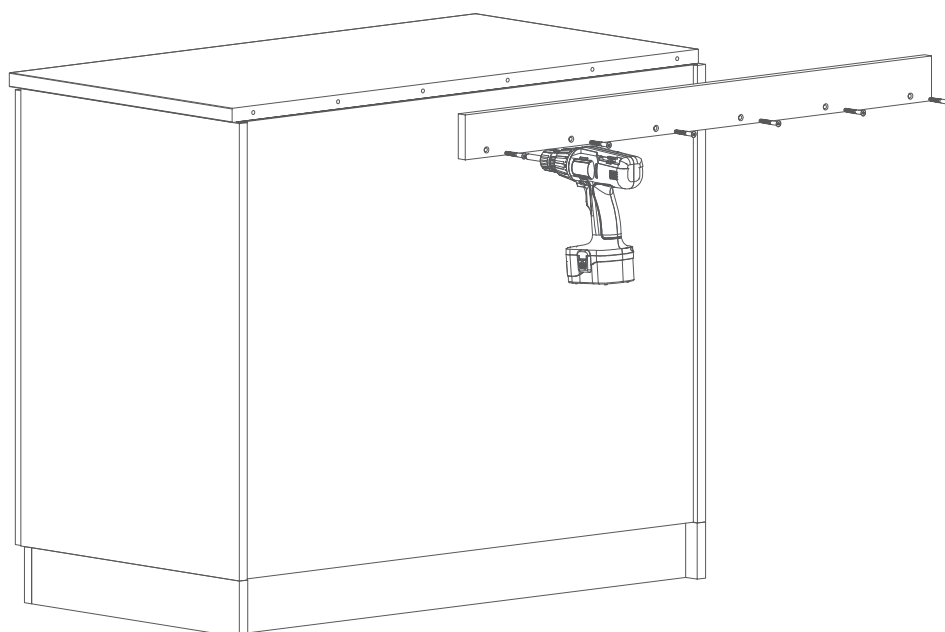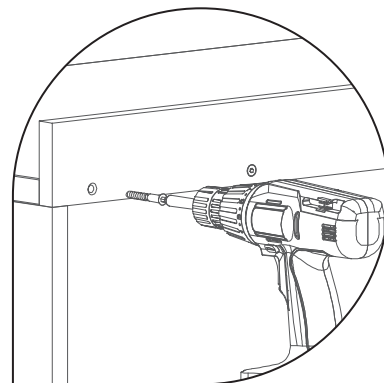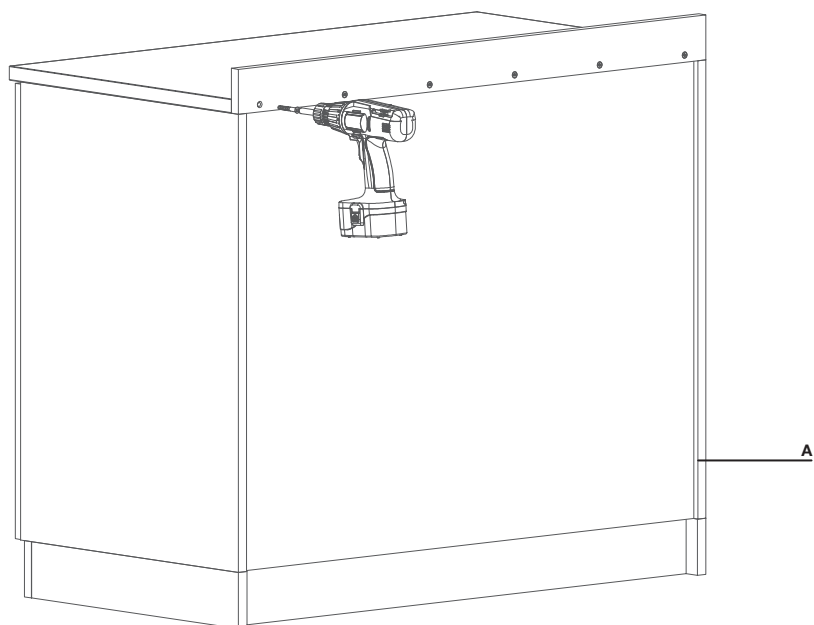

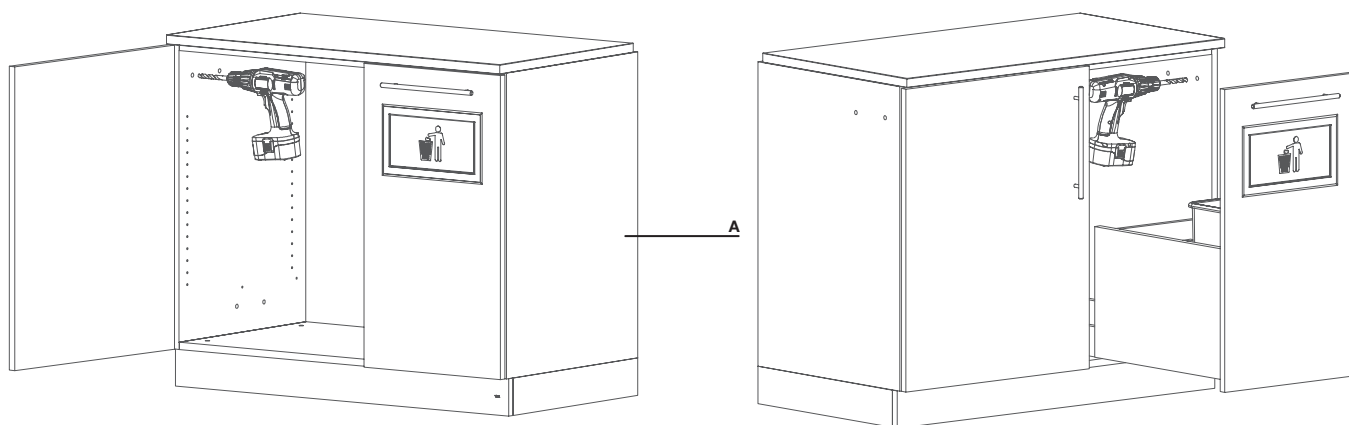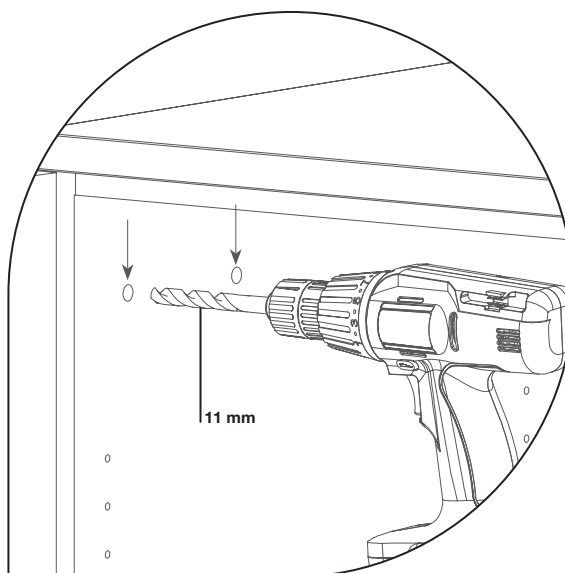


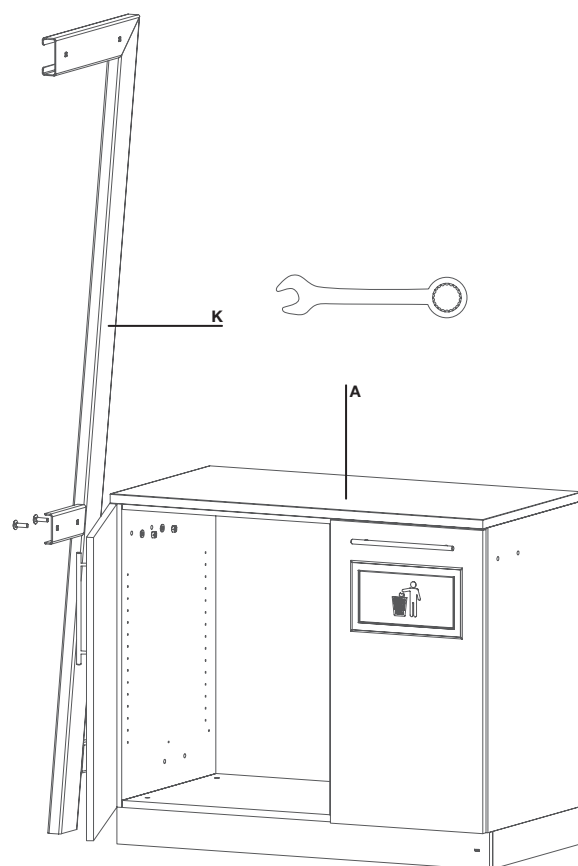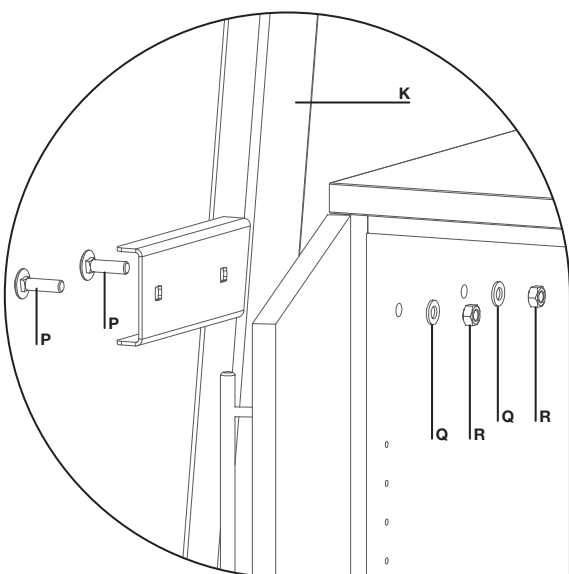


3

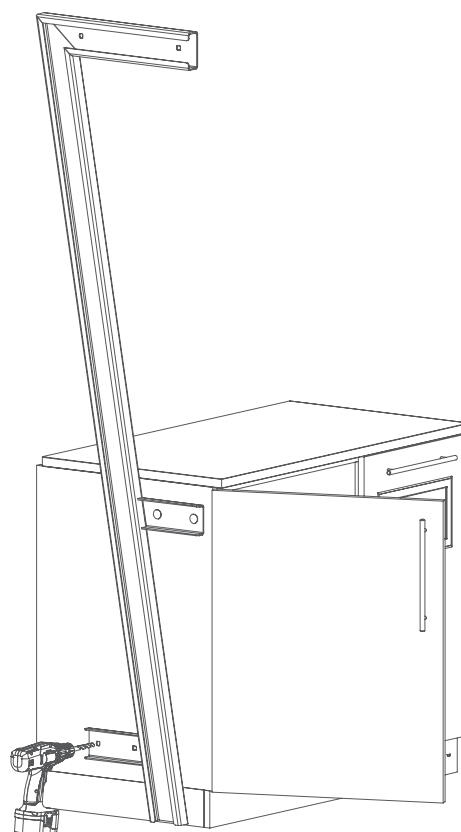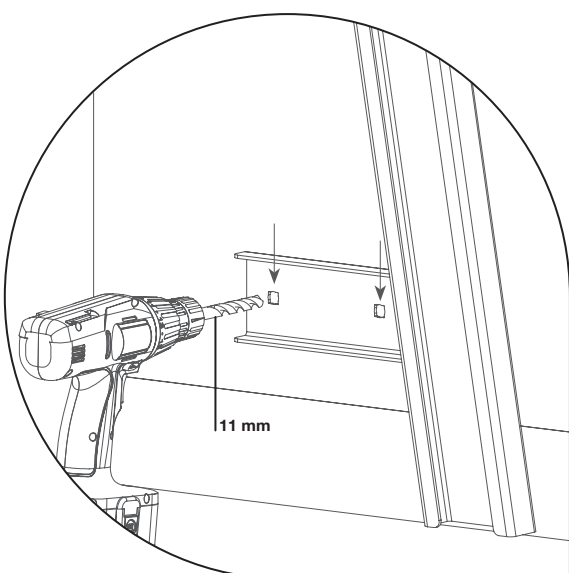  


4

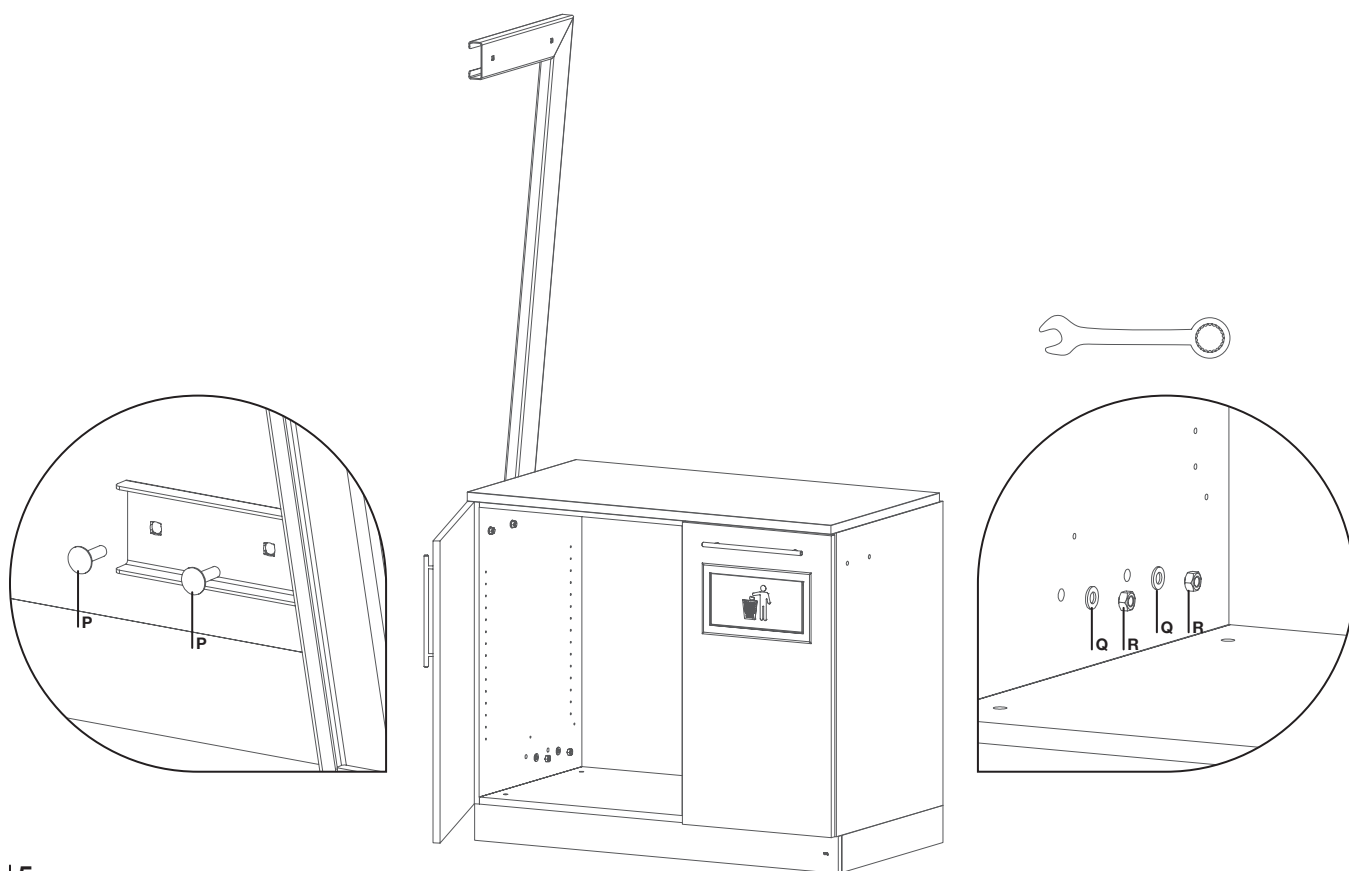 



5

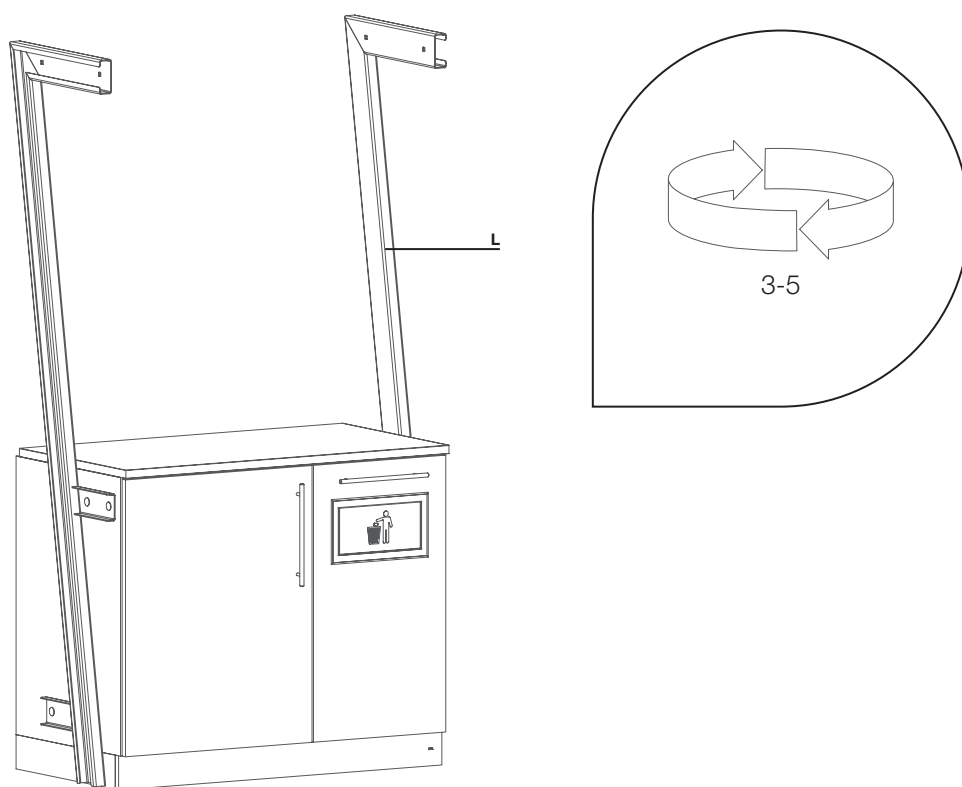 


6

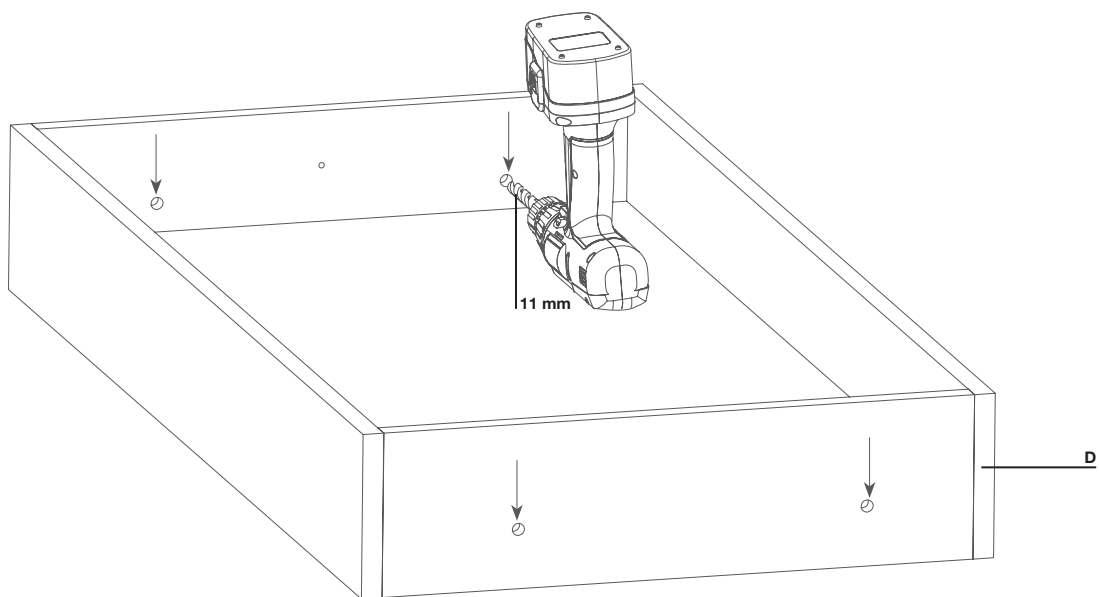 


7

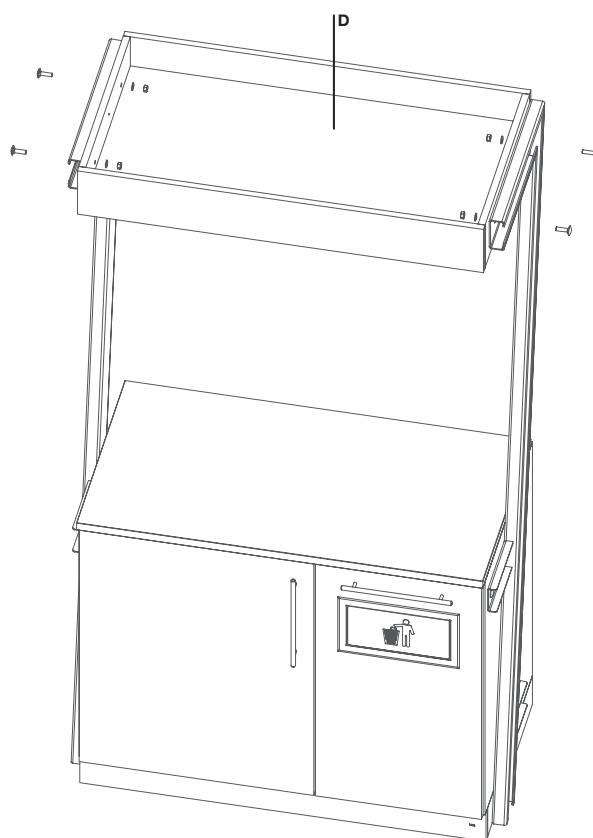 
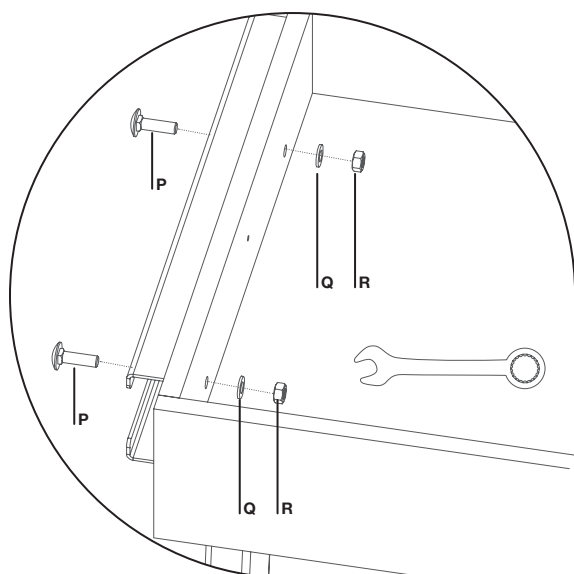 


8




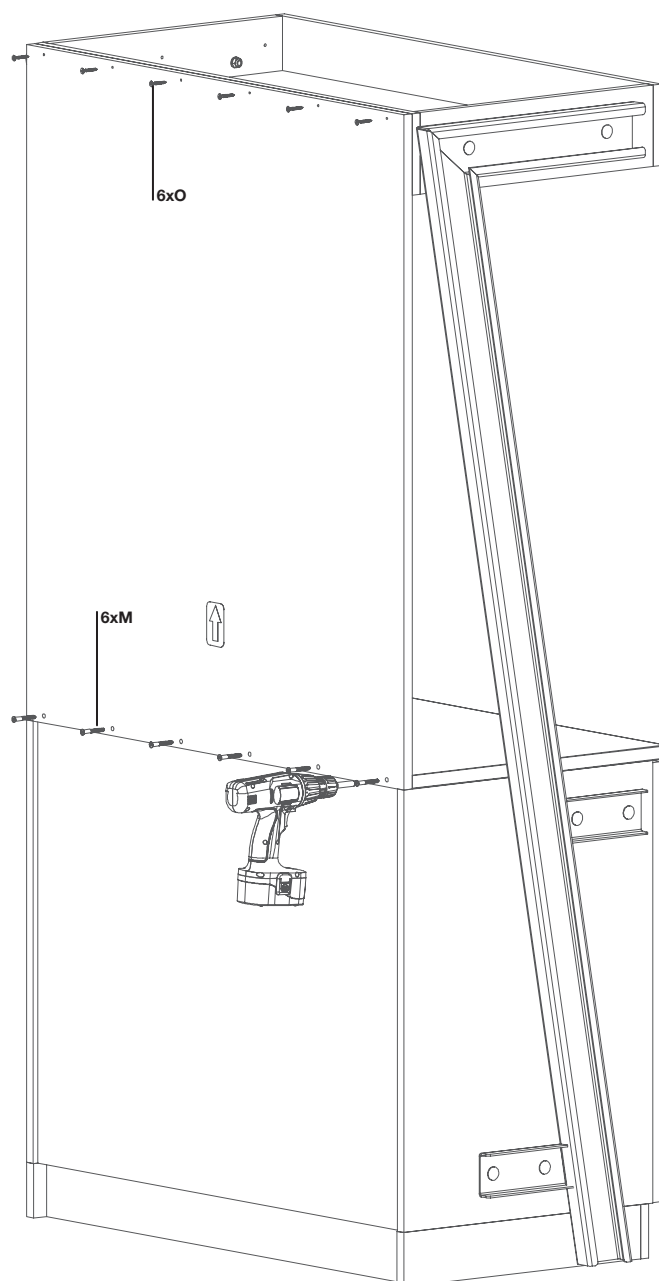 




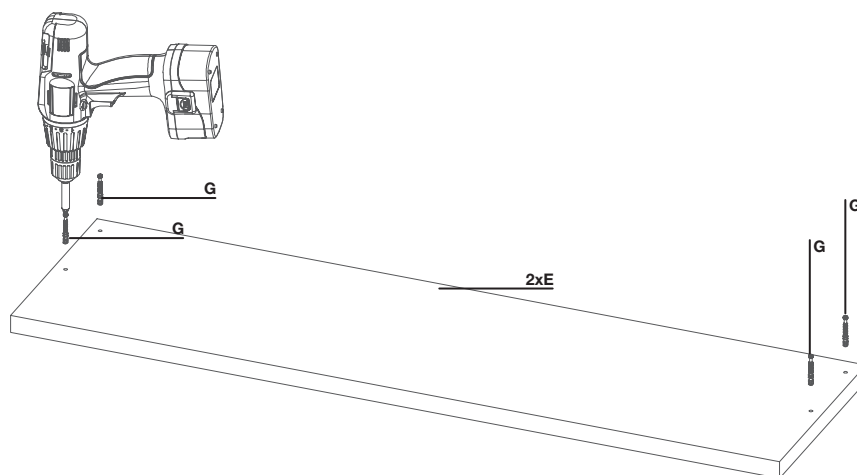 


10

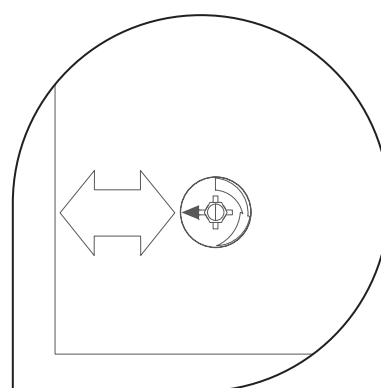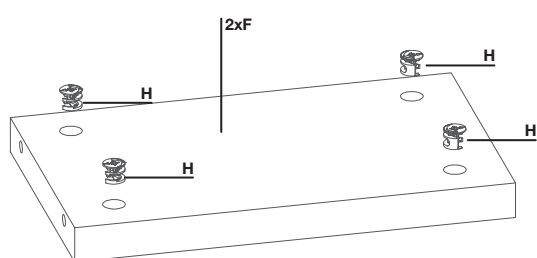  


11

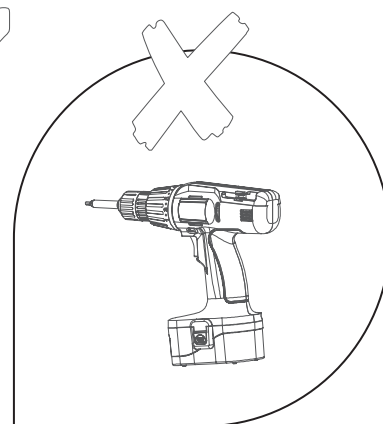 
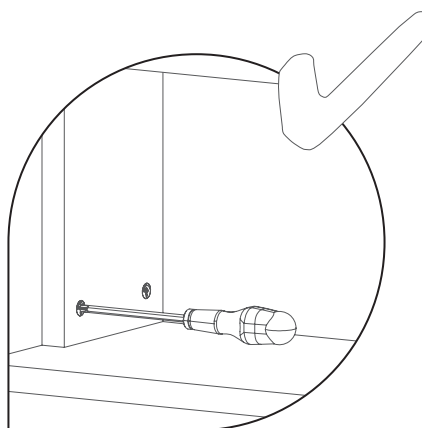 
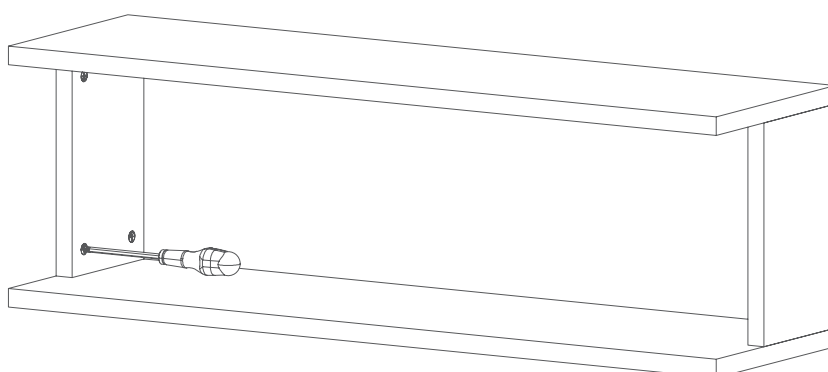 
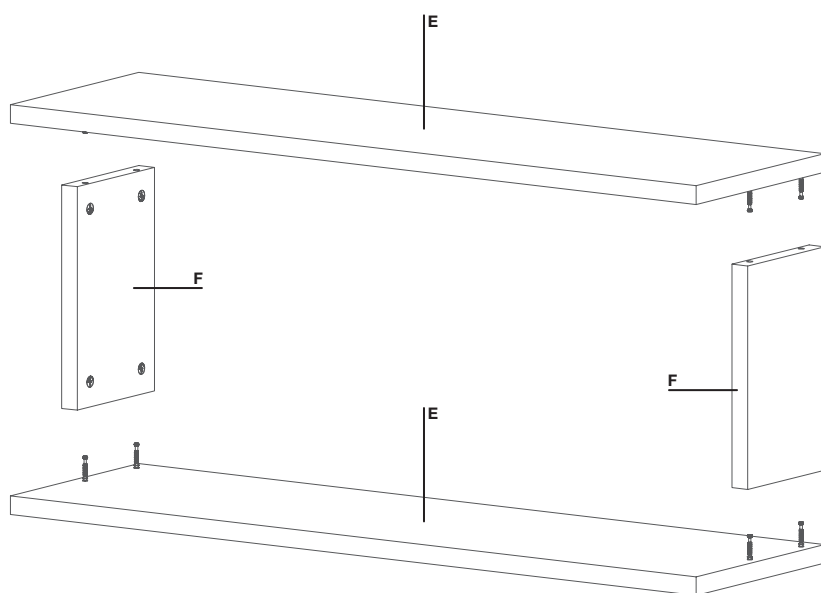 


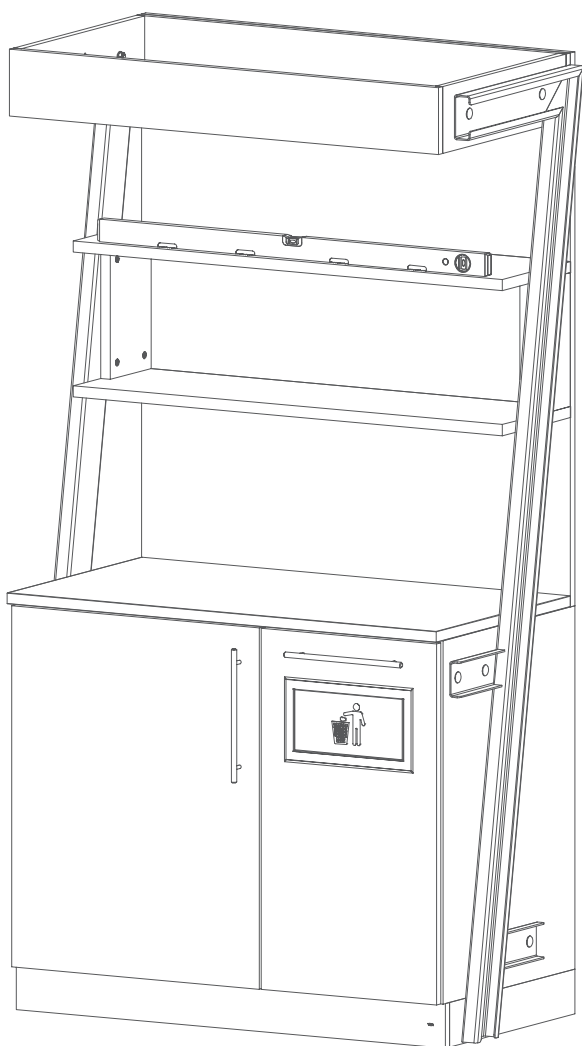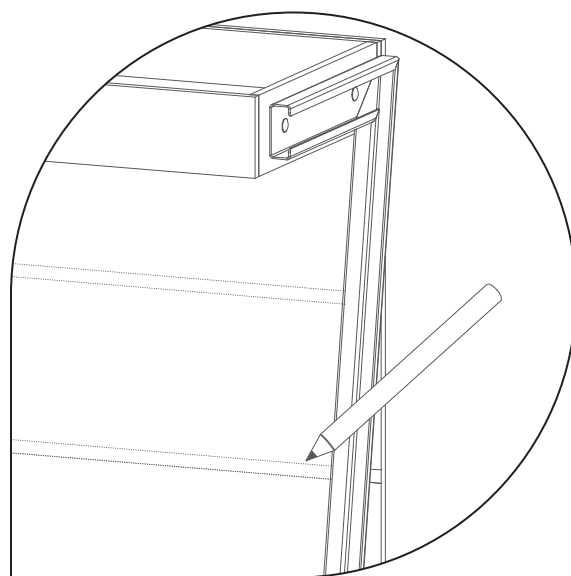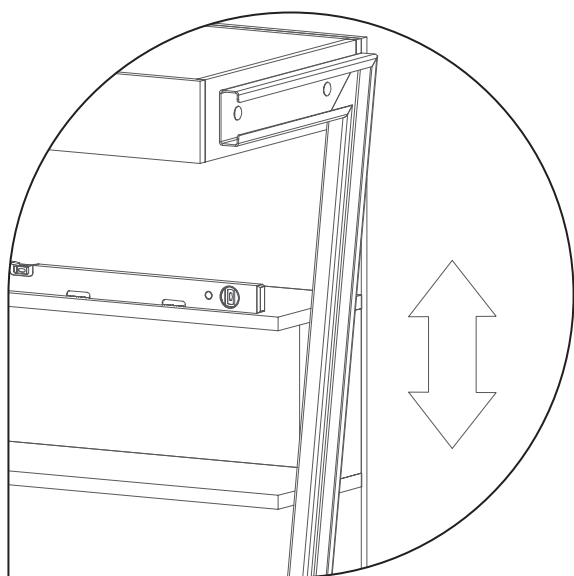   

13

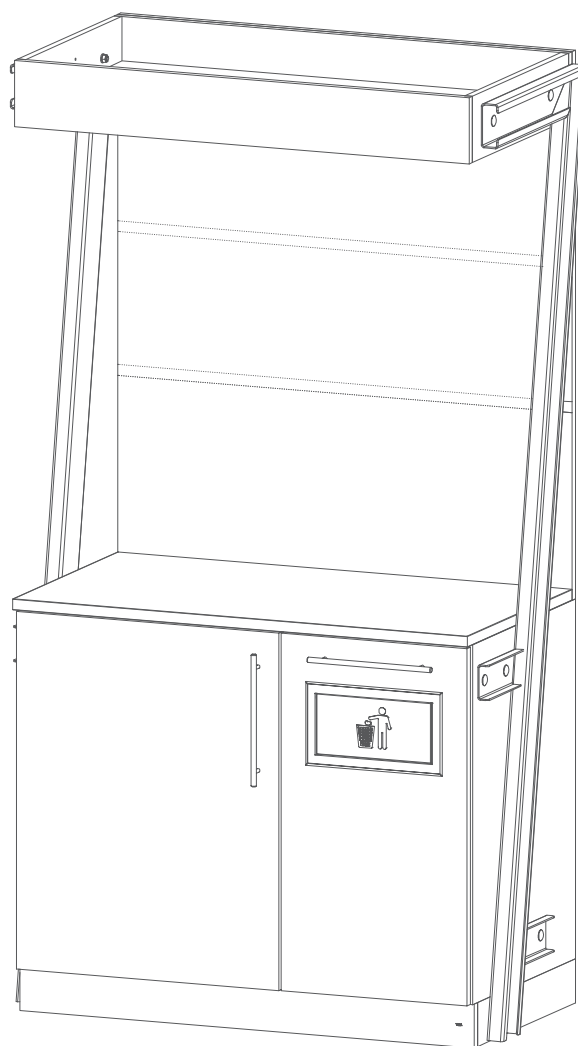 

14

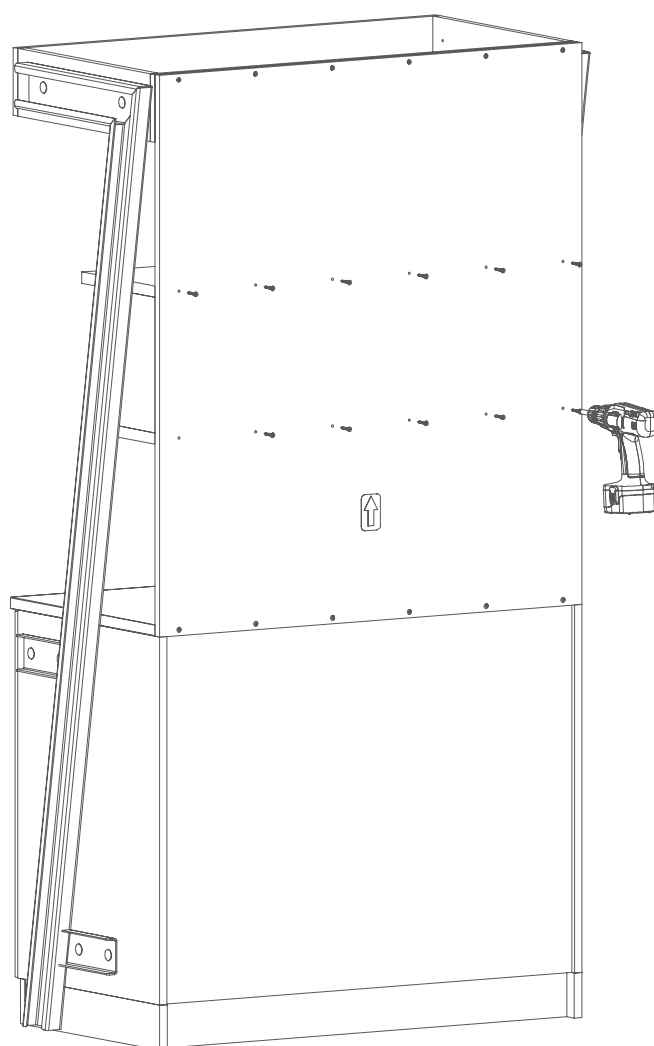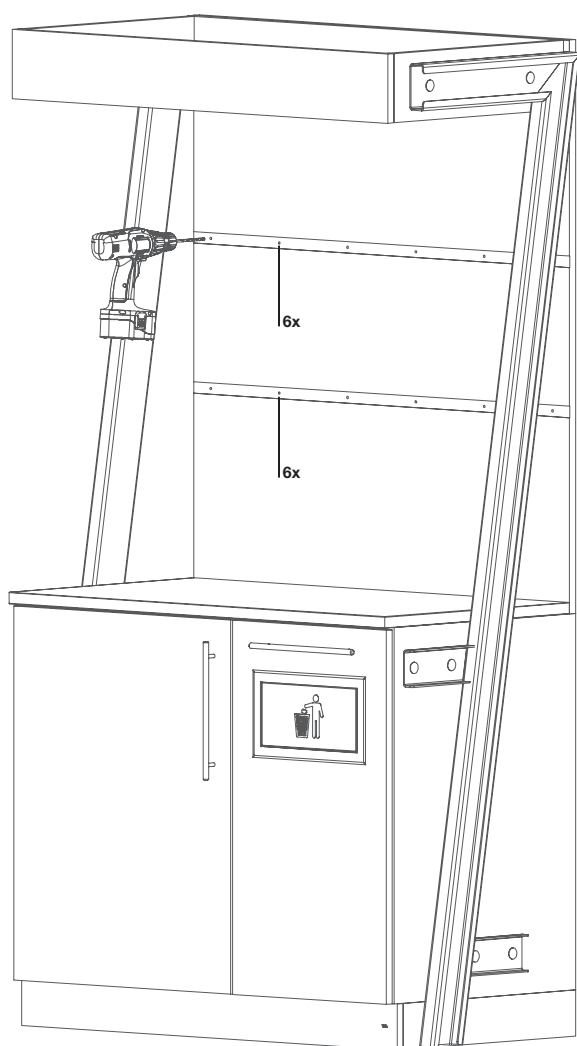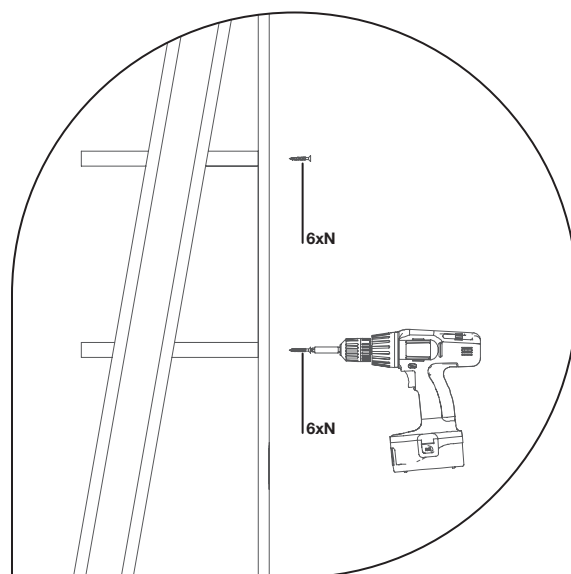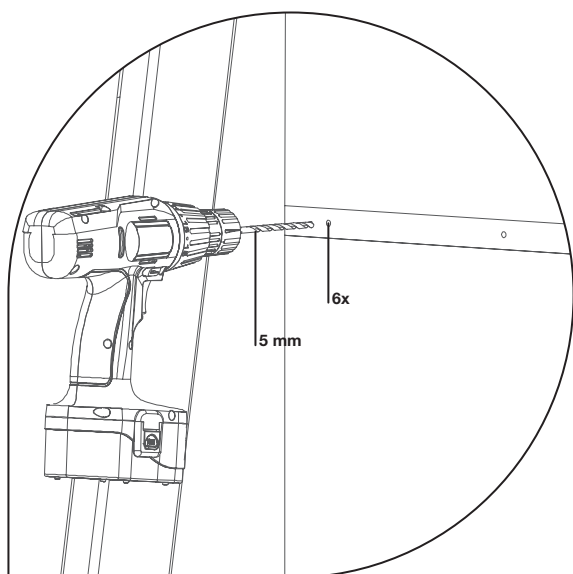    

15

16

