

MONTAGEANLEITUNG – MA0184

SERVIERSTATION BARISTO CLASSIC – MIT DREHTÜREN

EN Assembly instruction Serving station Baristo Classic – with revolving doors · FR Notice de montage Poste de service Baristo Classic – avec portes tournantes

IT Istruzioni d'assemblaggio Stazione di servizio Baristo Classic – con porte girevoli

ES Indicaciones de montaje Estación de servicio Baristo Classic – con puertas giratorias

 
NO Monteringsanvisning Serveringsstasjon Baristo Classic – med svingdører · DK Monteringsvejledning Serveringsstation Baristo Classic – med svingdøre

 
SE Monteringsanvisning Serveringsstation Baristo Classic – med svängdörrar · NL Montage instructies Bedienend station Baristo Classic – met draaideuren

PT Instruções de montagem Estação de serviço Baristo Classic – com portas giratórias


HR Upute za sastavljanje Stanica za posluživanje Baristo Classic – s rotirajućim vratima

VEGA

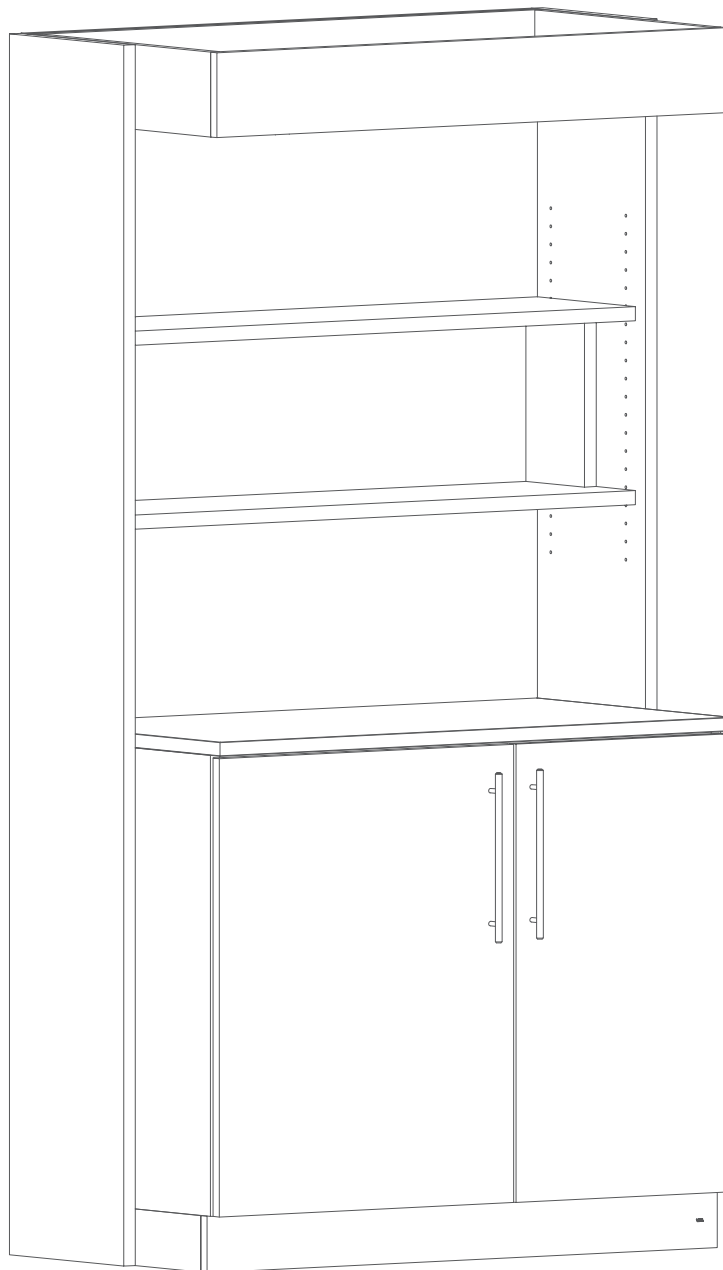


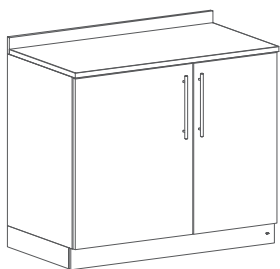


A - 1x

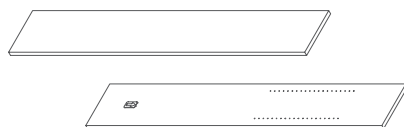 


B - 2x

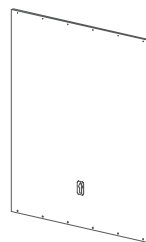 


C - 1x

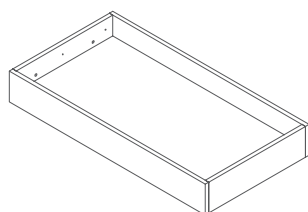 


D - 1x

 


E - 2x

 

F - 2x

 

G - 8x

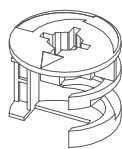 


H - 8x




I - 8x



 
J - 4x




M - 6x
M7x50



 



N - 12x
M5x40



 



O - 6x
M4x35

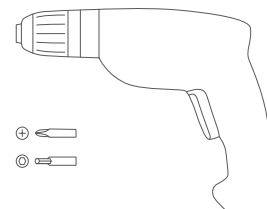 

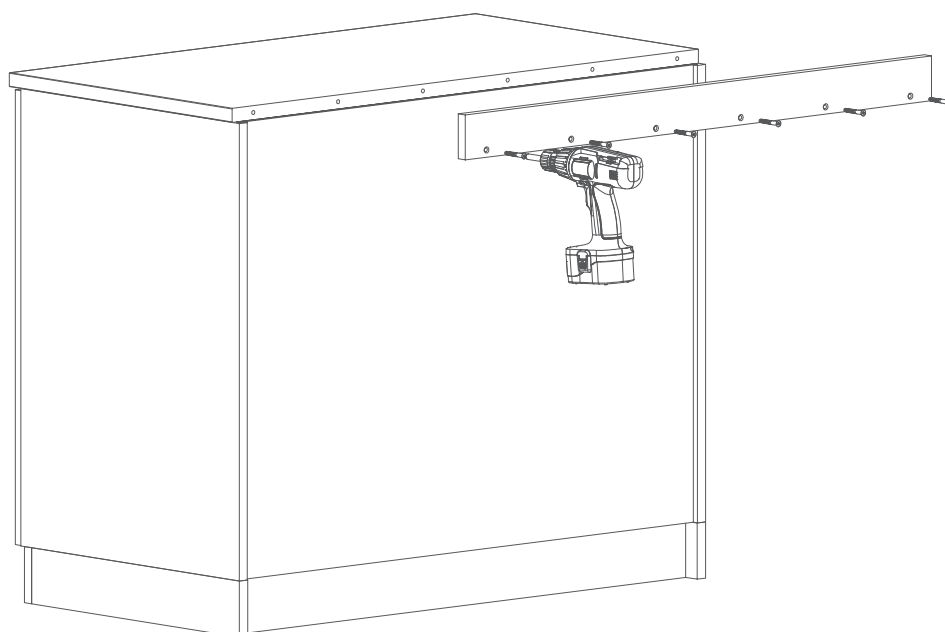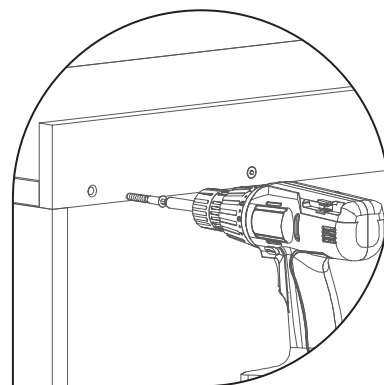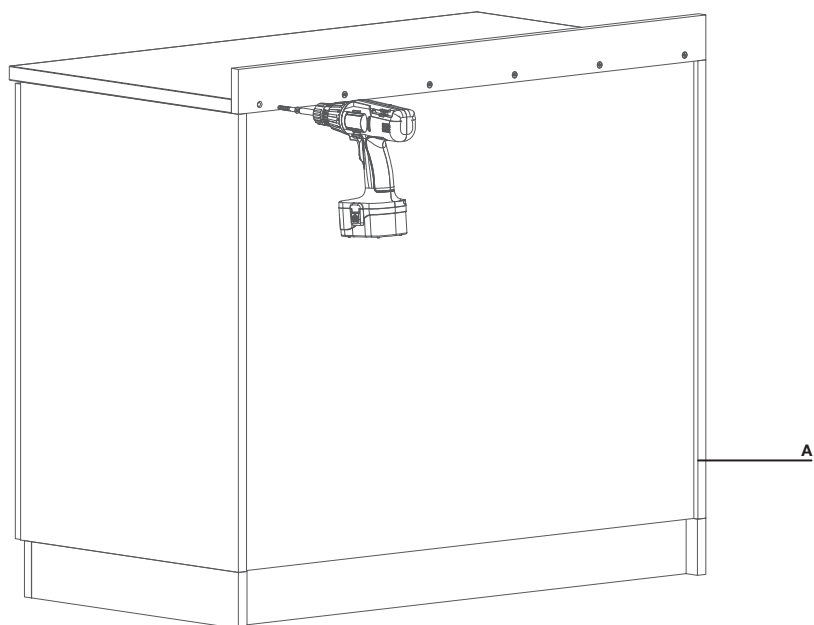   


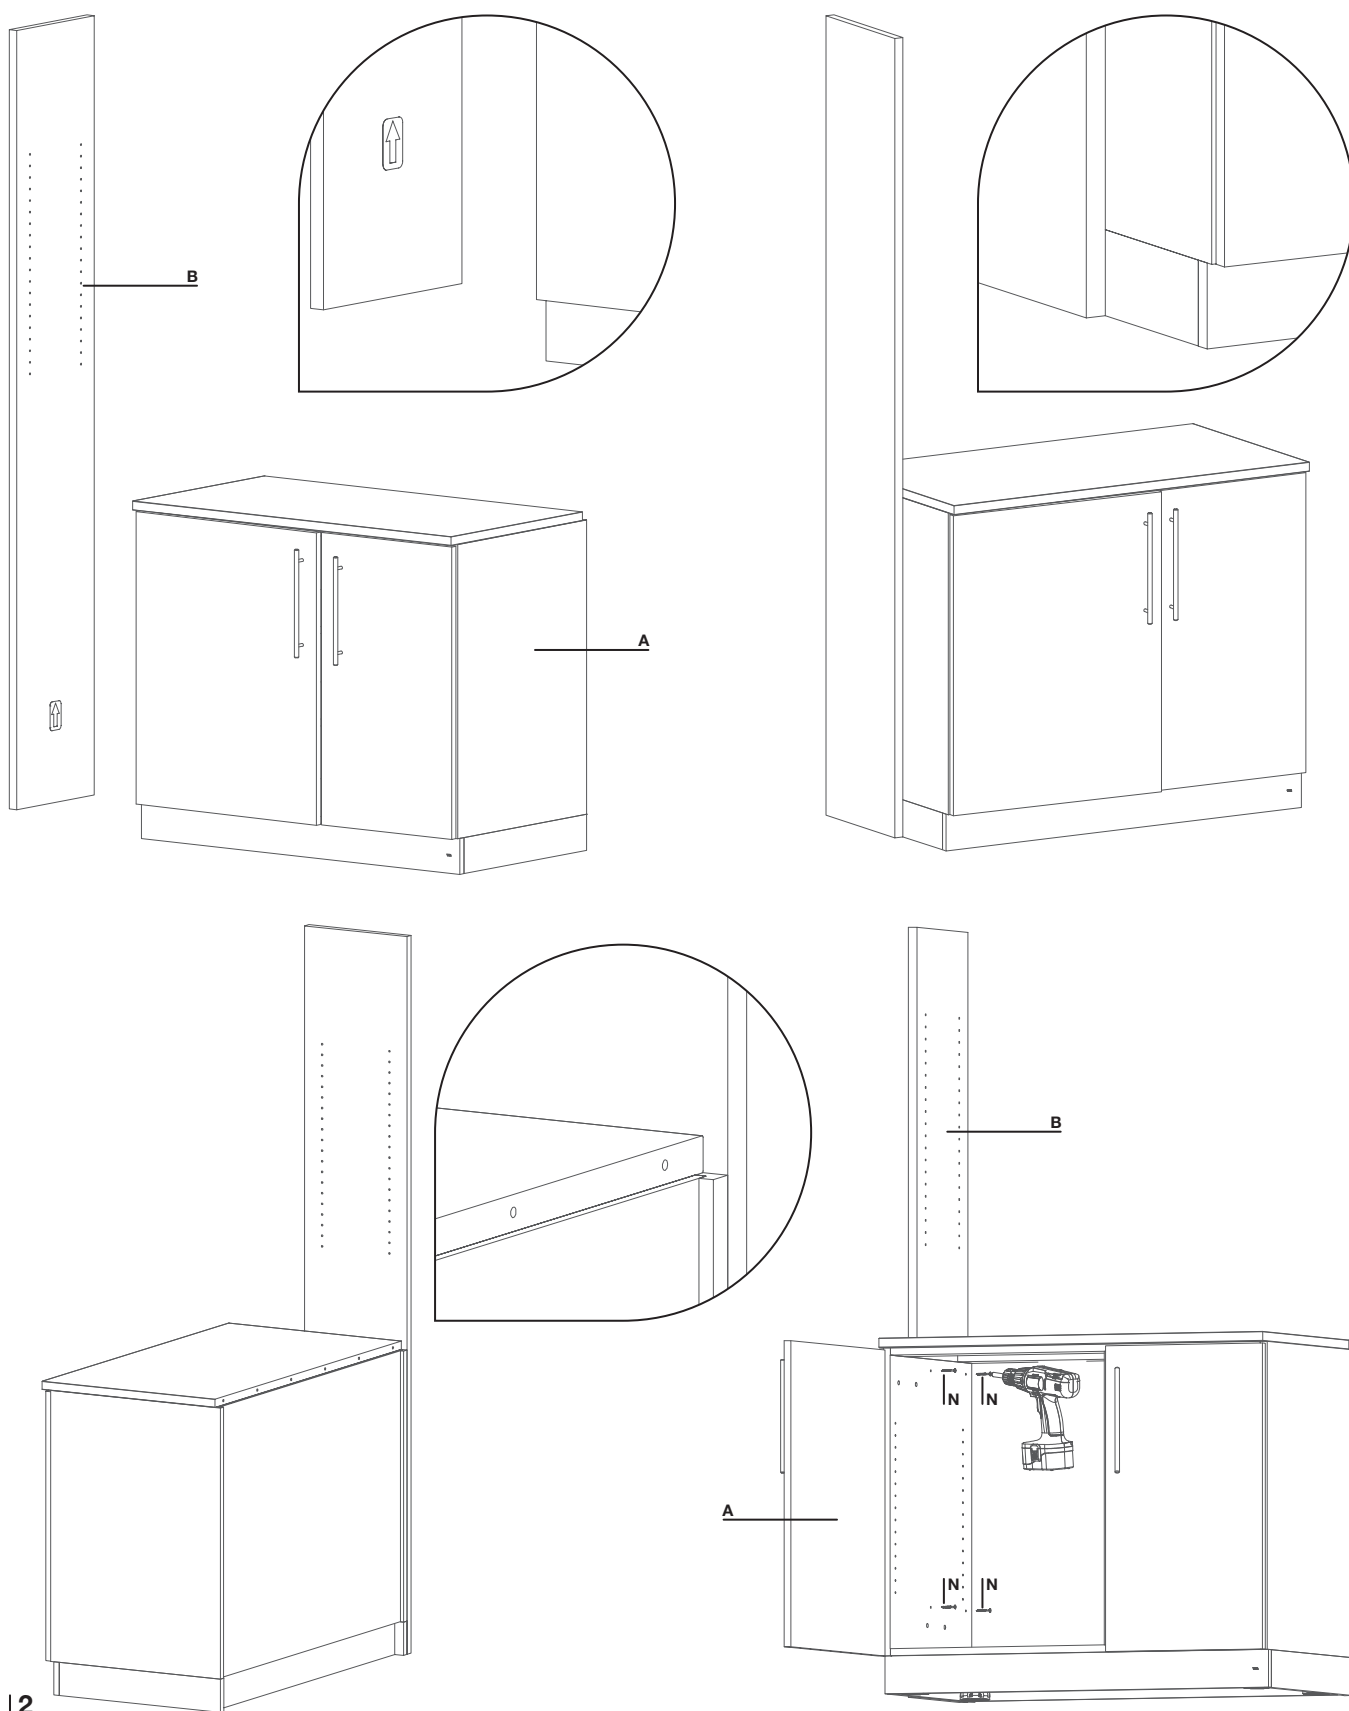 

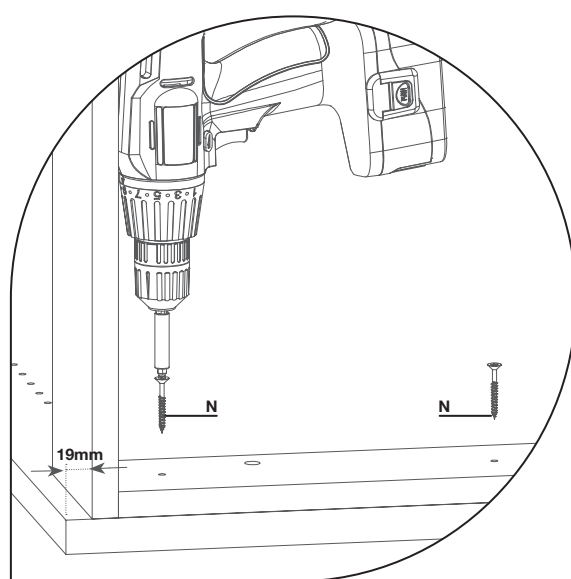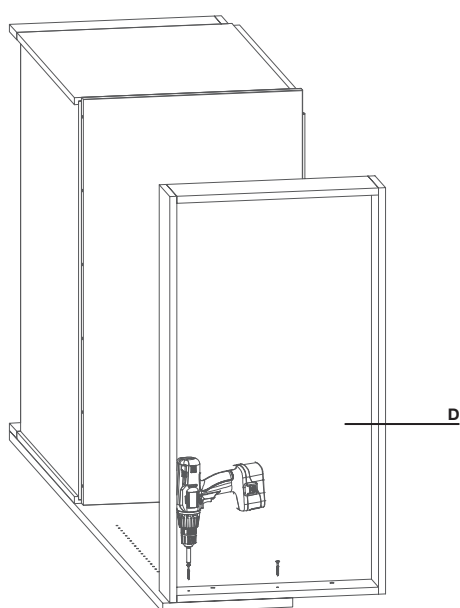  
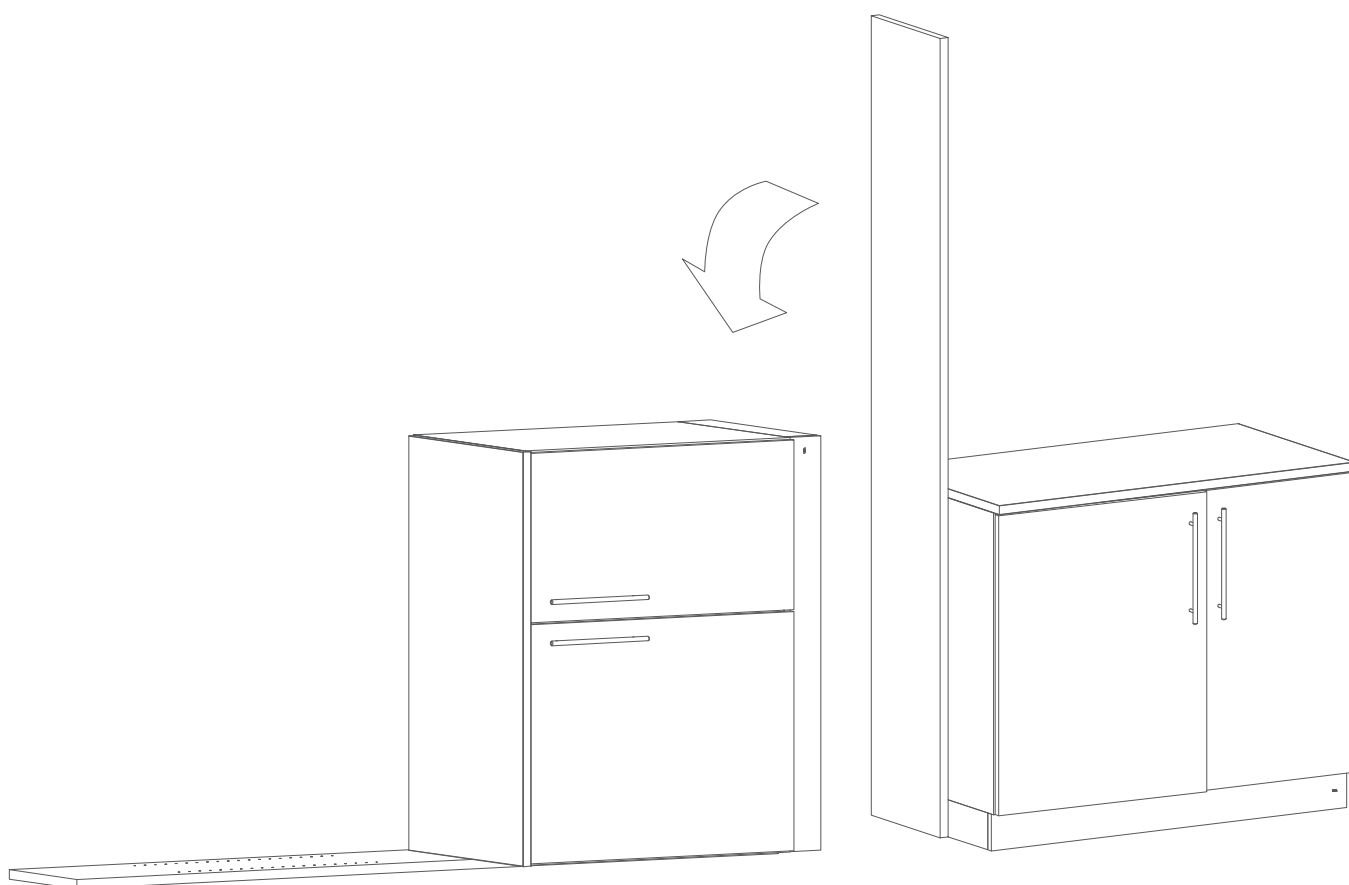 


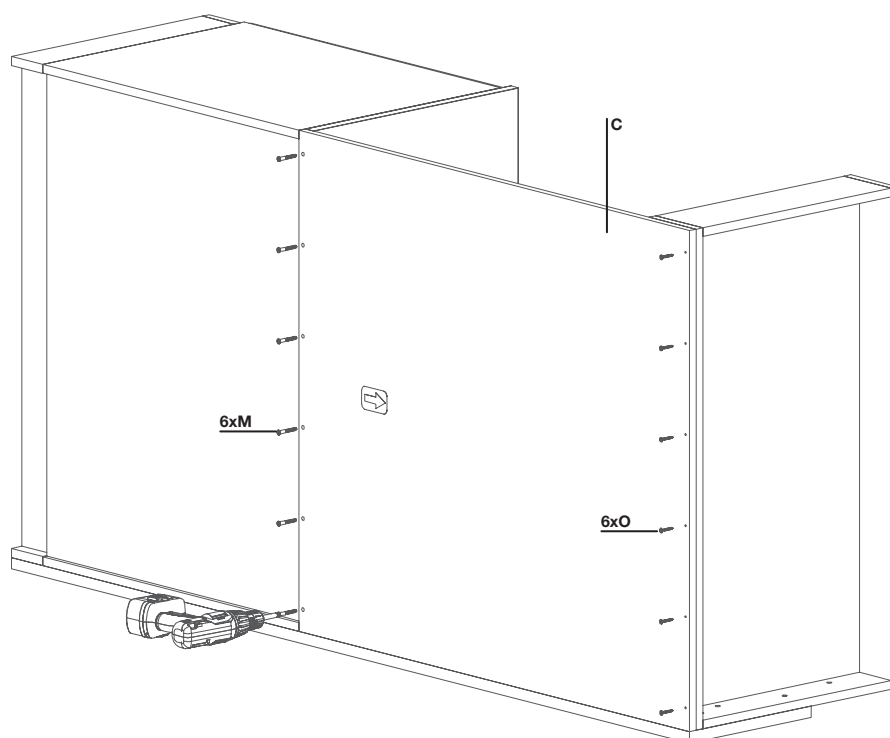 



4

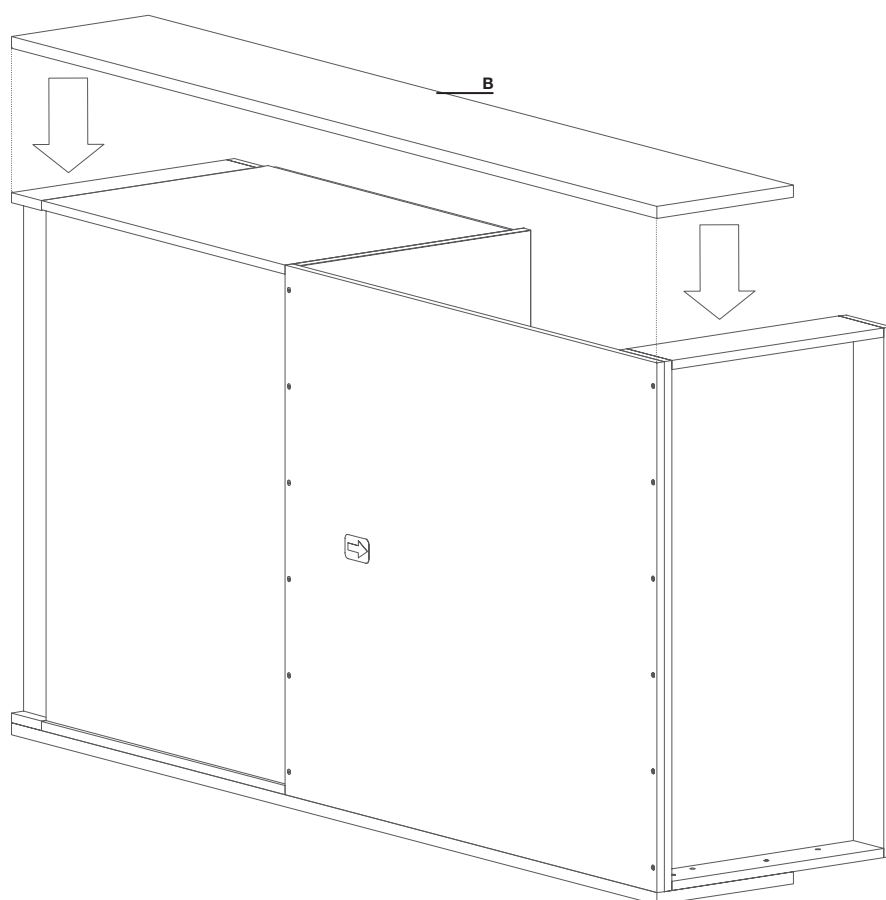 





5

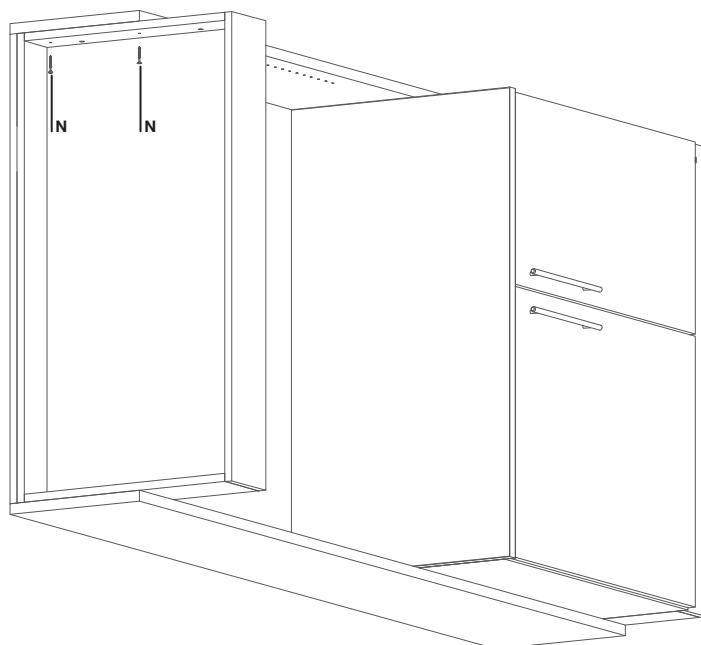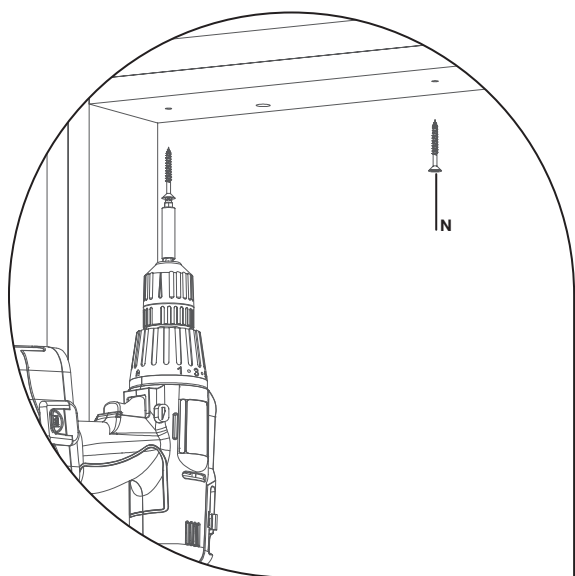  


6

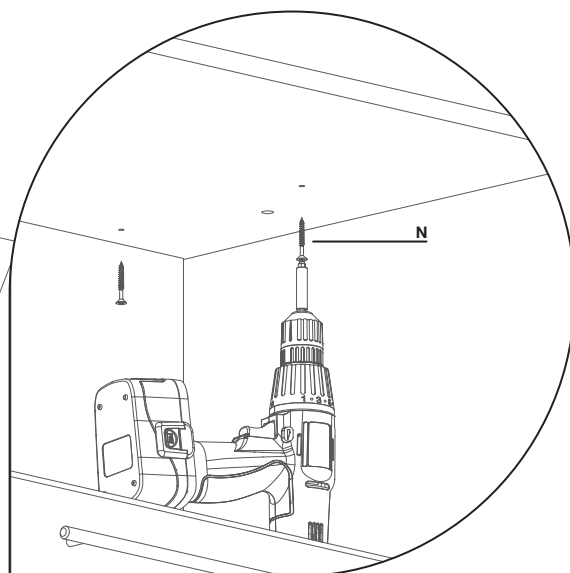 
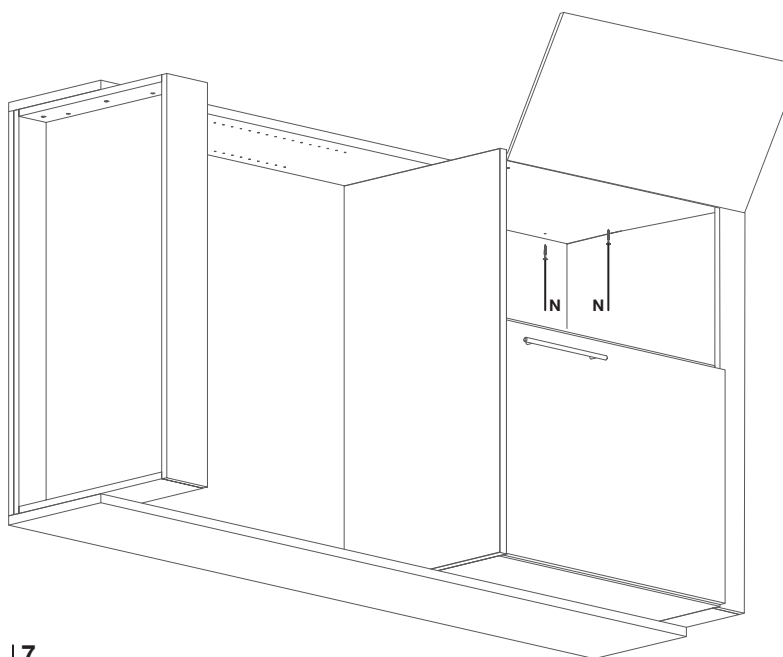 


7

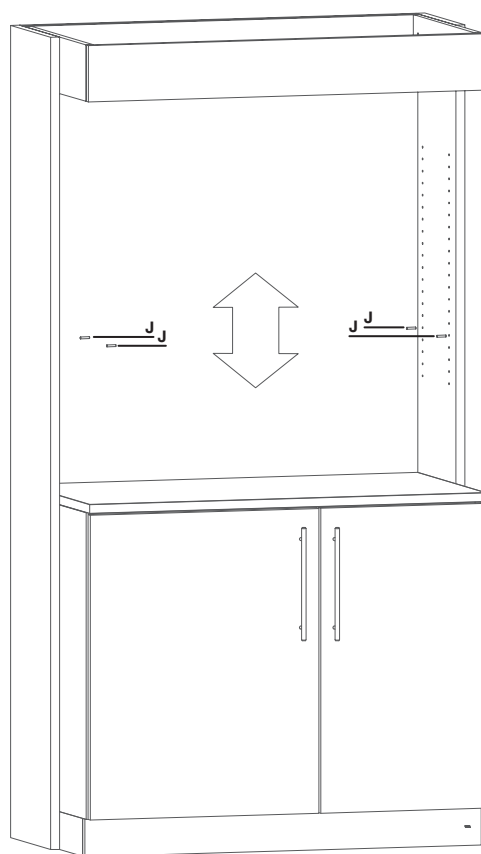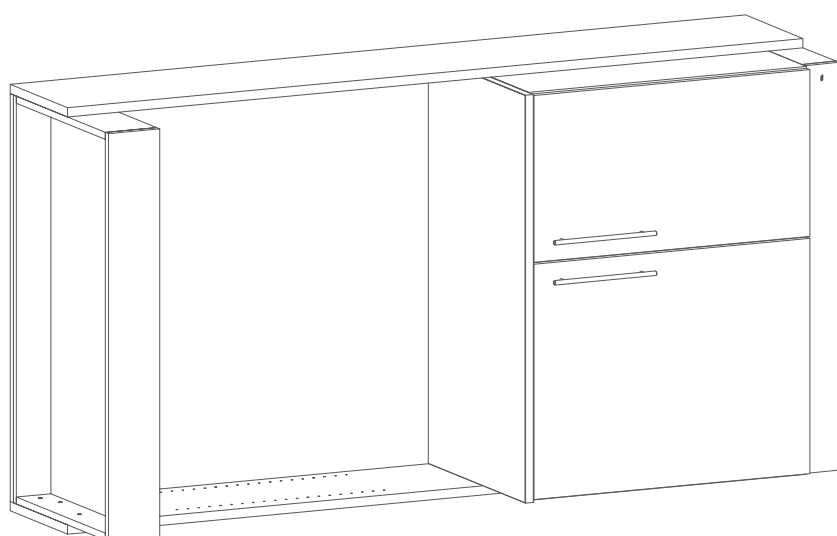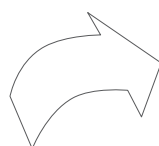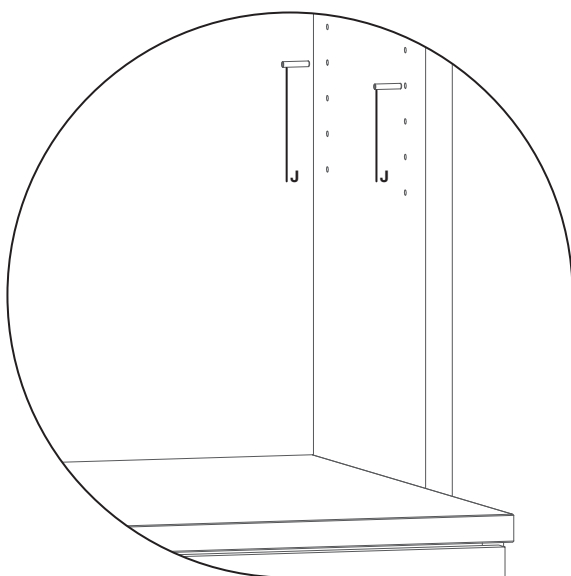    

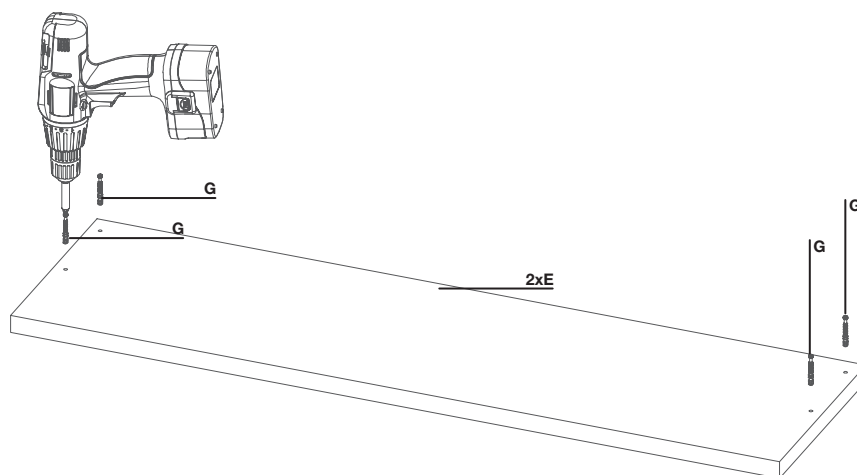 

9

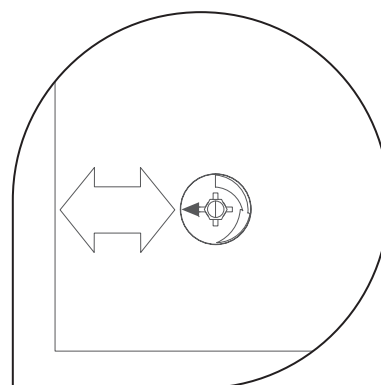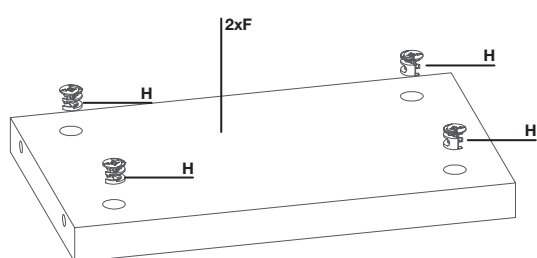  

10

