

 
MONTAGEANLEITUNG – MA0185

SERVIERSTATION BARISTO INDUSTRIAL – MIT DREHTÜREN


EN Assembly instruction Serving station Baristo Industrial – with revolving doors · FR Notice de montage Poste de service Baristo Industrial – avec portes tournantes
IT Istruzioni d'assemblaggio Stazione di servizio Baristo Industrial – con porte girevoli
ES Indicaciones de montaje Estación de servicio Baristo Industrial – con puertas giratorias
NO Monteringsanvisning Serveringsstasjon Baristo Industrial – med svingdører · DK Monteringsvejledning Serveringsstation Baristo Industrial – med svingdøre
SE Monteringsanvisning Serveringsstation Baristo Industrial – med svängdörrar · NL Montage instructies Bedienend station Baristo Industrial – met draaideuren
PT Instruções de montagem Estação de serviço Baristo Industrial – com portas giratórias
HR Upute za sastavljanje Stanica za posluživanje Baristo Industrial – s rotirajućim vratima

VEGA





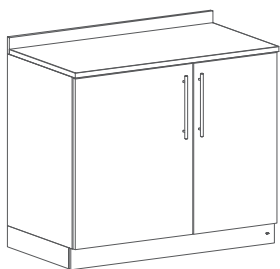


A - 1x

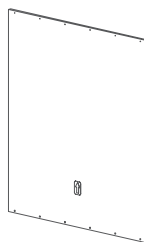 


C - 1x

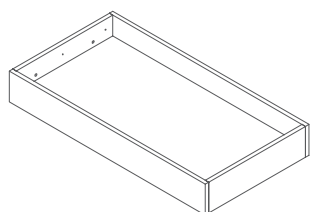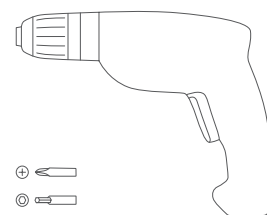  


D - 1x

 


E - 2x

 

F - 2x

 

G - 8x

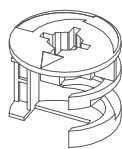 


H - 8x




I - 8x



 
5+11 mm

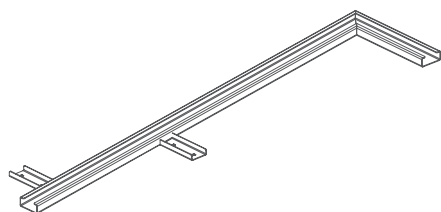


K - 1x

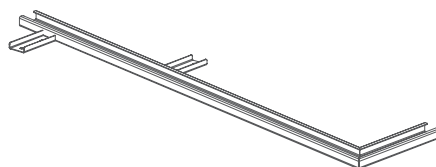 


L - 1x

 


17 mm

 


M - 6x
M7x50

 

N - 12x
M5x40

 

O - 6x
M4x35

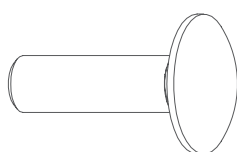 


P - 12x
M10x35








Q - 12x
M10





        R - 12x
M10





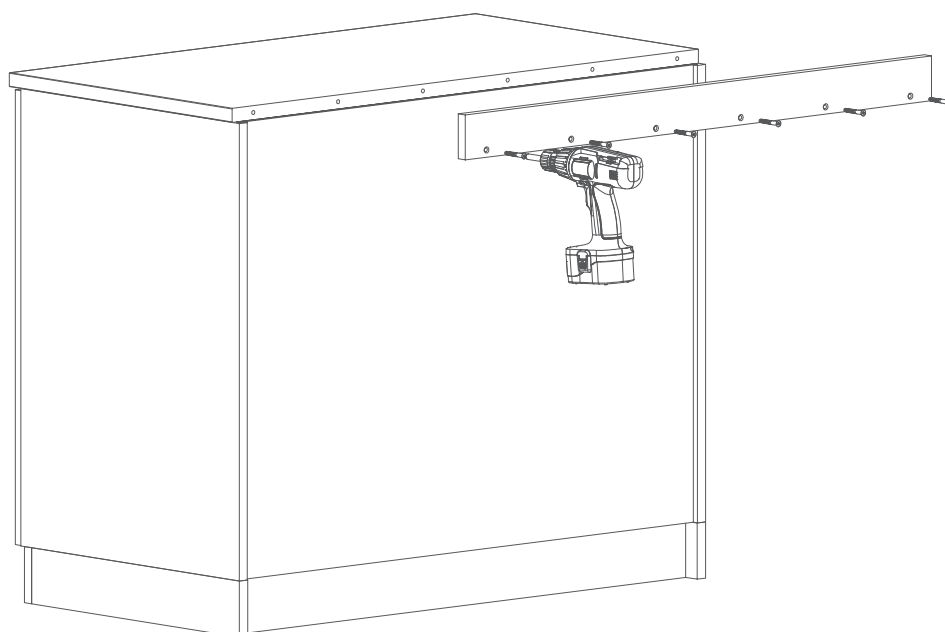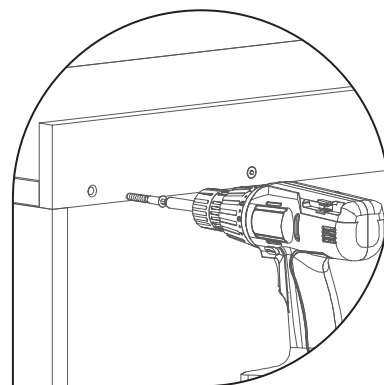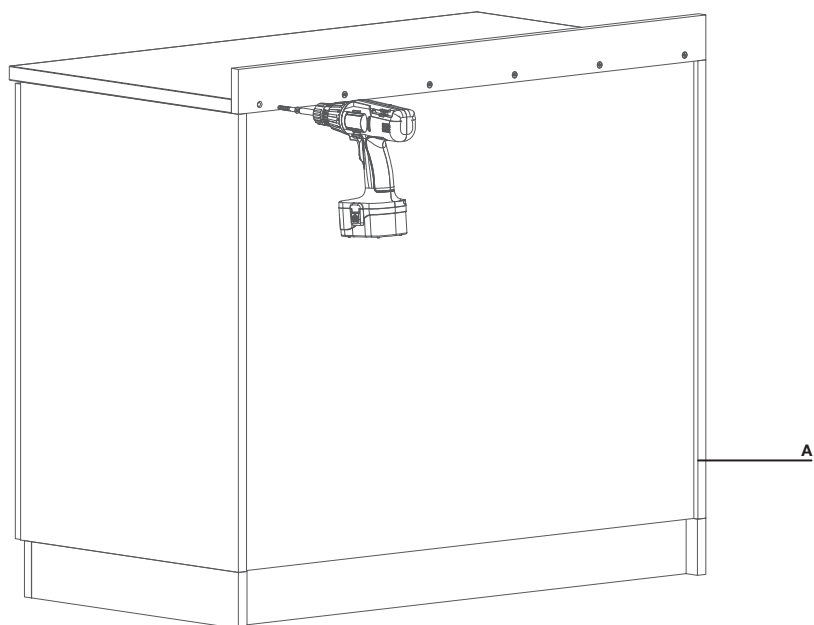

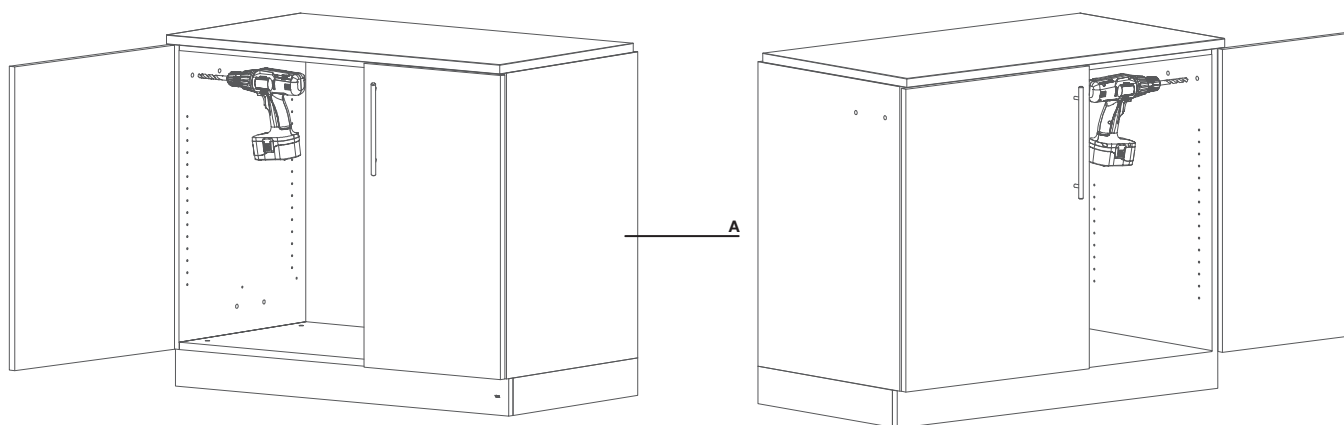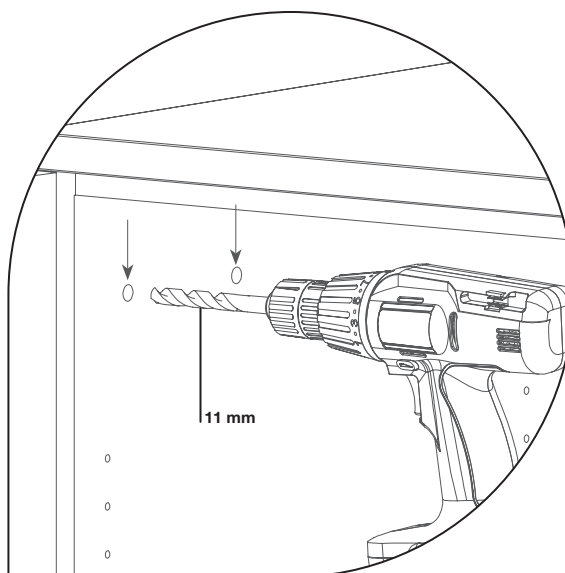


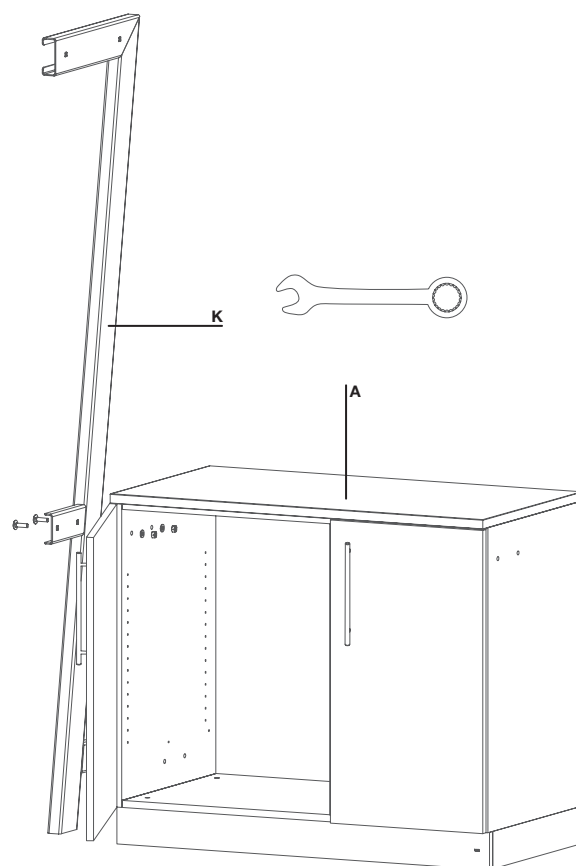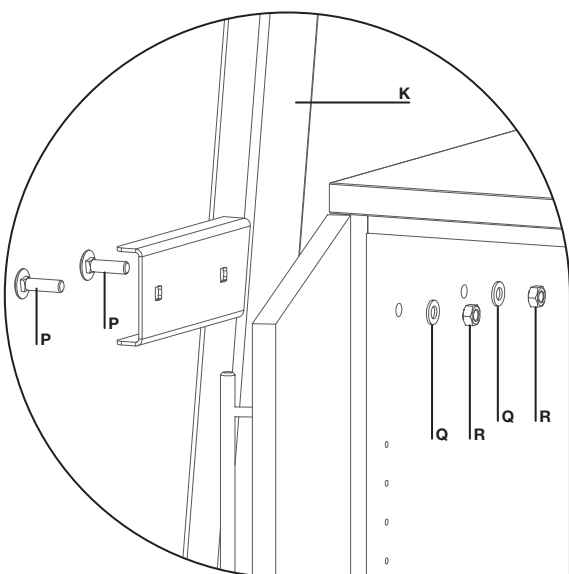


3

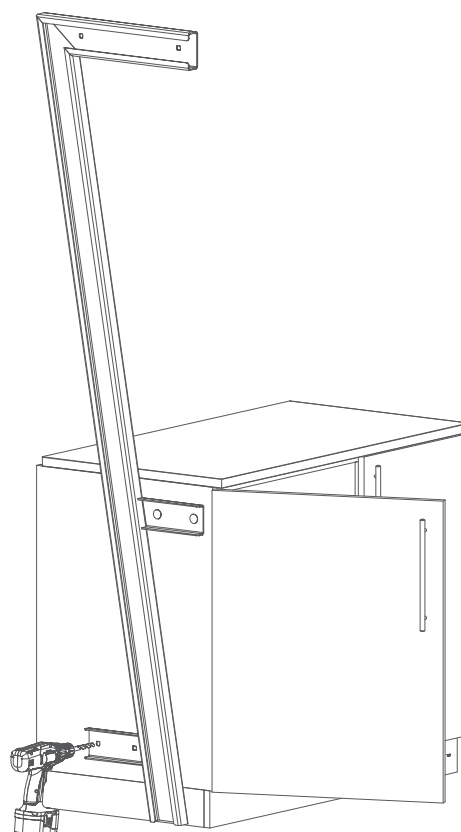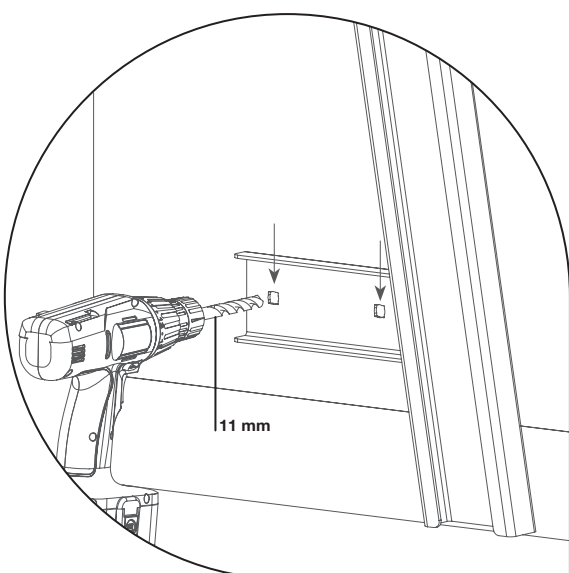  


4

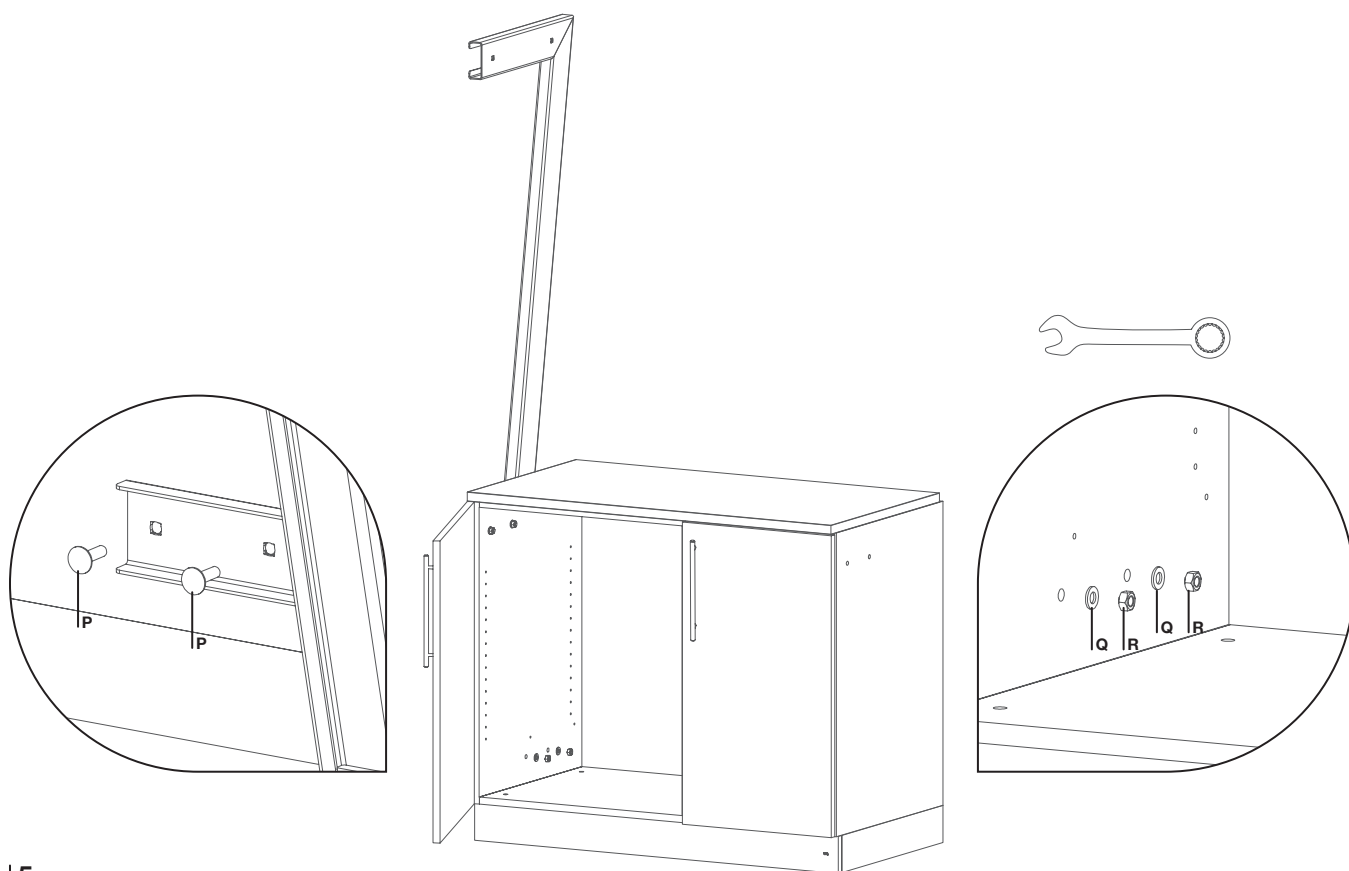 



5

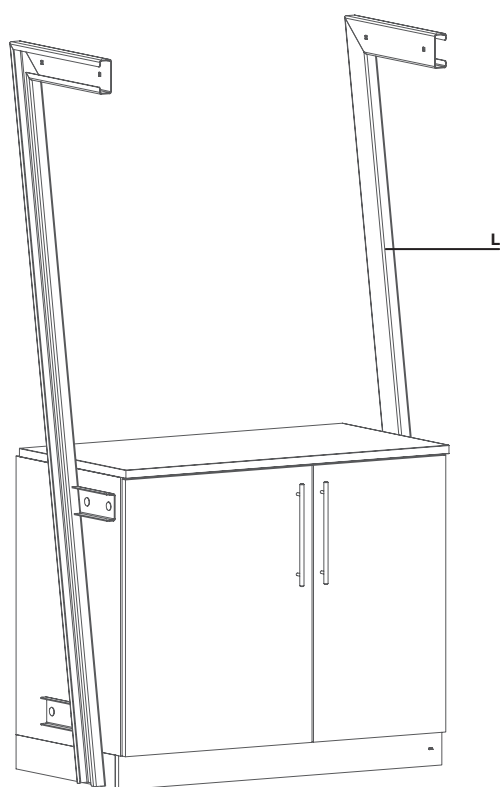 


6

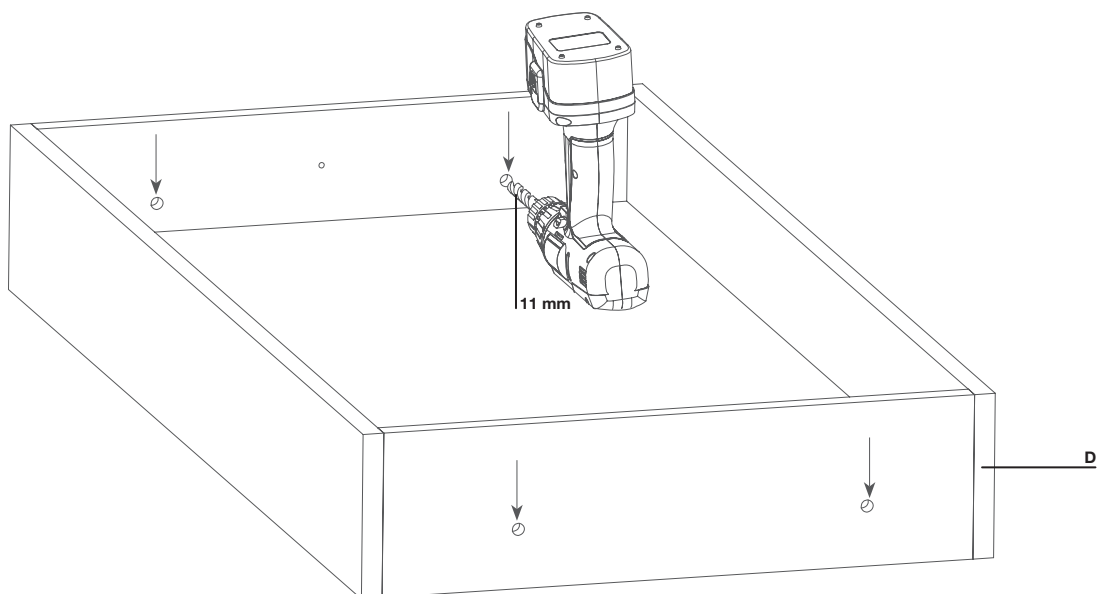 


7

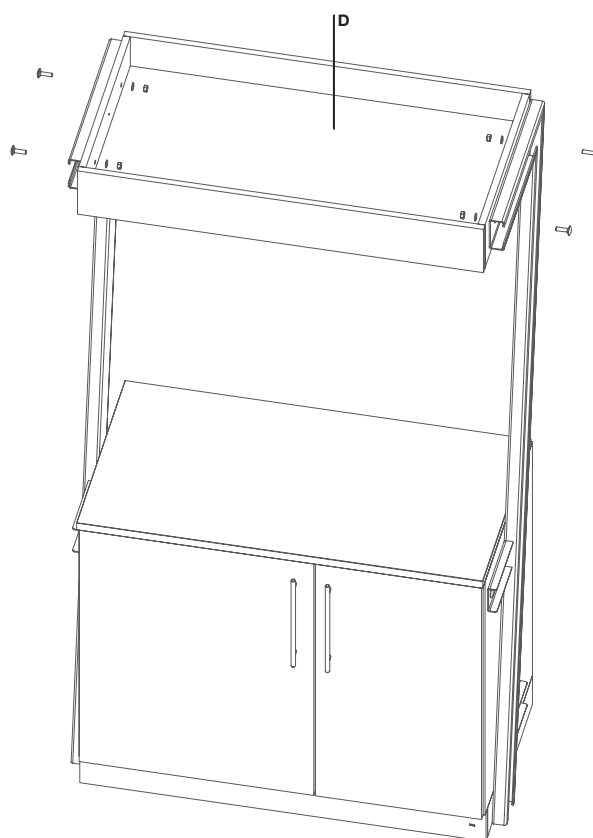 
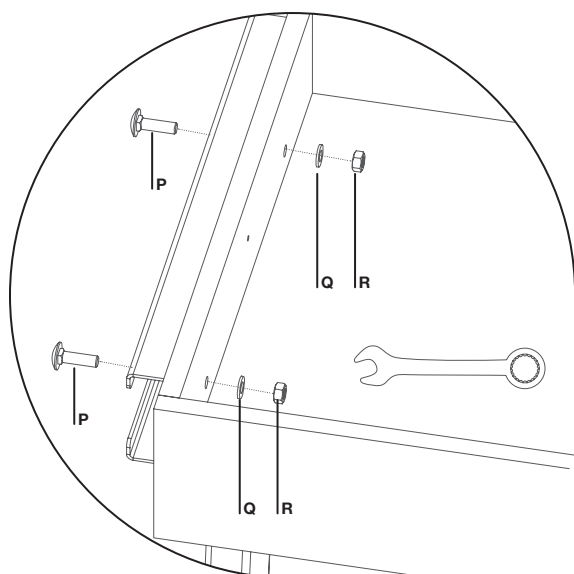 


8




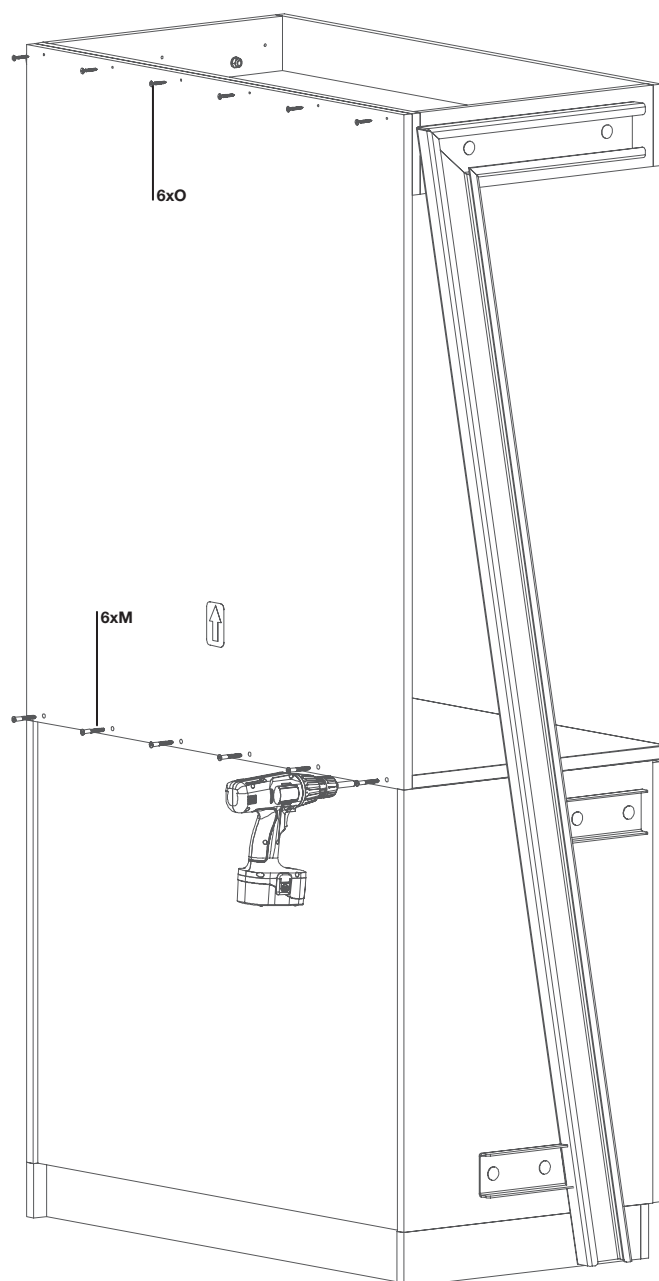 



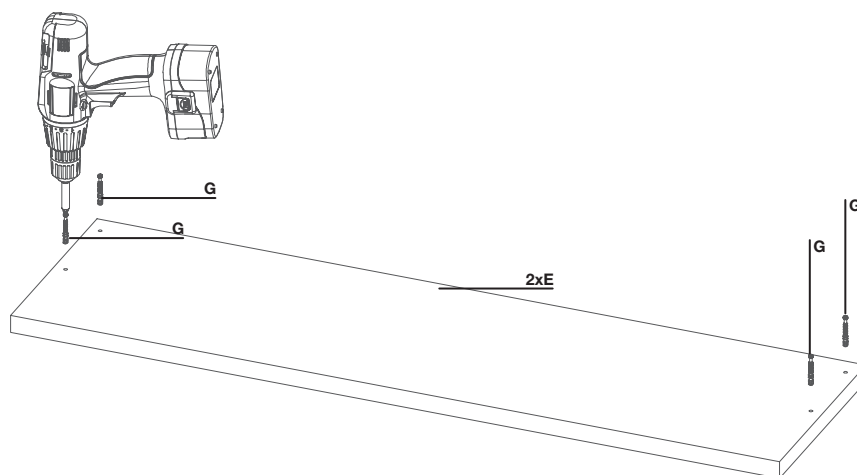 


10

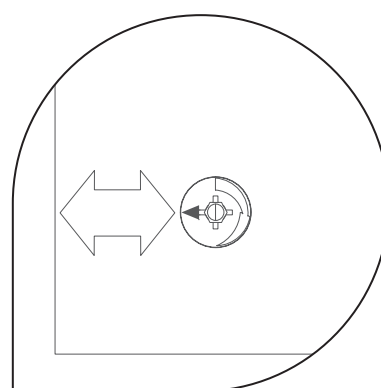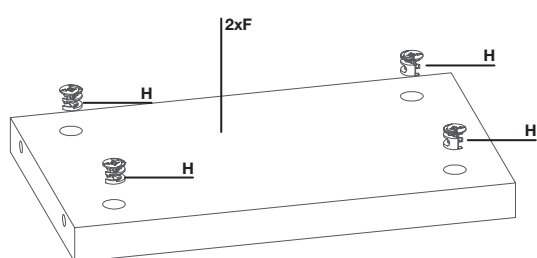  


11

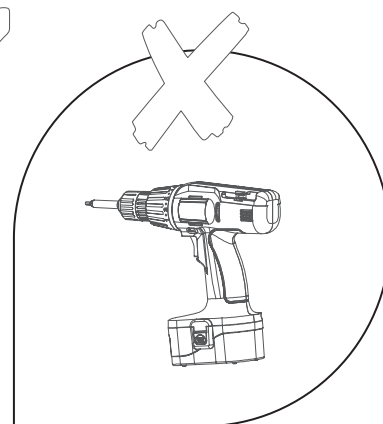 
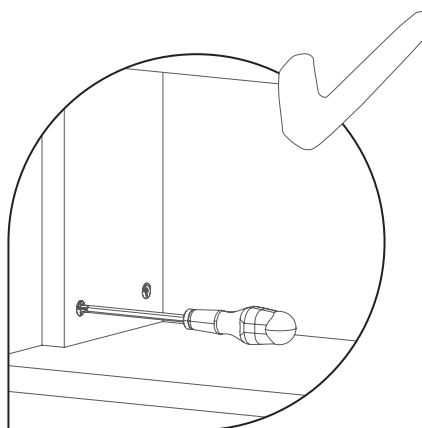 
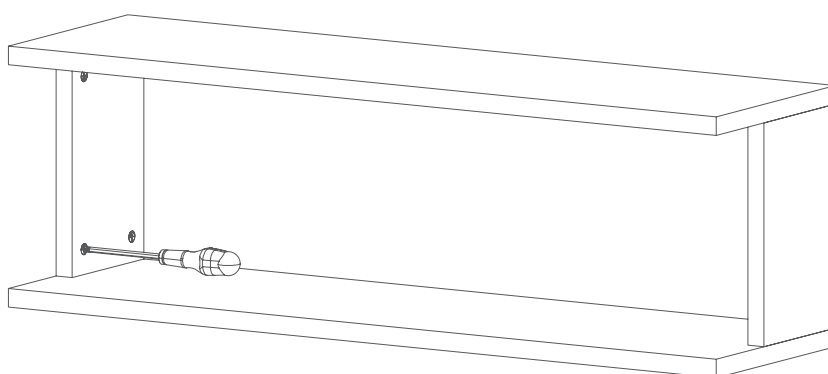 
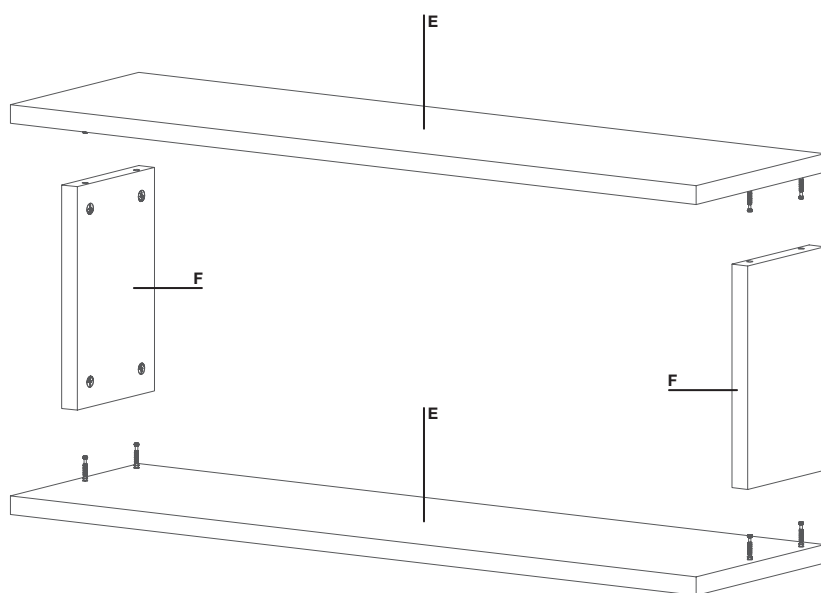 


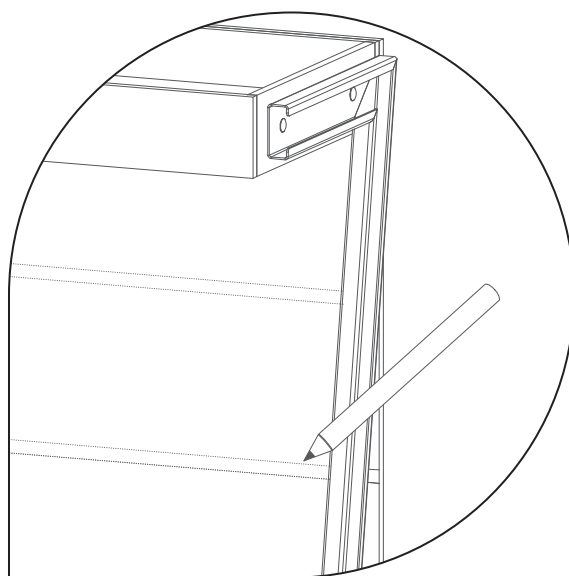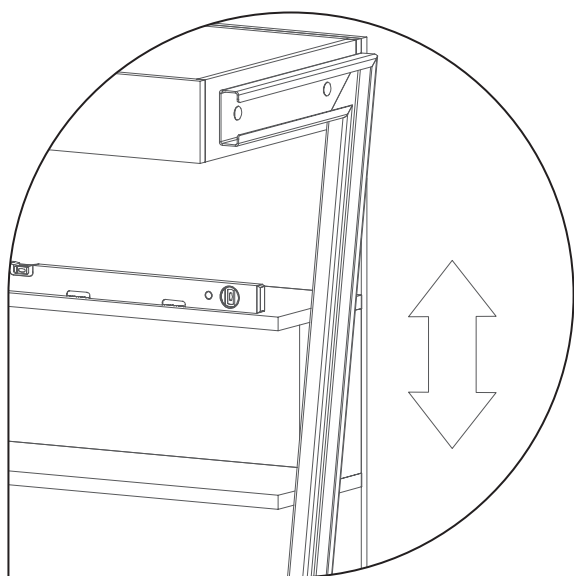  

13

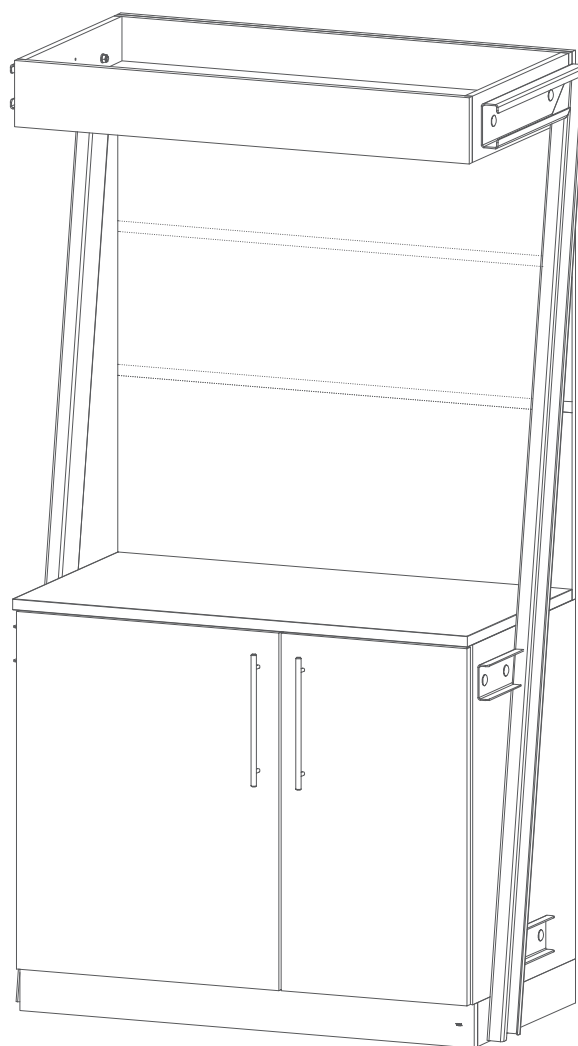 

14

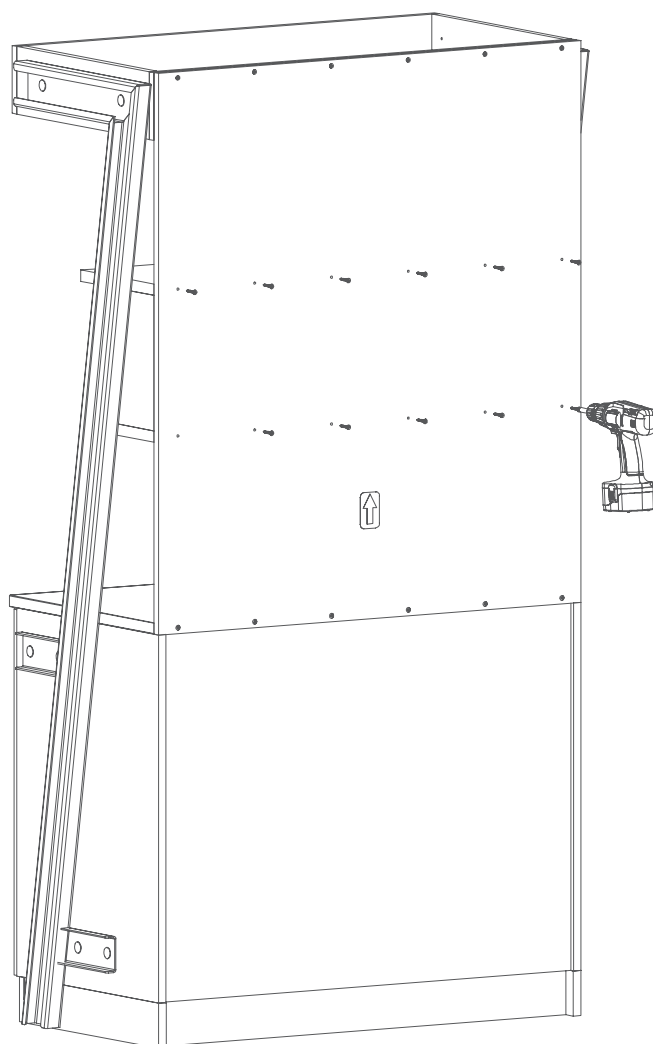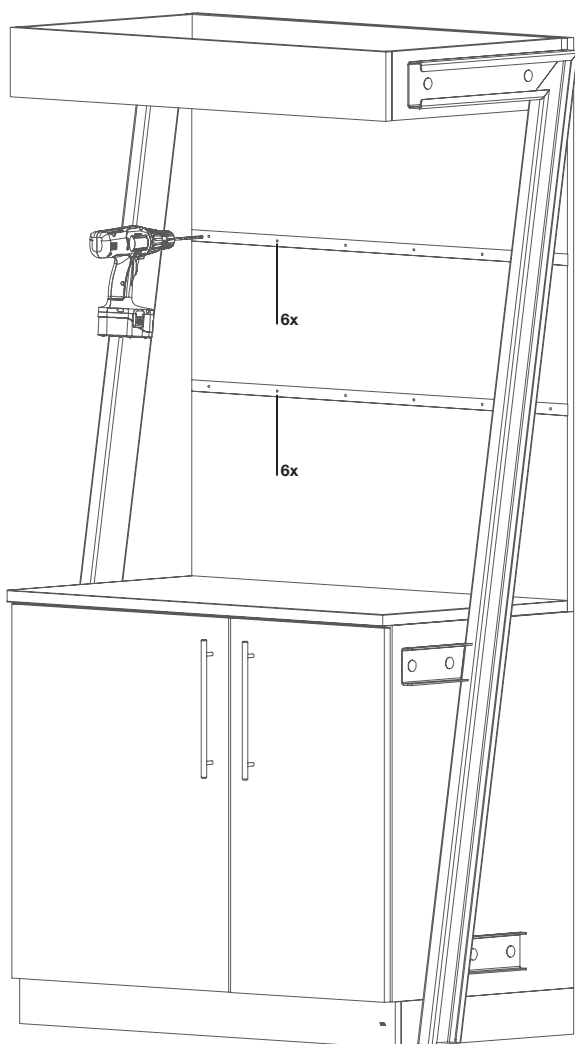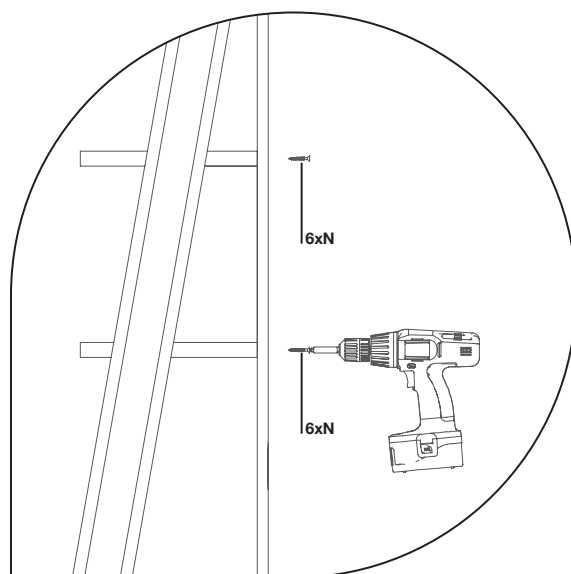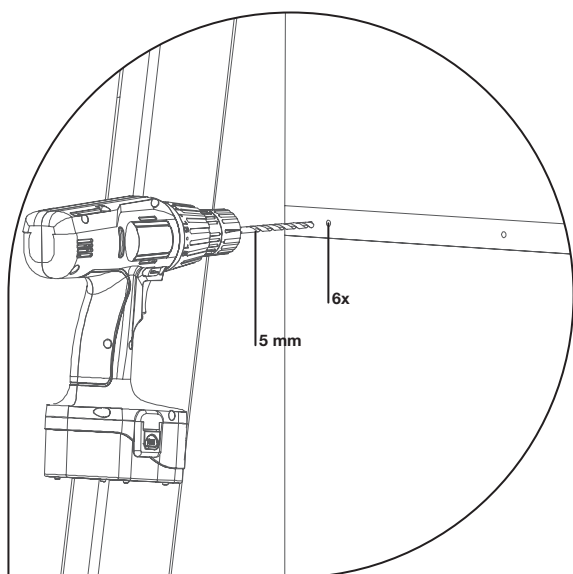    

15

16

