

Care and Use: Magma “Non-Stick” Griddles

SAFETY

- Always use oven mitts or hot pads when handling a hot griddle or removable griddle handle.

BEFORE 1ST USE

- Wash in warm water with mild dishwashing detergent, rinse thoroughly, and dry.

USE

- Stove top application; only use this product on low or medium temperature settings.
- Grill application; only use this product with grill lid open on low or medium temperature setting.
- Heat in excess of 500 °F can be harmful to the Non-Stick surface, the griddle, the grill, or the stove top.
- Damage caused by excessive heat is not covered under the warranty.
- Remove handle while griddle is in use, keep handle away from heat source.
- Use a light coating of cooking oil or cooking spray.
- Use caution while using this product on ceramic or glass stove tops, excessive movement or sliding may result in scratching of these surfaces.
- Never use a knife to cut on the griddle.
- Use only non-metallic utensils.
- Damage caused by metallic utensils or knives is not covered under the warranty.

CLEANING

- Never immerse a hot griddle in water or run water onto hot griddle.
- Never use abrasive cleansers or cleaners.
- Once griddle has cooled, wash in warm water with mild dishwashing detergent, rinse thoroughly, and dry.
- Any remaining residue may be removed with non-abrasive cleaner and a non-abrasive pad or a sponge.
- This griddle is dishwasher safe.

WARRANTY

- Magma Products, Inc. warrants this product to be free of defects in materials and/or workmanship for a period of 1 year from the date of original purchase (proof of purchase required).
- Magma Products, Inc. will not be liable for products damaged due to overheating, use of metallic utensils, result of neglect, and/or general misuse.
- Magma must inspect all products claimed to be defective.
- Magma reserves the exclusive right to repair or replace the product or product component.
- Do not return this product to the retailer.
- Contact Magma first before returning any product.
- Shipping charges are the user's responsibility.



MAGMA PRODUCTS, INC. • 3940 Pixie Ave. • Lakewood, CA 90712 • USA • Tel: (562) 627-0500
MagmaProducts.com • mail@MagmaProducts.com

88-185 0519

Care and Use: Magma “Non-Stick” Griddles

SAFETY

- Always use oven mitts or hot pads when handling a hot griddle or removable griddle handle.

BEFORE 1ST USE

- Wash in warm water with mild dishwashing detergent, rinse thoroughly, and dry.

USE

- Stove top application; only use this product on low or medium temperature settings.
- Grill application; only use this product with grill lid open on low or medium temperature setting.
- Heat in excess of 500 °F can be harmful to the Non-Stick surface, the griddle, the grill, or the stove top.
- Damage caused by excessive heat is not covered under the warranty.
- Remove handle while griddle is in use, keep handle away from heat source.
- Use a light coating of cooking oil or cooking spray.
- Use caution while using this product on ceramic or glass stove tops, excessive movement or sliding may result in scratching of these surfaces.
- Never use a knife to cut on the griddle.
- Use only non-metallic utensils.
- Damage caused by metallic utensils or knives is not covered under the warranty.

CLEANING

- Never immerse a hot griddle in water or run water onto hot griddle.
- Never use abrasive cleansers or cleaners.
- Once griddle has cooled, wash in warm water with mild dishwashing detergent, rinse thoroughly, and dry.
- Any remaining residue may be removed with non-abrasive cleaner and a non-abrasive pad or a sponge.
- This griddle is dishwasher safe.

WARRANTY

- Magma Products, Inc. warrants this product to be free of defects in materials and/or workmanship for a period of 1 year from the date of original purchase (proof of purchase required).
- Magma Products, Inc. will not be liable for products damaged due to overheating, use of metallic utensils, result of neglect, and/or general misuse.
- Magma must inspect all products claimed to be defective.
- Magma reserves the exclusive right to repair or replace the product or product component.
- Do not return this product to the retailer.
- Contact Magma first before returning any product.
- Shipping charges are the user's responsibility.



MAGMA PRODUCTS, INC. • 3940 Pixie Ave. • Lakewood, CA 90712 • USA • Tel: (562) 627-0500
MagmaProducts.com • mail@MagmaProducts.com

88-185 0519