



## Care and Use: A10-142 LED Mini Pocket Light

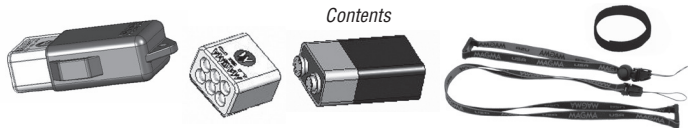

### Replacing battery

Note: Roll back black rubber piece for convenient disassembly & reassembly

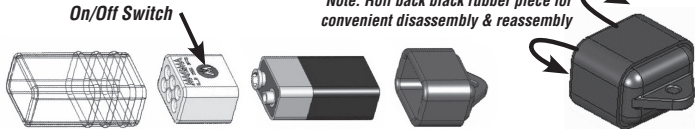

## INSTALLATION / ASSEMBLY INSTRUCTIONS

### USE:

- Turn light off when not in use
- Never leave light in direct sunlight
- Never use light without protective silicone cover

### CLEANING:

- Protective silicone cover (only); hand wash with cold water a mild dishwashing detergent and thoroughly air dry.

### WARRANTY:

- Magma Products, Inc. warrants this product to be free of defects in materials or workmanship for a period of 1 year from the date of original purchase (proof of purchase required).
- Magma will not be liable for products damaged due to being left over a hot grill or open flame, outside storage; discoloration from sun exposure, any weather related damages, general neglect, and/or misuse by the user.
- Magma must approve all product warranty claims.
- Magma reserves the exclusive right to repair and/or replace any product or component defective in material or workmanship during the warranty period.
- Warranty claims; Do Not contact or return this product to retailer. Prior to returning product contact Magma Products, Inc. directly for return authorization and instructions.
- Returning warranty claims; user is responsible for all shipping charges.

**MAGMA**  
U S A

MAGMA PRODUCTS, INC. • 3940 Pixie Ave.  
Lakewood, CA 90712 • USA • Tel: (562) 627-0500  
MagmaProducts.com • mail@MagmaProducts.com