



User Manual

Max1 Motion Activated LED Light

MAX-One-HD1a

GETTING STARTED

SIMPLY PLUG IT IN!

Simply plug it into a standard 120VAC outlet.

MODE POSITION (TOP TO BOTTOM)

Select the desired Mode for your MAX:



Position 1

Night Light Mode

Position 2

Motion Activated Light Mode

Position 3

Security Mode - Activated by
Motion Sensor

Position 4

OFF

DIMMING & RESET BUTTON



Reset Button
Dimming Button

Press and hold down to Increase
or Decrease Brightness in any Mode.

Reset: If Alarm has been sounded,
press button once to reset.

USB POWER OUTPUT - STANDARD USB

USB Port can be used to charge
device requiring 2.1 AMPs. Simply
plug in your standard USB cable to
the standard USB port on the bottom
of the MAX.



FLASHLIGHT / AREA LIGHT SELECTION

To use Flashlight Mode, unplug unit from AC power and place in any mode position except for OFF.

Press Dimmer /Reset Button to toggle between front light and flashlight.

CHARGING THE MAX WITH MICRO USB

You can charge the MAX with the Micro USB port on the back of the MAX below the AC Plug. You can charge from a Standard USB port from a computer or a USB wall adapter.



FEATURES

LIGHTING:

- Night Light
- Area Light
- Emergency Light
- Flashlight
- Motion Activated Light

SAFETY:

- Fire Alarm and Carbon Monoxide Alarm Activated Evacuation Light.
- Fire Alarm and Carbon Monoxide Alarm enhanced frequency for hearing impaired.
- Fire and Carbon Monoxide Alert Strobe Light

POWER:

- USB Wall Charger
- Portable USB Charger
- Emergency Power Supply for Smart Devices
- Rechargeable Battery

RADIATION EXPOSURE STATEMENT

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the unit and your body.

Invented by people who care about saving lives.

Quality Designed in the United States

Perfectly assembled in China

US and International Patents Pending

CAUTION

Risk of Electric Shock and Fire Hazard. For adult use only. This is not a toy and is not intended for use by children. For safe use, plug only into exposed wall outlet where the device is ventilated and cannot contact bed covering or other material. Do not use with extension cords. Designed for indoor use only. This product is not a Smoke Detector or a Carbon Monoxide Detector. You should make sure you have Smoke Detectors and Carbon Monoxide Detectors in all rooms of your home. Recommendations for placement can be found at the National Fire Protection Association at www.nfpa.org. This product is not intended to replace standard fire protection, carbon monoxide protection, or security protection equipment or services.

LIMITED ONE YEAR WARRANTY

MAX Smart Home warrants this product to be free of defects in workmanship and/or materials for one year from the date of purchase. If such defect should arise during the one year period, MAX Smart Home will, at its option, either repair or replace the product without charge. This warranty does not cover damage caused by lightning, accident, misuse, or alterations to the product.

WARRANTY REPLACEMENT PROCEDURES

1. Go to www.maxsmarthome.com/returns or Call 1-855-999-8139 (Toll Free) to get a Return Authorization Number (RA#) and shipping instructions.
2. Return the MAX Smart Home product, freight prepaid to address provided in shipping instructions. Product returned must have an RA# included.
3. The original purchaser will be asked to send the product, a copy of the sales receipt for the product, your name, address, phone number and a description of the problem.

MAX Smart Home is a trademark of MAX Smart Home LLC

www.maxsmarthome.com

