

Jumph Slate 5k-L™ User Manual

Specifications


Model: Jumph Slate 5K-L
 Battery Cell: Lithium-ion Polymer
 Power Capacity: 5100mAh(18.87Wh)
 Recharging Cycle: 500 cycles
 USB Output: 5V/2.4A(total)
 Lightning USB Output: 5V/2.4A(total)
 Input: 5V/0.5~2.0A(self-adapt)
 Weight: 0.441lb(200g)
 Dimension: 6.69 x 3.74 x 0.3 inch(170.0x95.0x7.5mm)
 Remaining battery capacity while Jumph Slate 5K-L not in use
 Battery capacity while Jumph Slate 5K-L in charge

How to Charge

Charge the Jumph Slate 5K-L with a micro USB cable from any associated power source. During charging the LED Battery Indicator will flash. Once charged, four solid LED lights will indicate the Jumph Slate 5K-L is fully charged.

To charge your electronic devices:

- Using the included USB cable simply connect the cable to the USB interface on the Jumph Slate 5K-L then connect the cable to the desired device; once connected press the power button to begin charging.
- Connecting the built-in lightning cable to the desired device; once connected press the power button to begin charging.

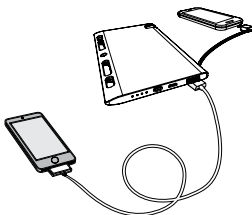

(If the Jumph Slate 5K-L doesn't begin charging your device immediately, please make sure the Slate is charged before reconnecting)

Battery Status Indication


The Indicator status while being charged

- Indicator is on
- Indicator is off

Battery Status Indicator	Battery Level
※○○○	0%~25%
●※○○	25%~50%
●●※○	50%~75%
●●●※	Over 75%
●●●●	100%

※Indicator is blinking

Battery Status Indicator	Battery Level
※○○○(blinking every second)	0%~3%
※○○○(blinking every 5 seconds)	3%~25%
※※○○	25%~50%
※※※○	50%~75%
※※※※	75%~100%

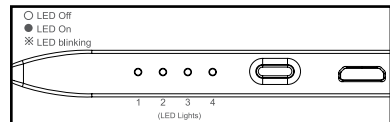

Remaining battery capacity while Jumph Slate 5K-L not in use

Battery capacity while Jumph Slate 5K-L in charge

**Other EnerPlex Gear: see the latest at
www.goenerplex.com**

Warranty:

1 year limited Warranty

Please refer to goenerplex.com for more information