


Fahrenheit®

The Choice of Professionals



FILE #E37116

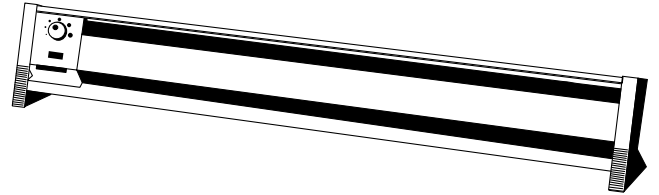

PORTABLE ELECTRIC BASEBOARD HEATER

MODEL NO.	VOLTS	WATTS	AMPS	BTU/HR
FBE1200	120V	1200	10.0	4096
FBE15002	120V	1500/1000	12.5/8.3	5120/3413
FBE1500	120V	1500	12.5	5120

OWNER'S MANUAL

Dear Owner,

Congratulations! Thank you for purchasing this new heater manufactured by a division of Marley Engineered Products. You have made a wise investment selecting the highest quality product in the heating industry. Please carefully read and follow the installation and maintenance directions shown in this manual. You should enjoy years of efficient heating comfort with this product from Marley Engineered Products... the industry's leader in design, manufacturing, quality and service.

*... The Employees of
Marley Engineered Products*



WARNING



Read Carefully - This instruction sheet contains vital information for the installation, use and efficient operation of the heater. Carefully read the manual before installation, operation, or cleaning of the heater. Failure to adhere to the instructions could result in fire, electric shock, death, serious personal injury or property damage. Save these instructions and review frequently for continuing safe operation and instructing future users.


- Do Not** operate heater without both support leg extensions properly installed. (See Fig. 1) Do not allow heater to operate in any position except as shown in this manual.
- When moving heater always use (2) handles, one at each end of heater. **Never** pick up heater in center.
- This heater is to be used on the floor only. Do not use on shelf, table, bed, or any location except the floor.
- This heater is a major electrical appliance and requires adequate electrical power for safe use. The outlet to which the heater is connected must be a 120 volt, AC circuit protected by a 15 or 20 amp fuse or circuit breaker in accordance with the National and Local Electric Codes. No other major electrical appliance can be operated on the same circuit as the heater.
- To prevent electric shock match wide blade of plug to wide

slot in outlet and insert fully.

- Plug heater power cord directly into the electrical outlet. **Never** use an extension cord with this heater.
- Heater surfaces may reach high temperatures during use. Keep all electrical cords, drapes, bedding materials and other furnishings away from heater. **Never** place anything on top of heater. It is recommended that a space of at least twelve (12) inches be maintained around heater.
- Do Not** store or use gasoline or other flammable vapors of liquids in the vicinity of this heater.
- Do Not** use this heater near water (as in a wet basement or near swimming pools) or in a very humid environment.
- When heater is not to be used for an extended time, turn off heater by rotating thermostat knob to "OFF" position and unplug heater. Wrap power cord to prevent damage and move heater to safe place for storage.
- Keep this heater clean. **Do not** allow dirt or dust to accumulate around element fins or the outlet grille area. See Cleaning Instructions section of this manual.
- If this heater or its power cord becomes damaged or malfunctions in any way, unplug heater, discontinue use and have unit repaired by a reputable repair service.

Heater Assembly

1. After removing the heater from its carton, carefully inspect it for possible shipping damage. Return damaged units to point of purchase.
2. Remove plastic support leg extensions from packaging. Line up the slots and slide extension into end panels as shown. (See Figure 1).

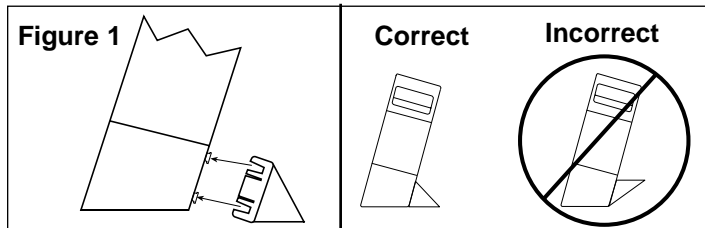

Heater Operations

1. The FBE1200, FBE1500 and FBE 15002 are provided with a POSITIVE OFF thermostat. In addition to the thermostat, the FBE15002 has a LO/HI heat selection switch.
2. Operation is as simple as A-B-C:
 - a. Plug heater power supply into 120 volt outlet (see warnings 1, 3, 4, 5 & 6).
 - b. For model FBE15002, move heat selection switch to the left position for LO (1000 watts) or to the right for HI (1500 watts).
 - c. Rotate the thermostat knob clockwise until it stops.

NOTE: You may notice a new smell coming from your heater during initial use. It should go away within the first few hours of operation.

3. Allow the heater to operate normally until the room temperature is comfortable to you. Then simply rotate the thermostat knob counterclockwise until the thermostat clicks. The thermostat will then automatically turn your heater on and off to maintain the room temperature.
4. To adjust the room temperature, rotation of the thermostat knob clockwise will increase the heater output while counterclockwise will decrease the output. The symbols around the thermostat knob are for reference only and may help you in setting and adjusting the heater output for your comfort.
5. To turn heater off, rotate the thermostat knob counterclockwise until it stops. Always unplug heater when not in use.

Cleaning Instructions (See Warning No. 11)

1. From time to time, your heater will require cleaning to remove dust and dirt from the element fins and outlet air grille. Maintaining a clean heater will help the heater operate cooler and thus safer.
2. Always turn power off and unplug heater before cleaning.
3. Use vacuum cleaner with brush attachment to carefully remove all dust and dirt from element fins and outlet air grille.

NOTE: Use care not to bend fins while cleaning.

4. To clean painted heater surfaces, use damp cloth only. Do not use waxes, etc. because they sometimes discolor due to temperature.

LIMITED WARRANTY

All products manufactured by Marley Engineered Products are warranted against defects in workmanship and materials for one year from date of purchase. This warranty does not apply to damage from accident, misuse, or alteration; nor where the connected voltage is more than 5% above the name-plate voltage; not to equipment improperly installed or wired or maintained in violation of the product's installation instructions. All claims for warranty work must be accompanied by proof of the date of installation.

The customer shall be responsible for all costs incurred in the removal or reinstallation of products, including labor costs, and shipping costs incurred to return products to Marley Engineered Products Service Center. Within the limitations of this warranty, inoperative units should be returned to the nearest Marley authorized service center or the Marley Engineered Products Service Center, and we will repair or replace, at our option, at no charge to you with return freight paid by Marley. It is agreed that such repair or replacement is the exclusive remedy available from Marley Engineered Products.

THE ABOVE WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE AFORESAID EXPRESSED WARRANTIES ARE HEREBY DISCLAIMED AND EXCLUDED FROM THIS AGREEMENT. MARLEY ENGINEERED PRODUCTS SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES ARISING WITH RESPECT TO THE PRODUCT, WHETHER BASED UPON NEGLIGENCE, TORT, STRICT LIABILITY, OR CONTRACT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For the address of your nearest authorized service center, contact Marley Engineered Products in Bennettsville, SC, at 1-800-642-4328. Merchandise returned to the factory must be accompanied by a return authorization and service identification tag, both available from Marley Engineered Products. When requesting return authorization, include all catalog numbers shown on the products.

In addition to the Limited Warranty stated above covering general products, Marley Engineered Products extends this warranty on the following listed products(s), which are warranted to the original consumer from the original date of purchase for the total time period(s) indicated herein below:

Elements of FBE Series Baseboard: 2 years

**NEED TECHNICAL OR WARRANTY ASSISTANCE?
PLEASE CALL TOLL-FREE 1-800-642-HEAT.**



Marley
Engineered Products

470 Beauty Spot Rd. East
Bennettsville, SC 29512 USA