


INFINITY Base Unit

800 - 1000, Hob Base (Door, Drawer, Open Top, 5 Legs) - Fitting Guide

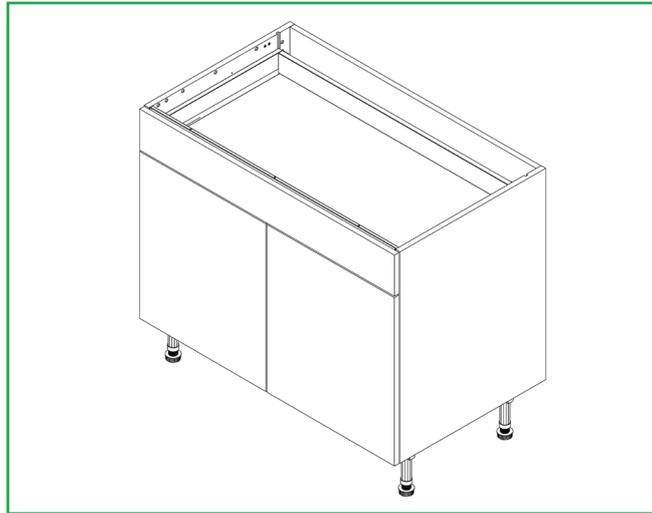

Units Parts



32x 15mm
screws



6x 30mm
screws



18x
Cover Caps



 
5x
Legs



5x
Leg Brackets



2x
Plinth Clips



2x
Space Plug



5x
Door Buffer



2x
L-Brackets



2x
Drawer Covers
Cap



4x
Shelf Pegs



1x Shelf

Tools Required



Drill



Jigsaw



Mallet



Screwdriver



Clamp



Spirit Level




Tape Measure

Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damages. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

Removing the drawer, fixtures and fittings

Remove all fixtures and fittings from the drawer and keep on a clean and level surface and grouped by product.

Before installing the unit, remove all drawers. This is done by pulling the drawer all the way out, and then pulling the front of the drawer upwards.

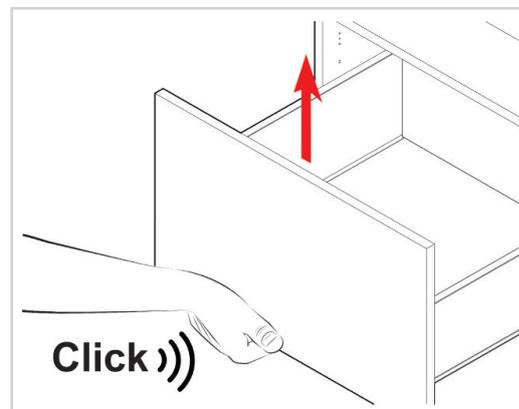


Place the drawers on top of a piece of leftover cardboard to protect them from damage.

Removing the frontal

Before installing the unit, remove the frontal by pulling the release catch.


Place the frontal in the door safe along its longest length.

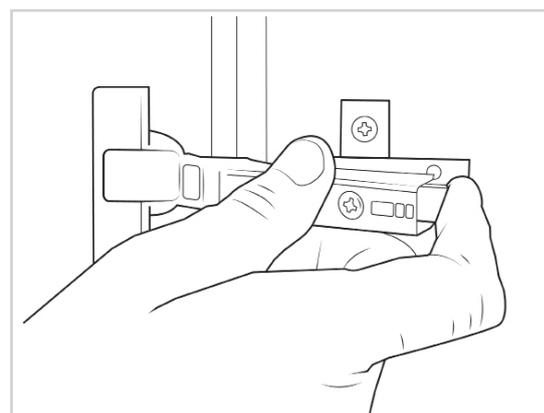

Removing the fittings



Remove all content so the unit is empty.

All fittings should be kept on a clean and level surface and the shelf placed in the door safe along its longest length.

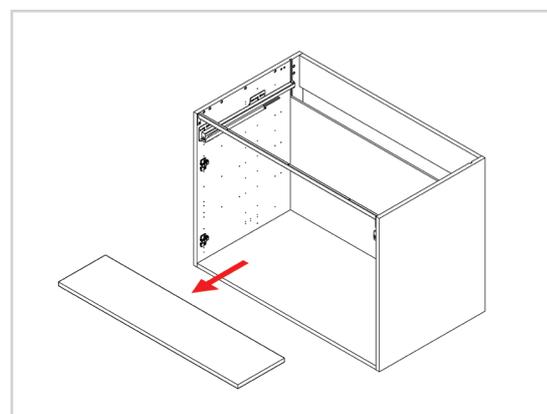


Positioning the leg brackets

Locate the leg brackets and position, as shown in the diagram. Ensure the leg brackets are rotated so the flange covers the outer edge, as this provides support for the edge of the unit.

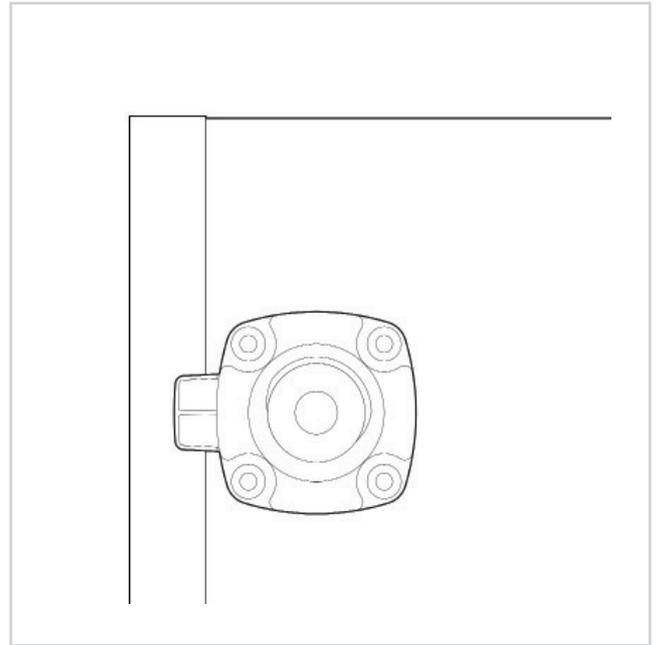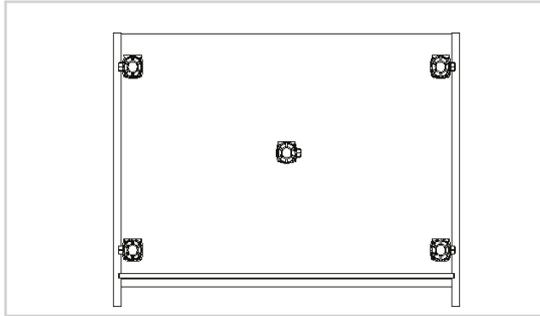

Fixing the leg bases


Secure each of the leg brackets into place with **4x15mm** screws per bracket.

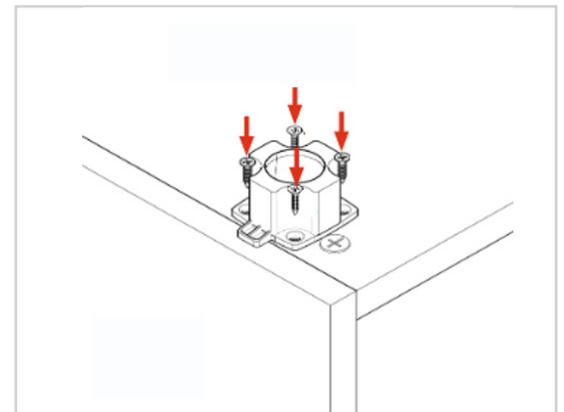

Inserting the legs


Push each leg firmly down into the leg bracket. Adjusting each leg to **155mm**.

Adjust the legs to the correct height by turning clockwise or anti-clockwise.

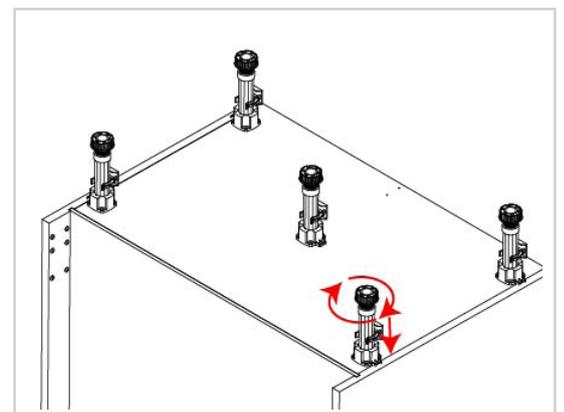

Lifting the unit into place

When lifting the unit into place do **not** tilt as this can damage the legs.

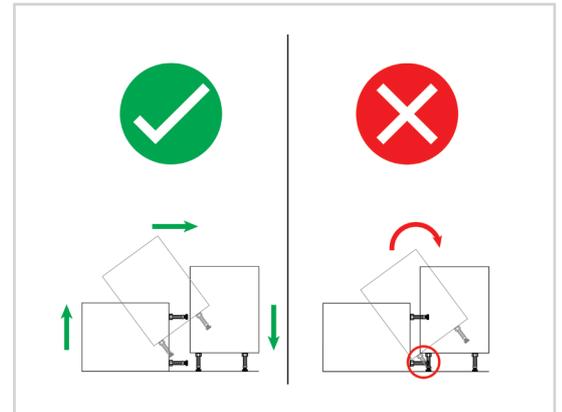


Before drilling into the wall you **MUST** check for any hidden services or pipework within the walls.

Finding the centre point

Find the centre point measurement of the rear top rail and lightly mark this position.

Transfer the measurement onto the wall at the unit markings, which were drawn at the room preparation stage.

This will be the position of the wall fixing.

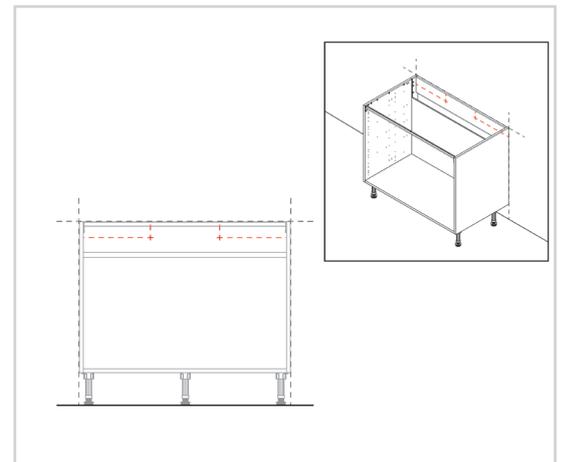


Drilling the unit and wall

Drill **2** holes through both the rear top rail and the wall at the marked locations. The size of the holes will be determined by the size of wall fixing required.

For guidance on the appropriate wall fixing for each wall type, please consult the “**Room Preparation Guide.**”


Place the wall fixing within the holes in the wall.

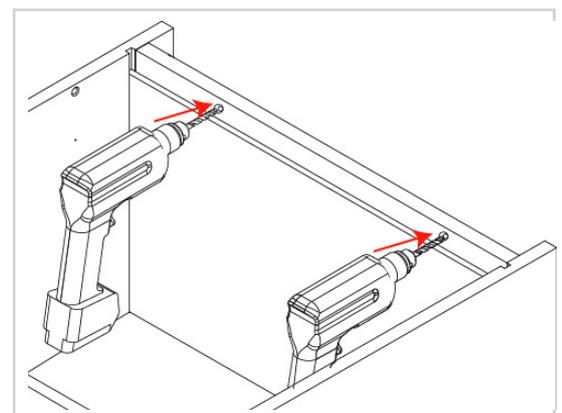

Notching out the end panels (when required)

In order to allow for any horizontal pipework running behind the unit, some units will require the back of unit's side to be notched out.

Create a notch for the horizontal pipes at the back of the end panels using a jigsaw.

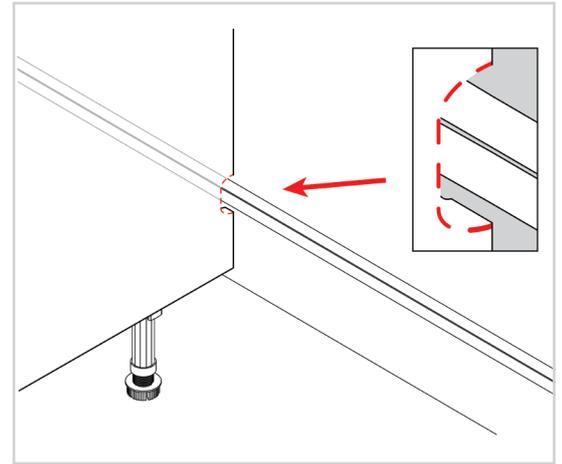


Sliding the unit into place

Slide the unit against the wall and align it with the wall markings and the services.

Use a spirit level to ensure the unit is level from front to back, left to right, and diagonally. Adjust the legs if required.


The leg height can be adjusted by turning the foot of the leg clockwise or anti-clockwise.

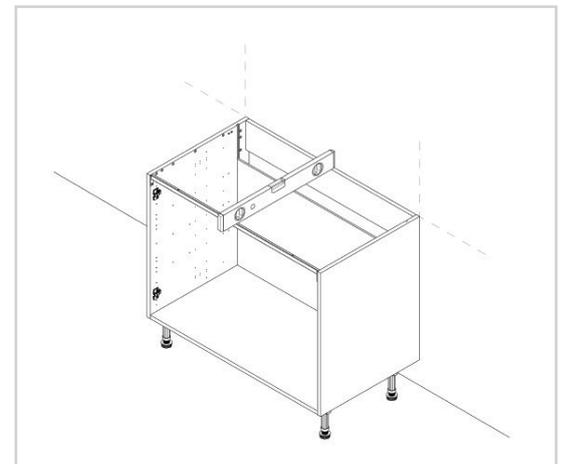

**No screws are provided for attaching the unit to the wall.
This is due to variations in wall construction.**

Inserting the screws

Insert the screws into the drilled holes and tighten to the wall.

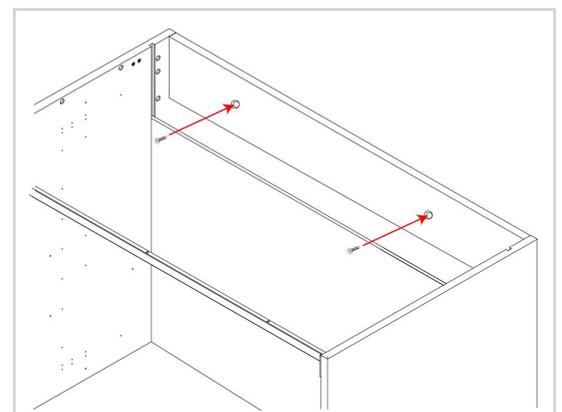


Securing to adjacent units

Clamp together the two units, checking the front edges are level and flush.

Using the screws provided, **1x30mm** screw should be fixed into each corner of the carcass side.


The screws can be concealed by placing them behind the shelf or behind the hinge plates. The cover caps can be used to hide any visible screw heads that remain.

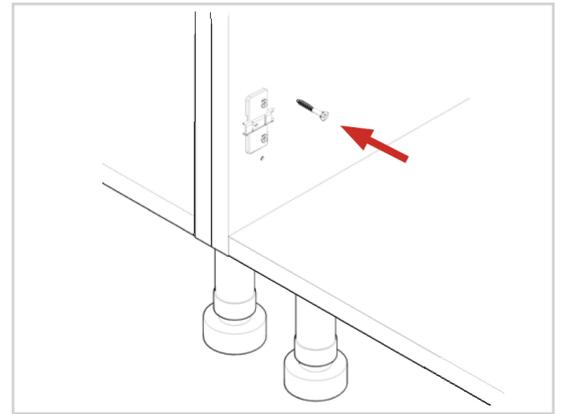

Finding the shelf height


Position the shelf pegs into the pre-drilled holes. The shelf can be positioned at **3** different heights, as shown in the diagram.

Place the shelf into position so the pin of the shelf peg is inserted into the pre-drilled holes.

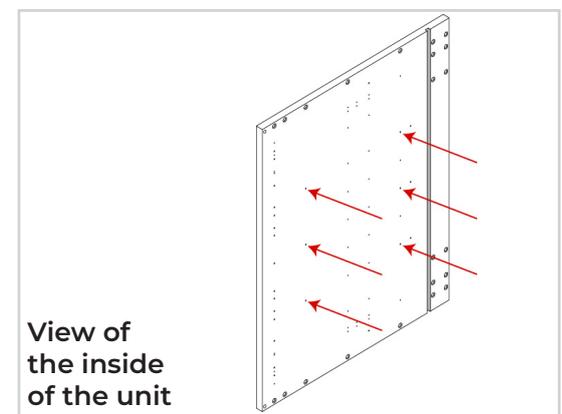

Inserting the shelf into position


The shelf touches the back panel when installed, if there is a gap between the back panel and shelf then the shelf has been installed back to front and the shelf needs to be rotated.

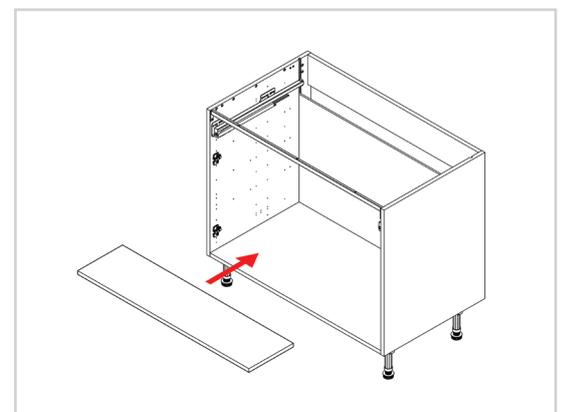

Inserting the drawers


Slide the drawer onto the runners, make sure the runner mechanism and the drawer sides' groove line up.

Push the drawer back into the unit after it has been positioned on the runners; you should hear a click.

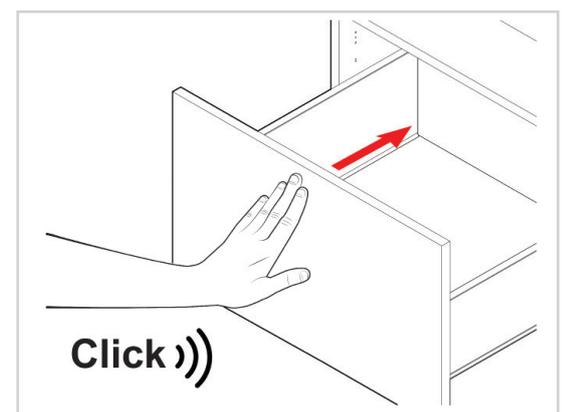

Attaching the frontal


The frontal should be re-attached to the unit by clipping the hinges onto the hinge plates. The bar of the hinge needs to be positioned into the hooks on the hinge plate. Then the rear of the hinge pushed to the hinge plate until it clicks.

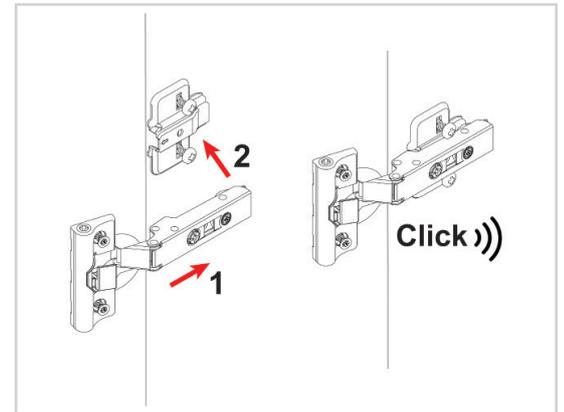

Adding the door buffers


Add **1x** door buffer to each side of each drawer along the carcass edge.

Position **1x** door buffer at the top and bottom corners of the carcass where the frontal will meet, as illustrated in the image.

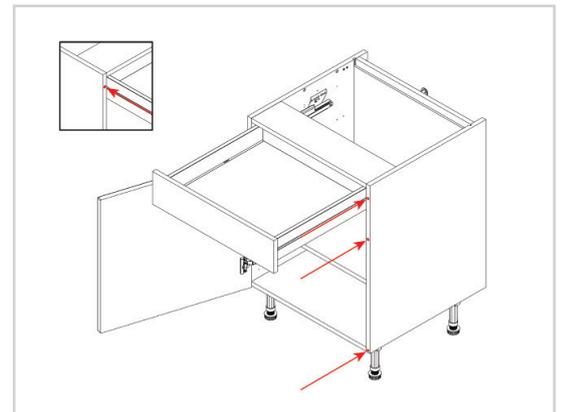

Removing the drawer cover caps

To remove the drawer cover cap found at the side of the drawer, use a flathead screwdriver in the groove of the cover cap to take the cap off.

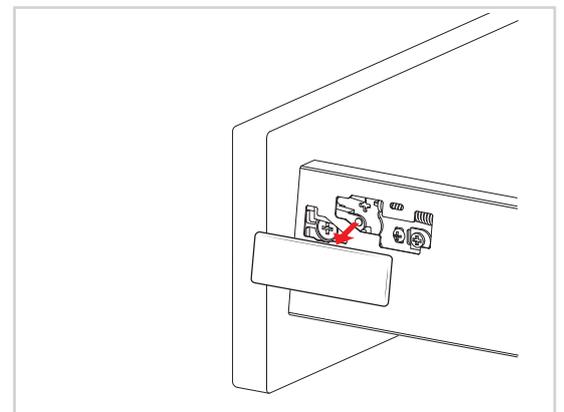

Adjusting the hinges and cover caps


Adjust hinges to suit. As shown in the image.

Point 1 - Will adjust the frontal left and right.

Point 2a - Will adjust the frontal up and down.


Point 2b - Will adjust the frontal tighten once in position.

Point 3 - Will adjust the frontal releasing fixing clip. Screw while applying downward pressure to release.

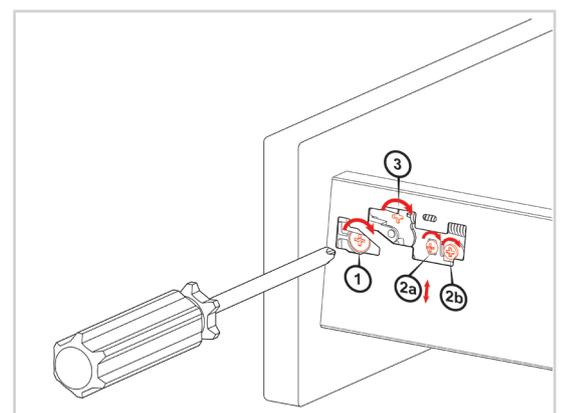


Fitting the drawer cover caps

Fit the drawer cover caps over the drawer side adjustment.

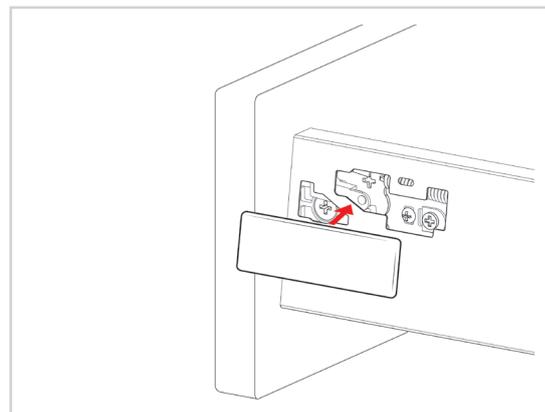

Removing the hinge cover cap

Use a flathead screwdriver to remove the hinge cover cap by inserting it into the slot of the cover cap and twisting.

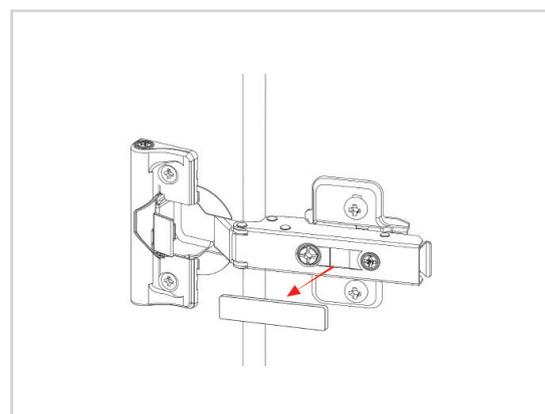


Adjusting the hinge

To adjust the hinges, use a screwdriver as required at points 1 and 2.

Point 1 - Will adjust the frontals left and right.

Point 2 - Will adjust the frontals in and out.

To move the hinges up or down, loosen the screws A and B. Manoeuvre the door, then re-tighten the screws.

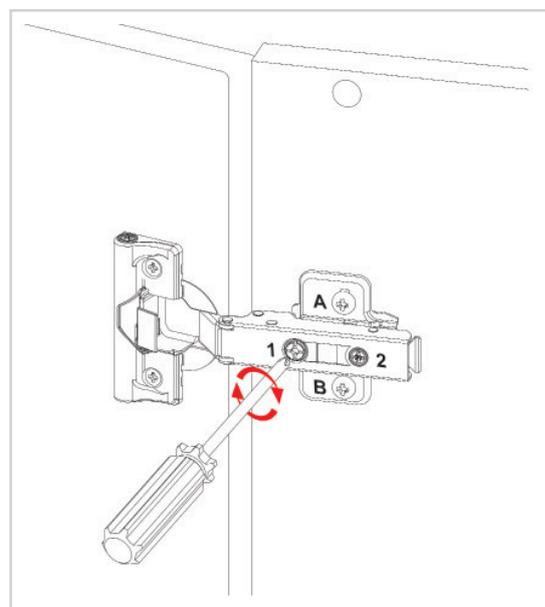


Altering the soft-close

Fit the hinge cover caps to the hinges by pressing down to secure.


Adjust the soft-close to suit (if required).

The soft-close is adjusted by turning the screw at the top of the hinge clockwise or anti-clockwise.

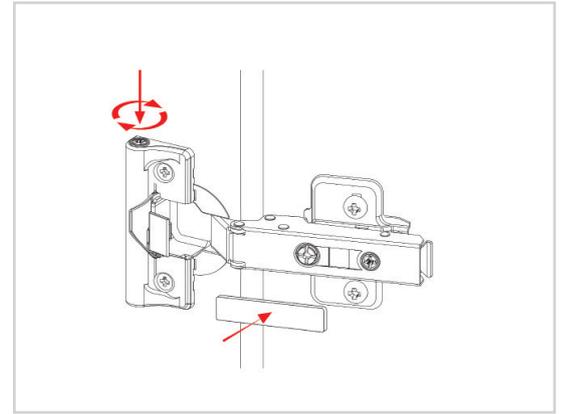

Cleaning the unit

Finally, the unit should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

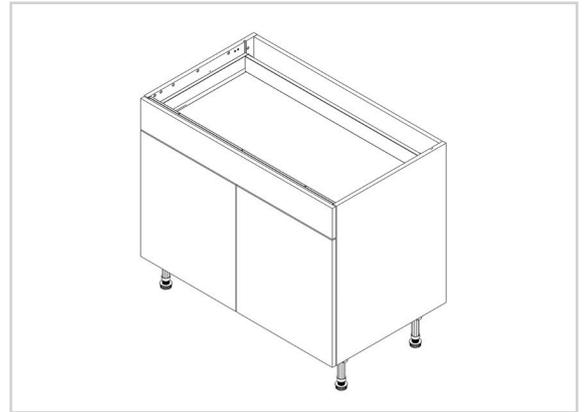

Store the plinth clips and the remaining 15mm screws.
These will be used later when attaching the plinth.

Store the L-brackets.
These will be used later when installing the worktop (laminated or timber).