


Frontals

Installing and removing the Frontal - Door

Removing the frontal


Before installing the unit, remove the frontal by pulling the release catch, as shown in the image.

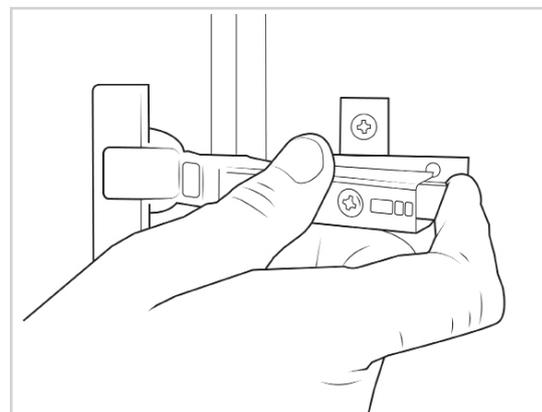

Attaching the hinges to the frontal

Unscrew the screw located in the hinges.

Keep the hinges as these will be used to attach the new frontal to the unit.

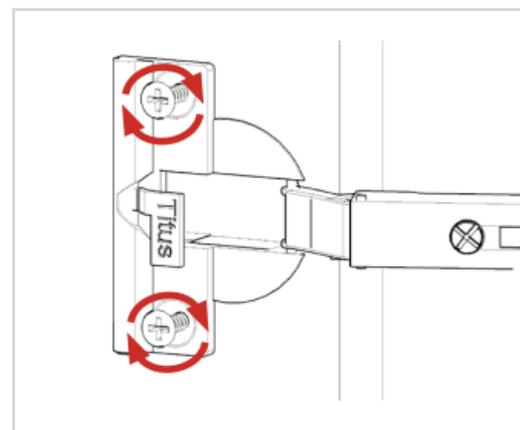


Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damages. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

Attaching the hinges to the frontal


Place the door on a soft, clean surface, then insert the hinges into the door. Ensure the pre-attached screws line up with the screw holes.

Secure hinges by tightening the **2x** screws which are already in positioned within the hinges.

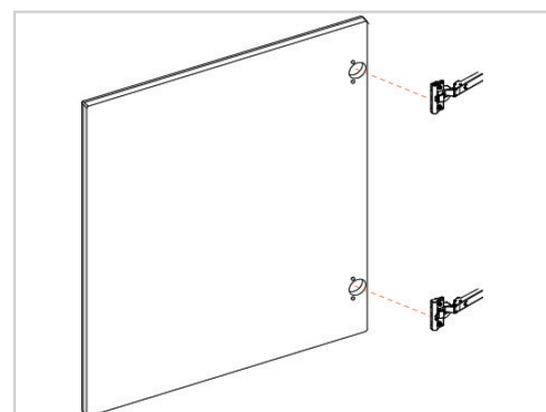

Attaching the frontal

The frontal should be attached to the unit by clipping the hinges onto the hinge plates. The bar of the hinge needs to be positioned into the hooks on the hinge plate. Then the rear of the hinge pushed to the hinge plate until it clicks.

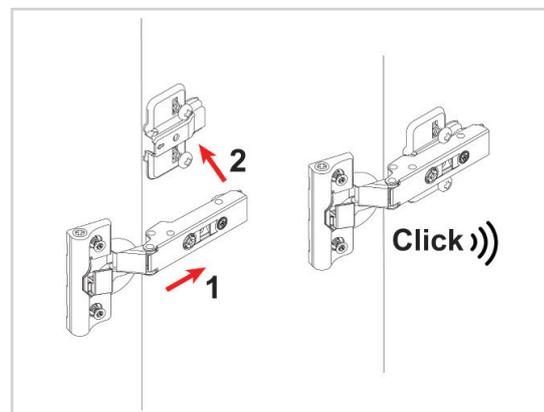


Adjusting the hinge

To adjust the hinges, use a screwdriver as required at points 1 and 2.

Point 1 - Will adjust the frontals left and right.

Point 2 - Will adjust the frontals in and out.

To move the hinges up or down, loosen the screws A and B. Manoeuvre the door, then re-tighten the screws.

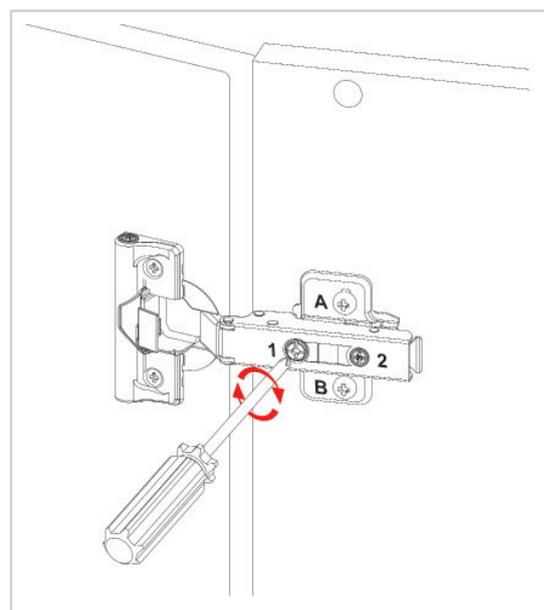

Altering the soft-close

Fit the hinge cover caps to the hinges by pressing down to secure.

Adjust the soft-close to suit (if required).

The soft-close is adjusted by turning the screw at the top of the hinge clockwise or anti-clockwise.

