

# INFINITY PLUS Base Unit

## 700 - 1000 Base (Door, Drawer, Open Top, 5 Legs) - Fitting Guide



### Units Parts



32x 15mm  
screws



6x 30mm  
screws



18x  
Cover Caps




5x  
Legs



5x  
Leg Brackets



2x  
Plinth Clips

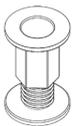

2x  
Space Plug



5x  
Door Buffer



2x  
L-Brackets



2x  
Drawer Covers  
Cap



4x  
Shelf Pegs



1x Shelf

### Tools Required



Drill



Jigsaw



Mallet



Screwdriver



Clamp



Spirit Level




Tape Measure

Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damages. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

### Removing the drawer, fixtures and fittings

Remove all fixtures and fittings from the drawer and keep on a clean and level surface and grouped by product.


Before installing the unit, remove all drawers. This is done by pulling the drawer all the way out, and then pulling the front of the drawer upwards.

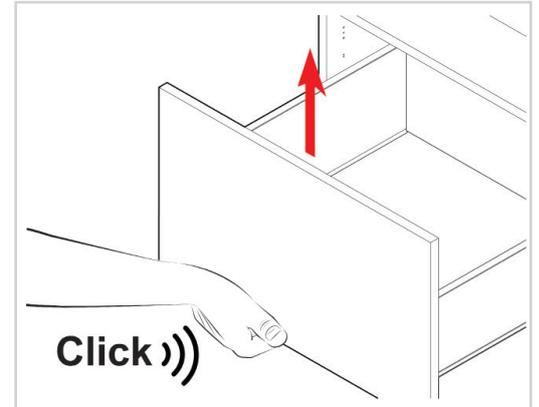

Place the drawers on top of a piece of leftover cardboard to protect them from damage.

### Removing the frontal


Before installing the unit, remove the frontal by pulling the release catch.

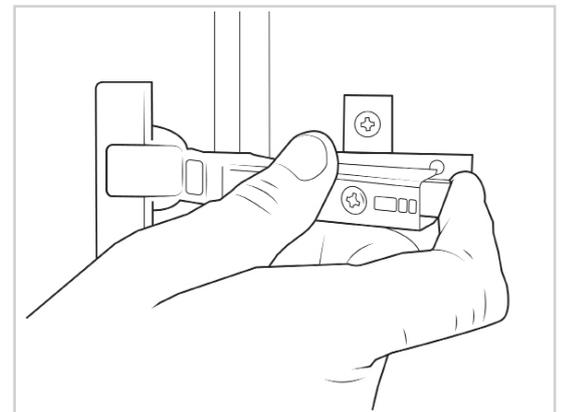

### Removing the fittings



Remove all content so the unit is empty.

All fittings should be kept on a clean and level surface.

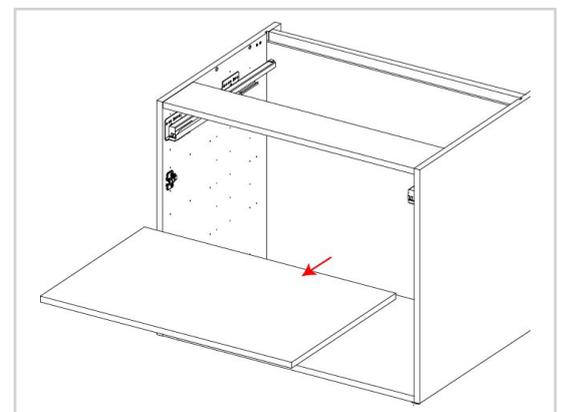


## Positioning the leg brackets

Locate the leg brackets and position, as shown in the diagram. Ensure the leg brackets are rotated so the flange covers the outer edge, as this provides support for the edge of the unit.

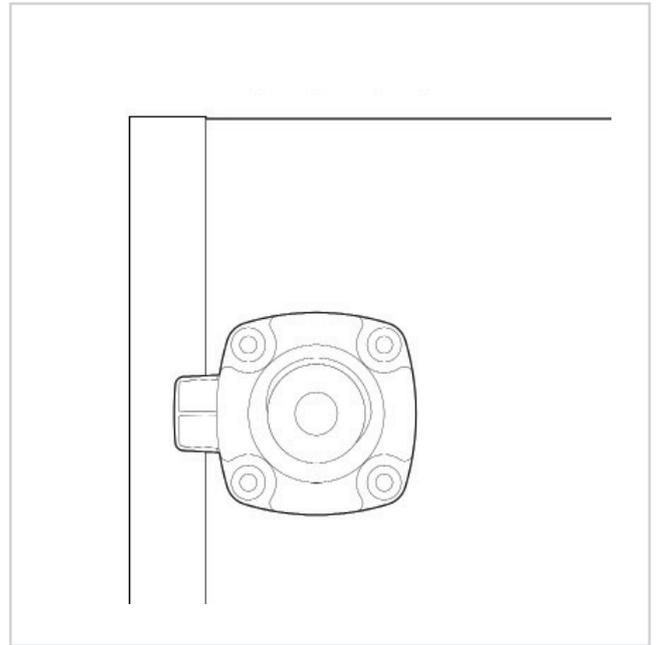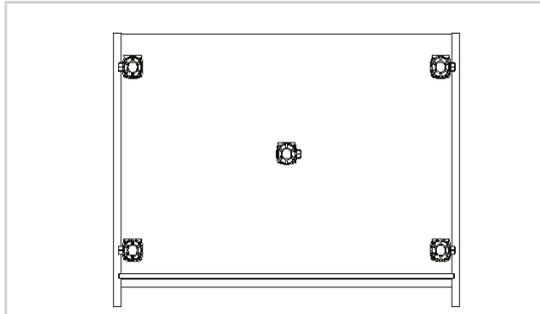

## Fixing the leg bases


Secure each of the leg brackets into place with **4x15mm** screws per bracket.

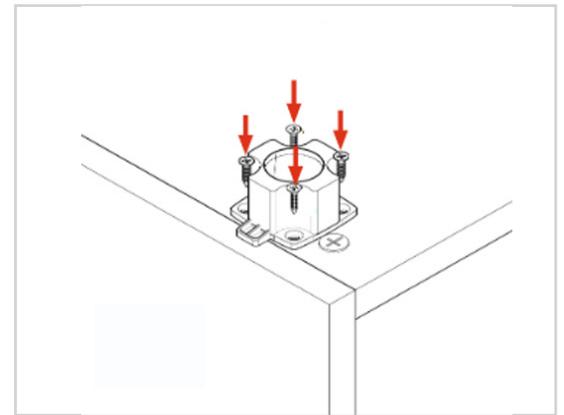

## Inserting the legs

Push each leg firmly down into the leg bracket. Adjusting each leg to **155mm**.


Adjust the legs to the correct height by turning clockwise or anti-clockwise.

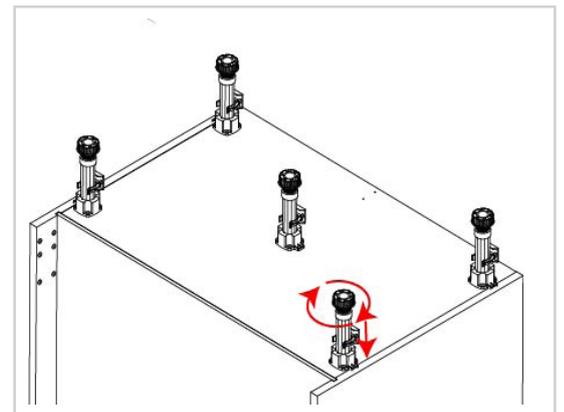

## Notching out the end panels (when required)

In order to allow for any horizontal pipework running behind the unit, some units will require the back of unit's side to be notched out.

Create a notch for the horizontal pipes at the back of the end panels using a jigsaw.

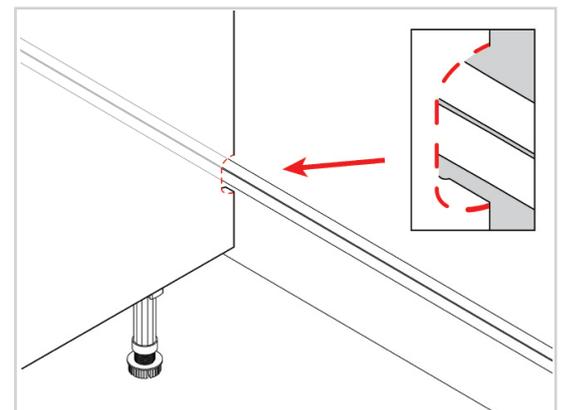


## Lifting the unit into place

When lifting the unit into place do **not** tilt as this can damage the legs.

Place the unit against the wall and align it with the wall markings that will have been drawn during the room preparation stage.

Use a spirit level to ensure the unit is level from front to back, left to right, and diagonally. Adjust the legs if required.

The leg height can be adjusted by turning the foot of the leg clockwise or anti-clockwise.

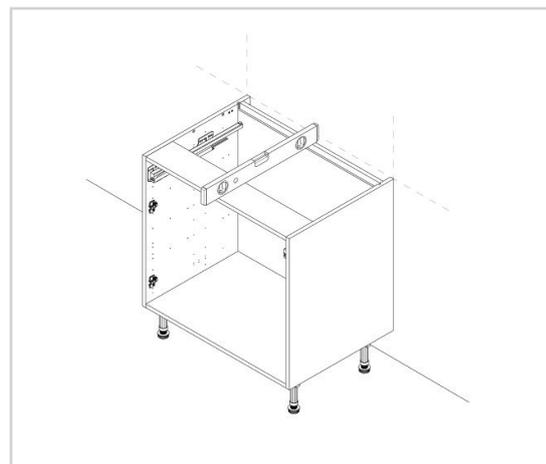

No screws or wall plugs are provided for attaching the unit to the wall.  
This is due to variations in wall construction.

Before drilling into the wall you **MUST** check for any hidden services or pipework within the walls.

## Drilling the pilot holes


Drill a pilot hole through the back panel making sure to lightly mark the wall to indicate where the wall fixing should be placed. The hole should be located as per the diagram, **1/3** in from each side and close to the top of the unit.

For guidance on the appropriate wall fixing for each wall type, please consult the “**Room Preparation Guide.**”

Once complete lift and move the unit away from the wall.

Using the pilot hole, drill a hole to suit the fixing. Place the wall fixing within the hole.

Lift and reposition the unit, ensuring it is level and in line with the wall markings.

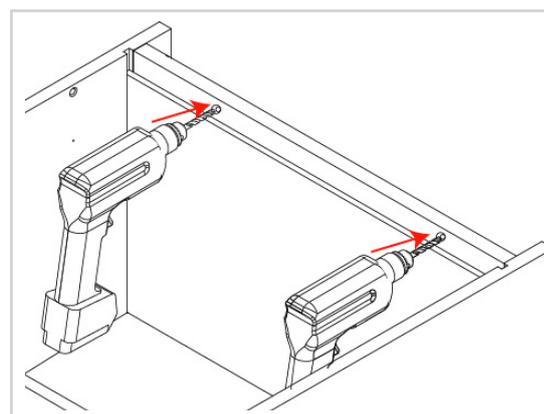


## Inserting the space plugs

Position the space plugs between the wall and the back of the unit, where the holes are located.

Unwind until the space plugs touches both the back panel of the unit and the wall.

Insert the screws into the drilled holes and tighten to the wall.

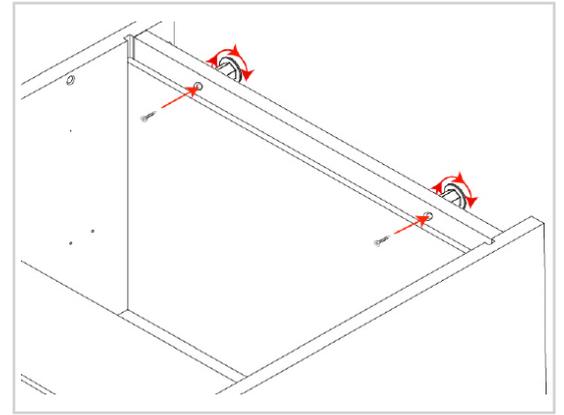


## Securing to adjacent units

Clamp together the two units, checking the front edges are level and flush.

Using the screws provided, **1x30mm** screw should be fixed into each corner of the carcass side.


The screws can be concealed by placing them behind the shelf or behind the hinge plates. The cover caps can be used to hide any visible screw heads that remain.

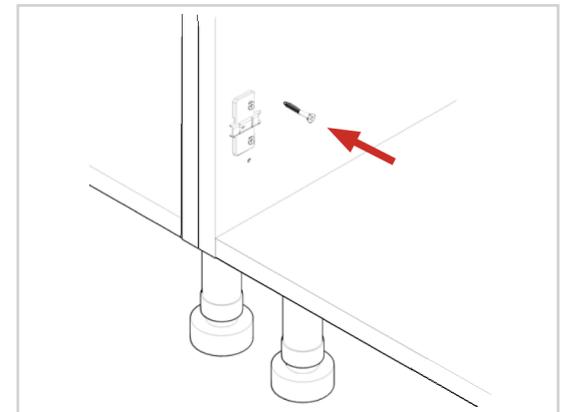

## Inserting the drawers

Slide the drawer onto the runners, make sure the runner mechanism and the drawer sides' groove line up.


Push the drawer back into the unit after it has been positioned on the runners; you should hear a click.

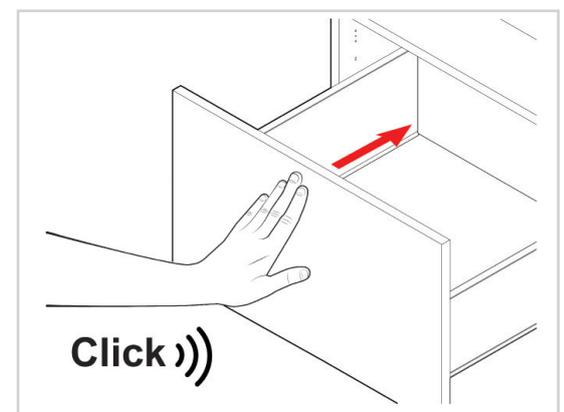

## Finding the shelf height


Position the shelf pegs into the pre-drilled holes. The shelf can be positioned at 3 different heights, as shown in the diagram.

Place the shelf into position so the pin of the shelf peg is inserted into the pre-drilled holes.

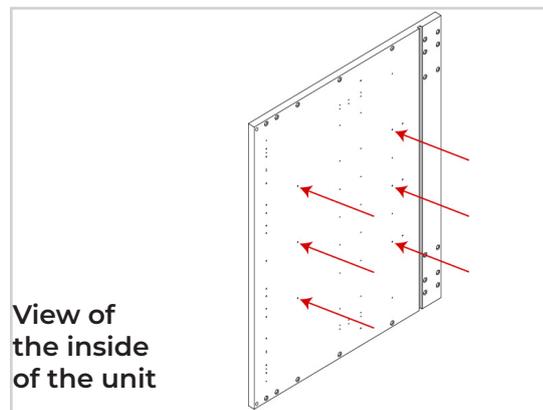


## Inserting the shelf into position

The shelf touches the back panel when installed, if there is a gap between the back panel and shelf then the shelf has been installed back to front and the shelf needs to be rotated.

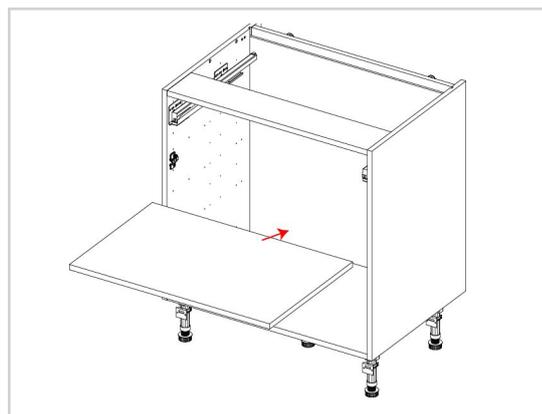

## Attaching the frontal


The frontal should be re-attached to the unit by clipping the hinges onto the hinge plates. The bar of the hinge needs to be positioned into the hooks on the hinge plate. Then the rear of the hinge pushed to the hinge plate until it clicks.

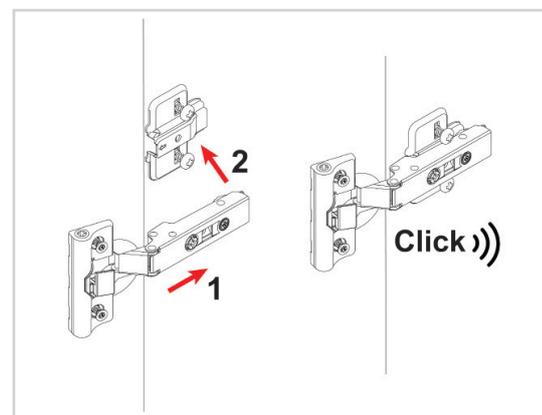

## Adding the door buffers

Add **1x** door buffer to each side of each drawer along the carcass edge.

Position **2x** door buffer at the top and bottom of the carcass where the frontal's corners will meet the carcass, as illustrated in the image.

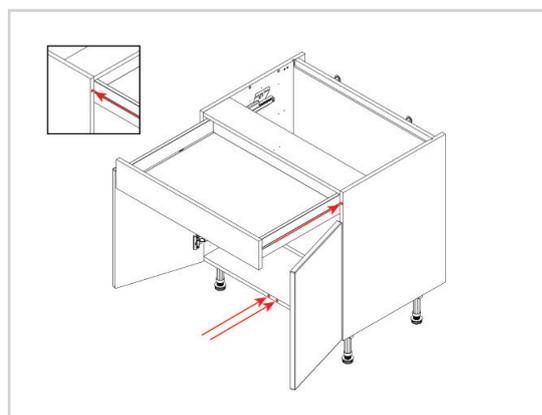





## Adjusting the drawer frontal horizontally

Use the fixing clips, which are found under the drawer's front, to adjust the drawers.

**Step 1** - Press the fixing clips half way to meet the runners on the underside of the drawer.

**Step 2** - Slide the drawer to the left or right to adjust.

**Step 3** - To lock the frontal in place, by releasing the fastening clips on both side of the drawer.

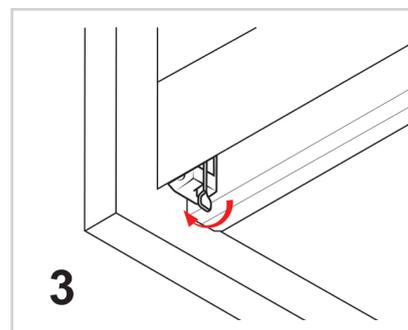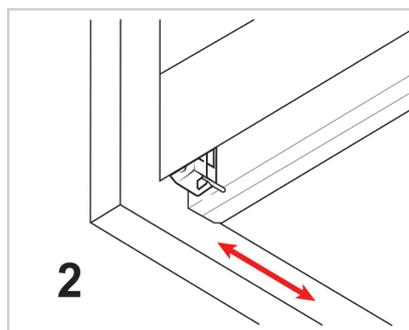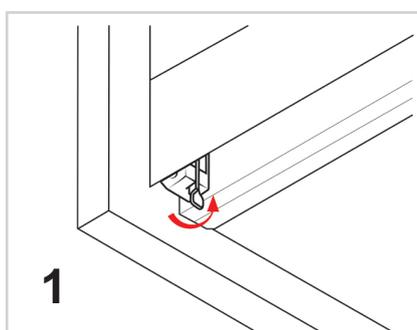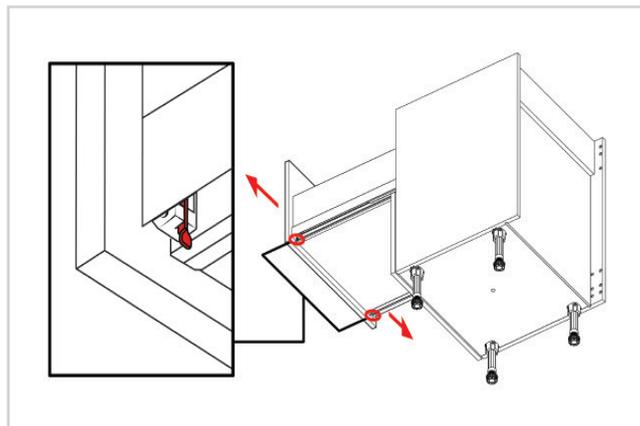


## Adjusting the drawer frontal height

To adjust the height of the frontal, use a screwdriver as required at **points 1** and **2**.

**Step 1** - Loosen both of the screws at **point 1**.


**Step 2** - Turn the screw at **point 2** to adjust the frontal's height.

**Step 3** - Once in the desired position re-tighten the screws at **point 1**.

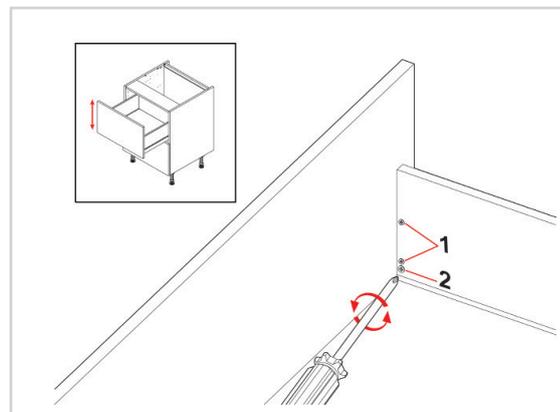

## Removing the hinge cover cap (door frontal)

Use a flathead screwdriver to remove the hinge cover cap by inserting it into the slot of the cover cap and twisting.

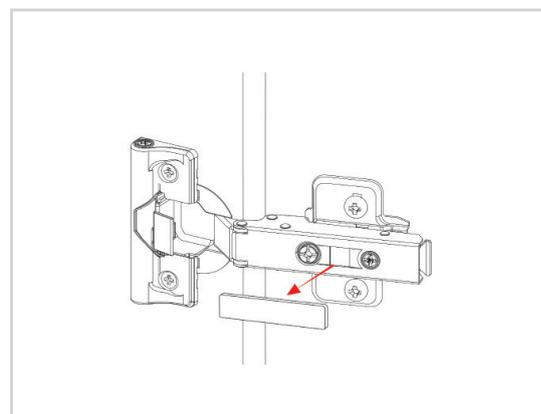


## Adjusting the hinge

To adjust the hinges, use a screwdriver as required at points 1 and 2.

**Point 1** - Will adjust the frontals left and right.

**Point 2** - Will adjust the frontals in and out.

To move the hinges up or down, loosen the screws A and B. Manoeuvre the door, then re-tighten the screws.

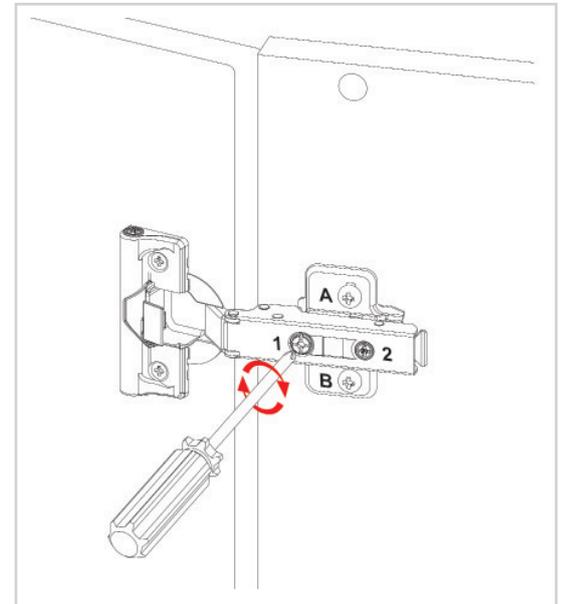


## Altering the soft-close

Fit the hinge cover caps to the hinges by pressing down to secure.


Adjust the soft-close to suit (if required).

The soft-close is adjusted by turning the screw at the top of the hinge clockwise or anti-clockwise.

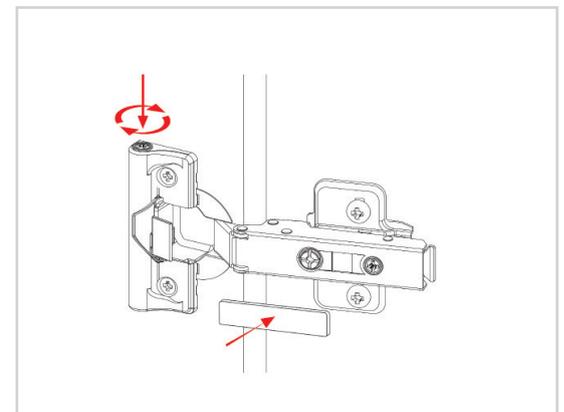

## Cleaning the unit

Finally, the unit should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

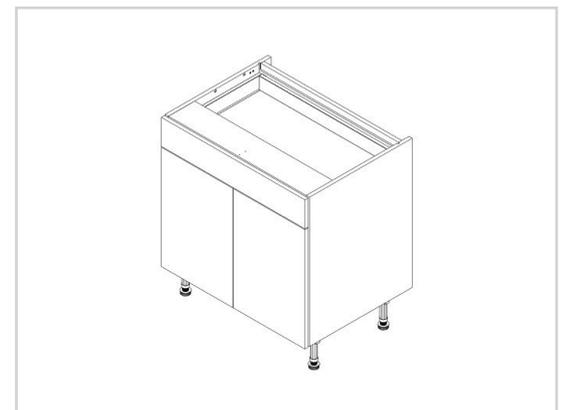

Store the plinth clips and the remaining 15mm screws.  
These will be used later when attaching the plinth.

Store the L-brackets.  
These will be used later when installing the worktop (laminated or timber).