



INFINITY PLUS BASE UNIT

Curved End Base (1 door, 2 shelves, Solid Top, 4 Legs) - Fitting Guide

wren
KITCHENS

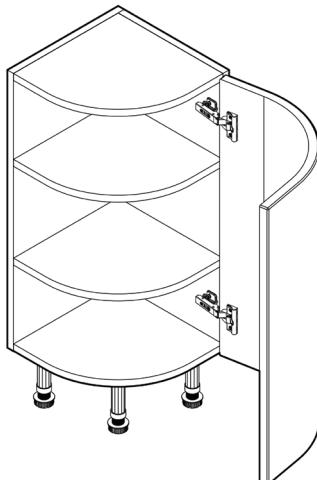

330mm unit

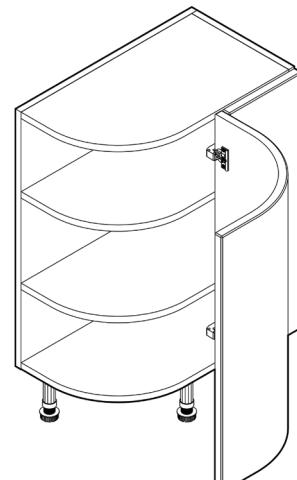


570mm unit

Unit Parts



Tools Required

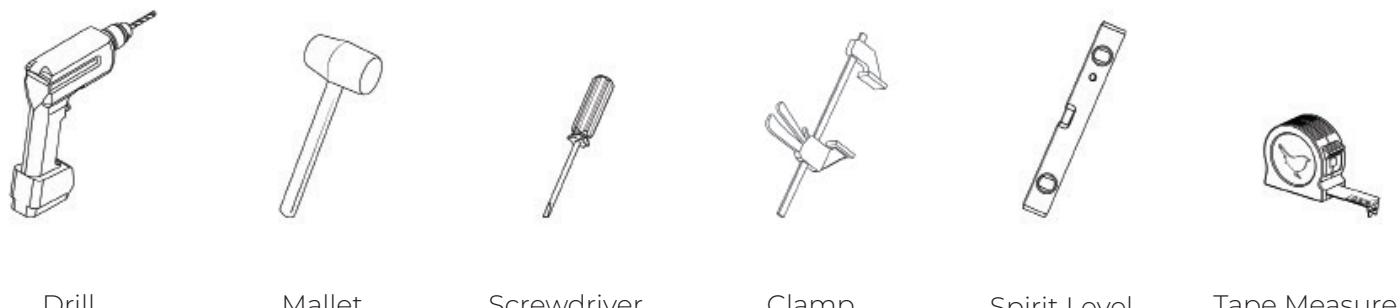

Drill

Mallet

Screwdriver

Clamp

Spirit Level

Tape Measure

This unit should be fitted only after the adjacent base unit has been fully installed.


Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damage. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

A minimum of two people will be needed to lift the unit.

Removing the frontal

Before installing the unit, remove the frontal by pulling the release catch on each hinge.

Place the frontal face upwards on a clean piece of cardboard.

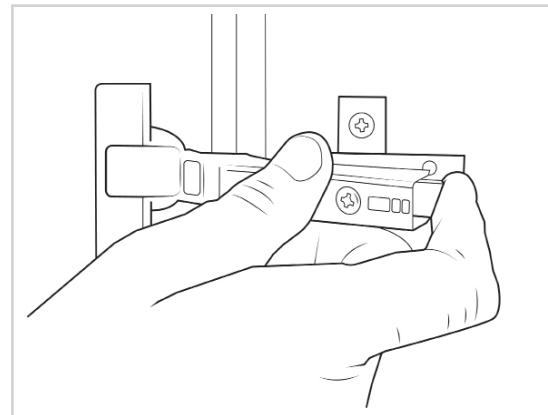


Please note that the shelves are fixed and cannot be removed.

Removing the fittings

Remove all content so the unit is empty.



All fittings should be kept on a clean and level surface.

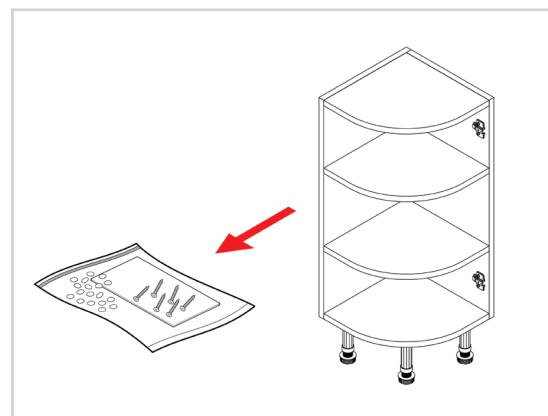

Positioning the leg brackets


Locate the leg brackets and position as shown in the diagram. Ensure the leg brackets are rotated so the flange covers the outer edge at the back and inner side of the unit, as this provides more support for the unit's side panels.

The legs should be positioned **45mm** in from the front edge. The leg on the curved edge should be measured from the centre of the curve.

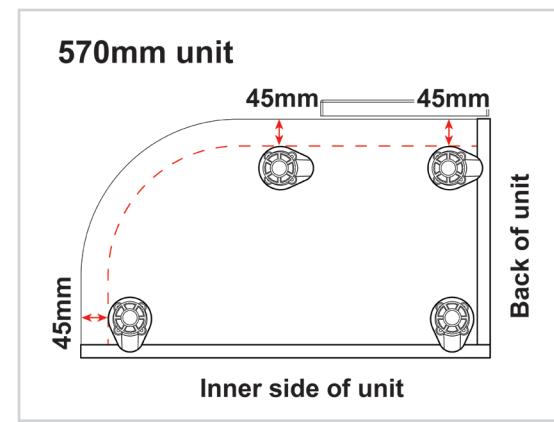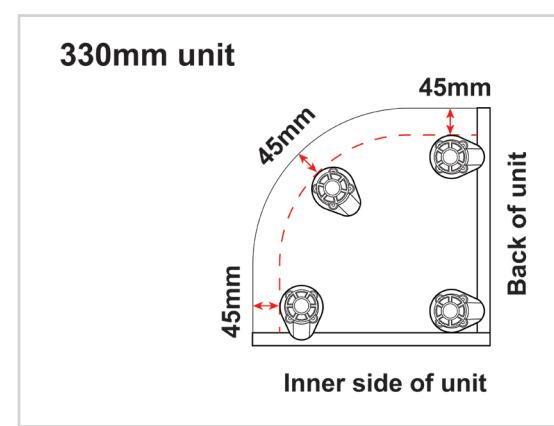

Fixing the leg bases


Secure each of the leg brackets into place with **4x15mm** screws per bracket.

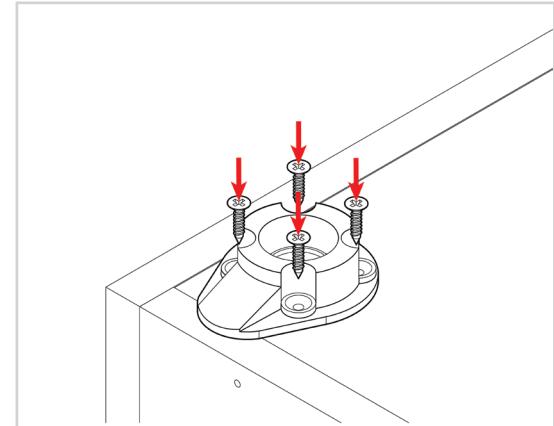

Inserting the legs

Push each leg firmly down into the leg bracket. Adjusting each leg to **155mm**.

Adjust the legs to the correct height by turning clockwise or anti-clockwise.

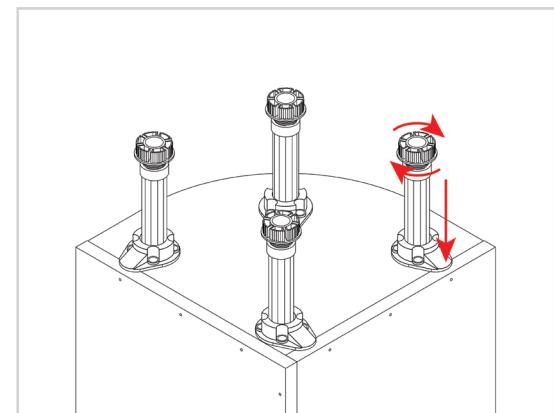


Lifting the unit into place

When lifting the unit into place do not tilt as this can damage the legs.

Place the unit against the wall and align it with the wall markings that will have been drawn during the room preparation stage.

Use a spirit level to ensure the unit is level from front to back, left to right, and diagonally. Adjust the legs if required.

The leg height can be adjusted by turning the foot of the leg clockwise or anti-clockwise.

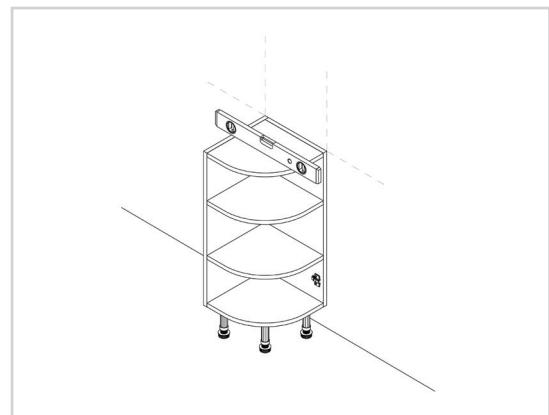


Before drilling into the wall you MUST check for any hidden services or pipework within the walls.

**No screws or wall plugs are provided for attaching the unit to the wall.
This is due to variations in wall construction.**

Pre-drilling the unit


Pre-drill **4x** countersunk holes through the back of the unit.

The holes should be drilled as shown in the image, with **2** positioned behind the hinge plate and **2** placed **40mm** in from the opposite side panel. Ensure the front and back holes are level.

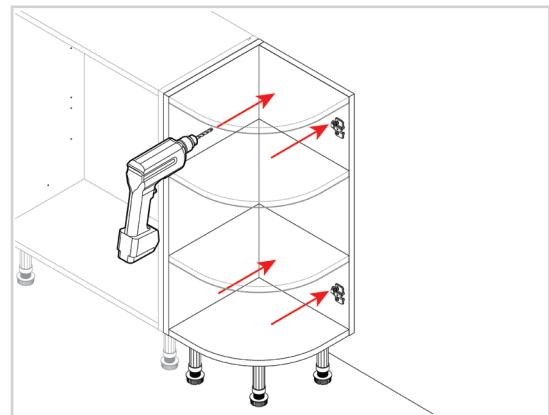

Fixing the unit to the wall

Use suitable screws to secure the unit to the wall through the pre-drilled holes.

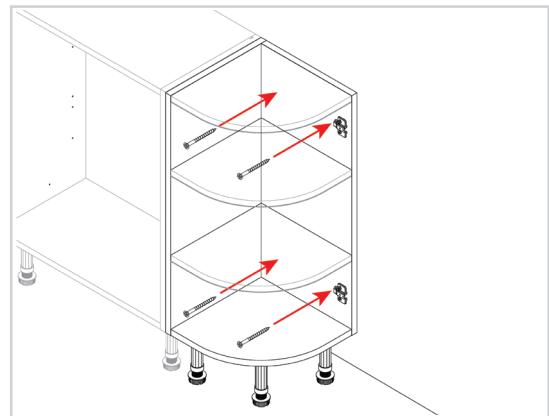


Securing to adjacent units

Clamp together the two units, checking the front edges are level and flush.


Using the screws provided, **1x30mm** screw should be fixed from the inside of the adjacent unit, into each corner of the unit.

The screws can be concealed by placing them behind the shelf or behind the hinge plates. The cover caps can be used to hide any visible screw heads that remain.

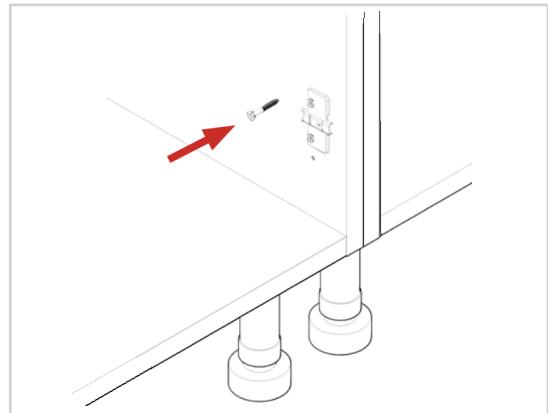


Attaching the frontal

The frontal should be re- attached to the unit by clipping the hinges onto the hinge plates. The bar of the hinge needs to be positioned into the hooks on the hinge plate. Then the rear of the hinge pushed to the hinge plate until it clicks.

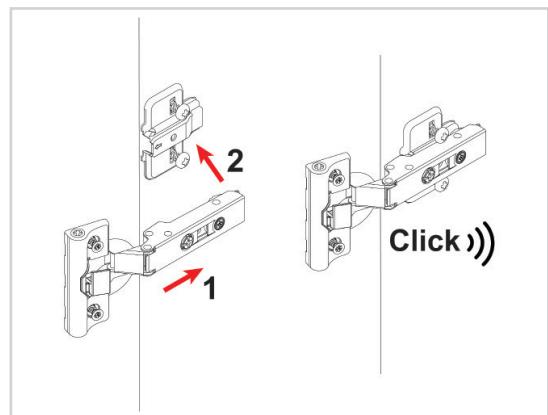


Adding the door buffers

Position **1x** door buffer at the top and bottom corners of the unit where it meets the door, as illustrated in the image.

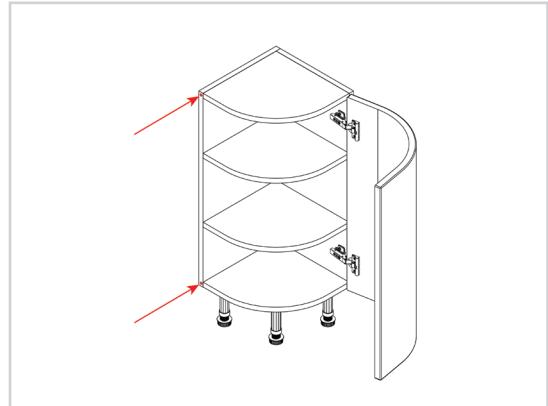

Removing the hinge cover cap (330mm unit)

Use a flathead screwdriver to remove the hinge cover cap by inserting it into the slot of the cover cap and twisting.

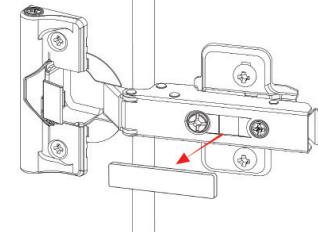


Adjusting the hinge (330mm unit)

To adjust the hinges, use a screwdriver as required at points 1 and 2.

Point 1 -Will adjust the frontals left and right.
Point 2 - Will adjust the frontals in and out.

To move the hinges up or down, loosen the screws A and B. Manoeuvre the door, then retighten the screws.

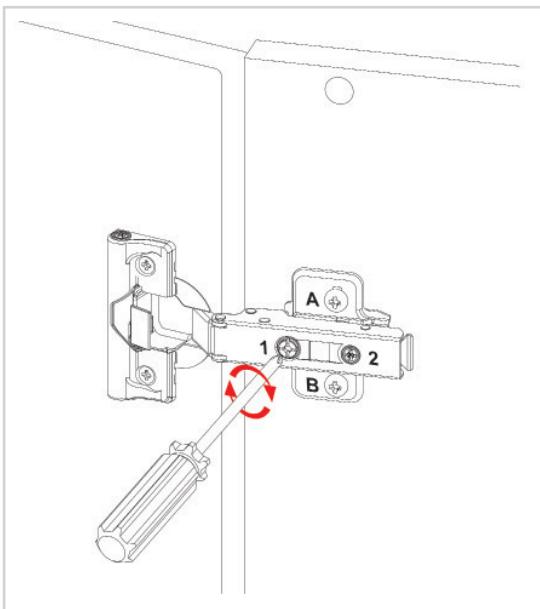


Altering the soft-close (330mm unit)

Fit the hinge cover caps to the hinges by pressing down to secure.


Adjust the soft-close to suit (if required).

The soft-close is adjusted by turning the screw at the top of the hinge clockwise or

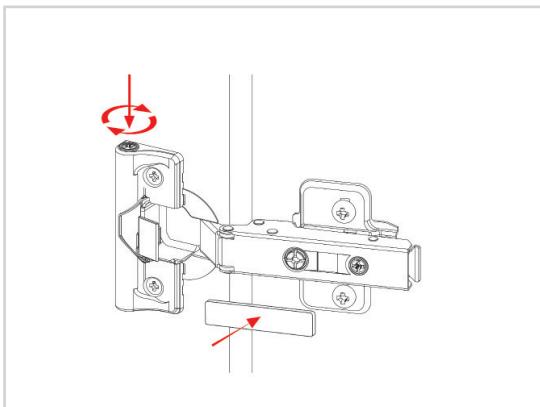

Removing the hinge cover cap (570mm unit)


Use a flathead screwdriver to remove the hinge cover cap by inserting it into the slot of the cover cap and twisting.

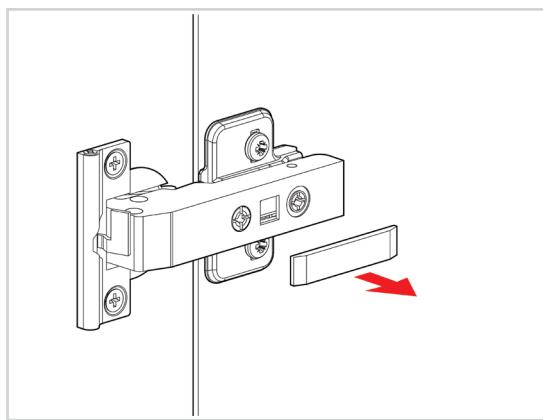

Adjusting the hinge (570mm unit)

To adjust the hinges, use a screwdriver as required at points 1 and 2.

- Point 1** - Will adjust the frontals left and right.
- Point 2** - Will adjust the frontals in and out.
- Point 3** - To move the hinges up or down, loosen both screws, manoeuvre the door, then re-tighten.

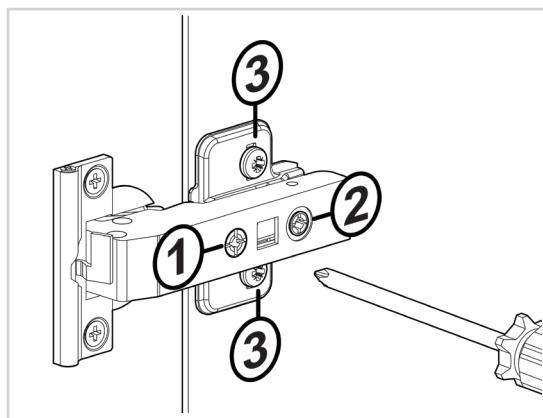


Altering the soft-close (570mm unit)

Fit the hinge cover caps to the hinges by pressing down to secure.

Adjust the soft-close to suit (if required).

The soft-close is adjusted by turning the screw at the top of the hinge clockwise or anti-clockwise.

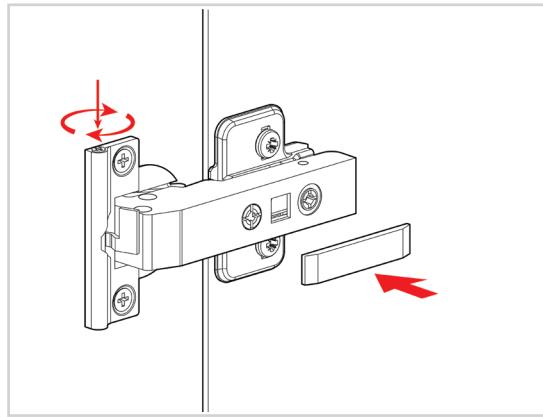

Cleaning the unit

Finally, the unit should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

