



Tower Unit

600 Tower 4 Internal Drawers Including Shelves (Door, Solid Top, 4 Legs) - Fitting Guide

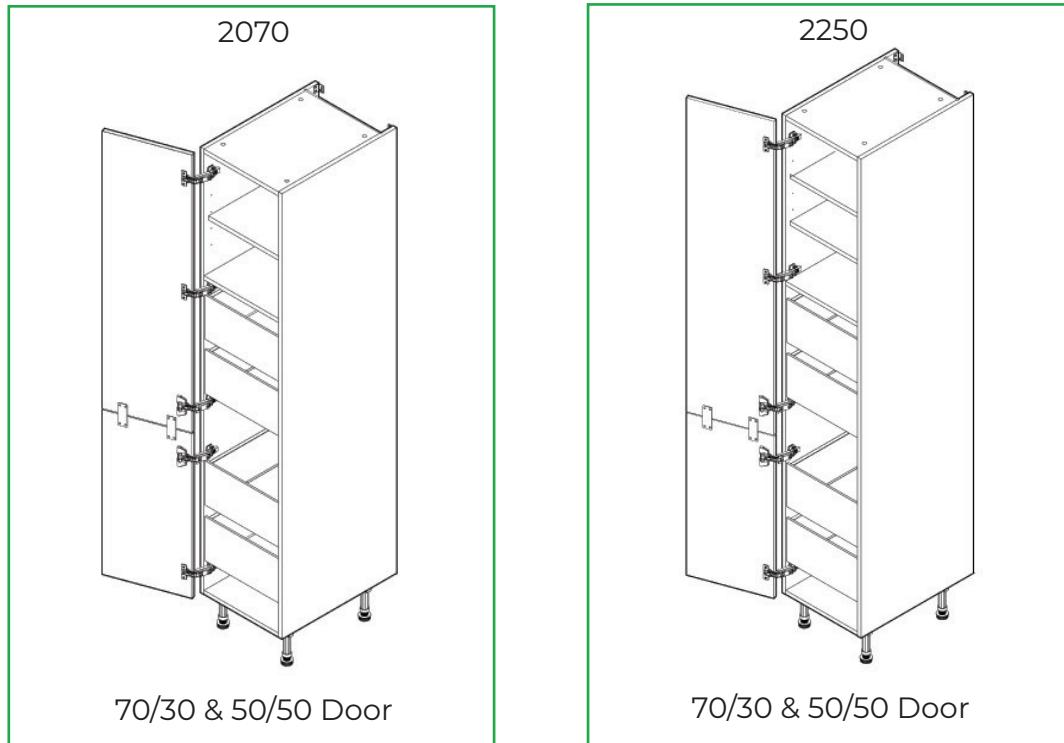

Unit Parts

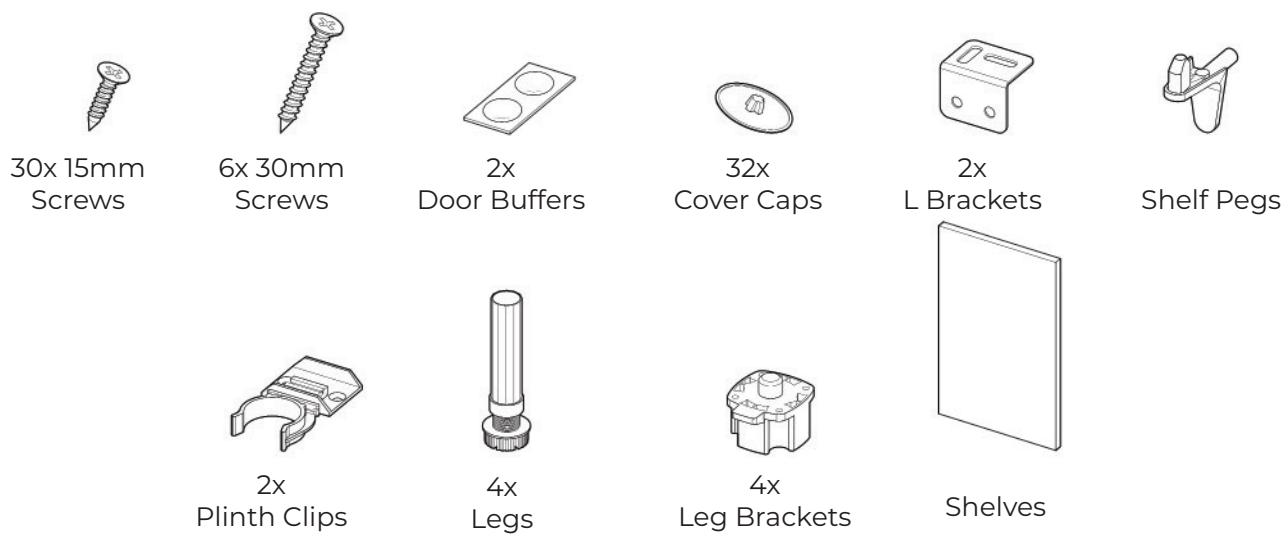

Tools Required




Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damage. Any waste cardboard or plastic should be flattened down and placed in the bin.

A minimum of two people will be needed to lift the unit.


Removing the frontal

Before installing the unit, remove the frontal by pulling the release catch.

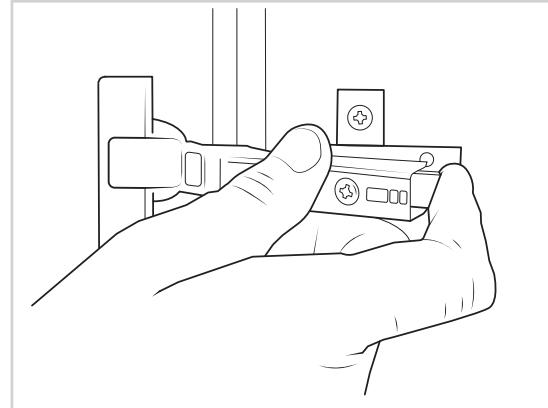

Removing the drawers


Before installing the unit, remove all drawers. This is done by pulling the drawer all the way out, and then pulling the front of the drawer upwards.

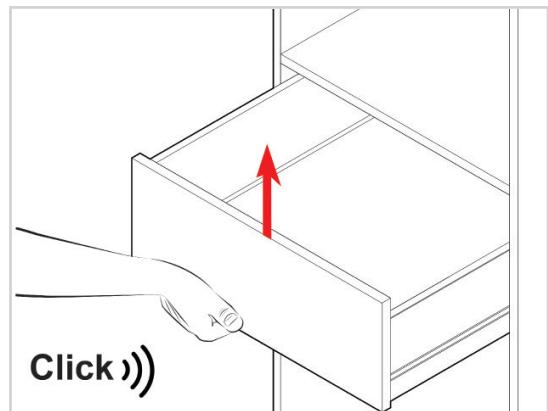

Place the drawers on top of a piece of leftover cardboard to protect them from damage.



Removing the fixtures and fittings

Remove all fixtures, fittings and shelves from the unit and keep on a clean and level surface, grouped by product.

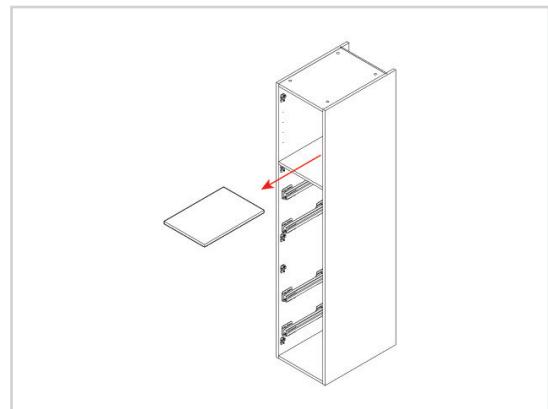


Positioning the leg brackets

Locate the leg brackets and position, as shown in the diagram. Ensure the leg brackets are rotated so the flange covers the outer edge, as this provides support for the edge of the unit.

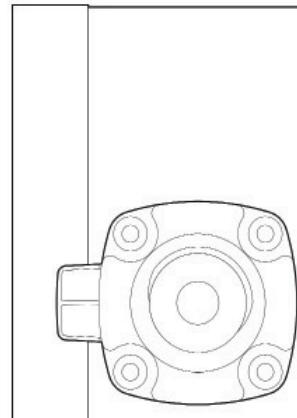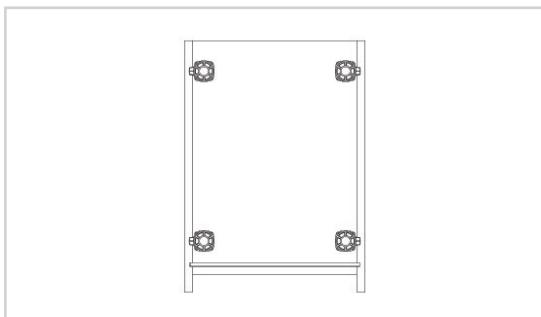

Fixing the leg bases


Secure each of the leg brackets into place with **4x15mm** screws per bracket.

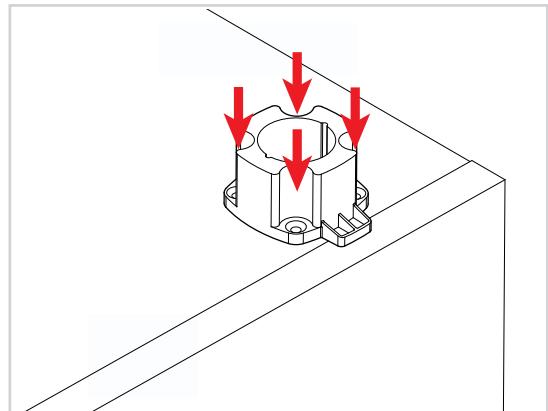

Inserting the legs


Push each leg firmly down into the leg bracket. Adjusting each leg to **155mm**.

Adjust the legs to the correct height by turning clockwise or anti-clockwise.

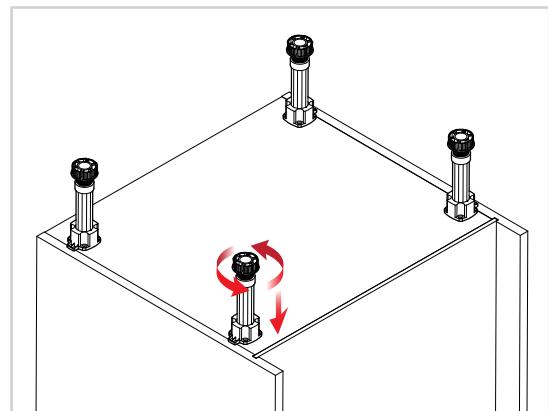

Securing the L-bracket


Secure each of the L-brackets to the top rear of the unit using **2x15mm** screws at each side.

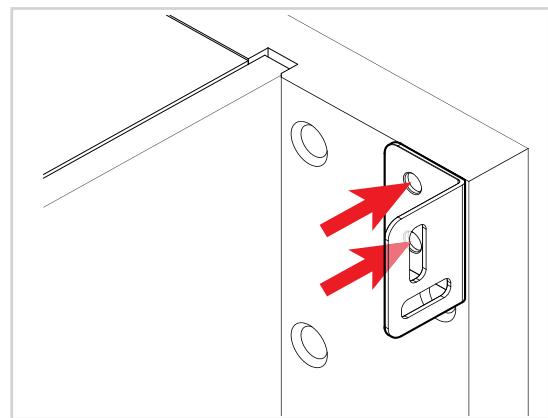

Notching out the side panels (when required)

In order to allow for any horizontal pipework running behind the unit, some units will require the back of the unit sides to be notched out.

Create a notch for the horizontal pipes at the back of the end panels using a jigsaw.

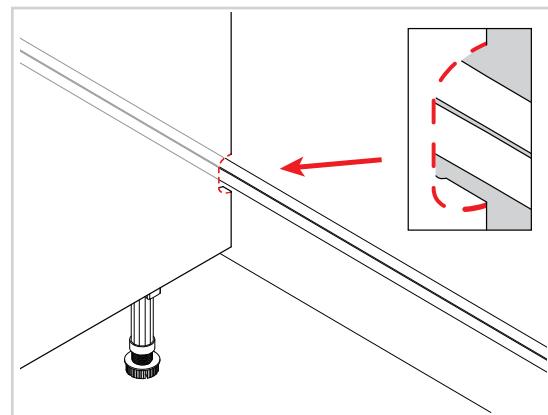


Lifting the unit into place

When lifting the unit into place do **not** tilt as this can damage the legs.

Place the unit against the wall and align it with the wall markings that will have been drawn during the room preparation stage.

Use a spirit level to ensure the unit is level from front to back, left to right, and diagonally. Adjust the legs if required.

The leg height can be adjusted by turning the foot of the leg clockwise or anti-clockwise.

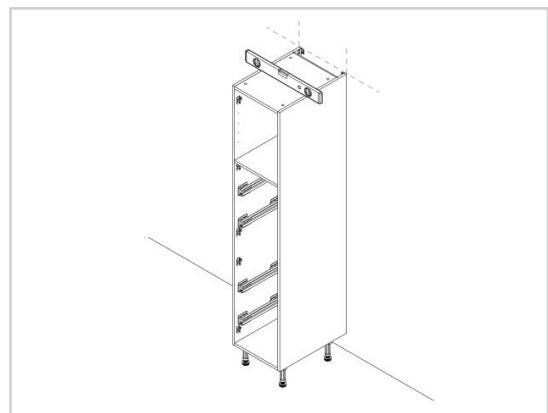


No screws or wall plugs are provided for attaching the unit to the wall. This is due to variations in wall construction.

Before drilling into the wall you **MUST** check for any hidden services or pipework within the walls.

Attaching the tower unit to the wall

Fix the unit to the wall through the L-brackets as shown in the image (these fixings are not provided).

For guidance on the appropriate wall fixing for each wall type, please consult the **"Room Preparation Guide."**


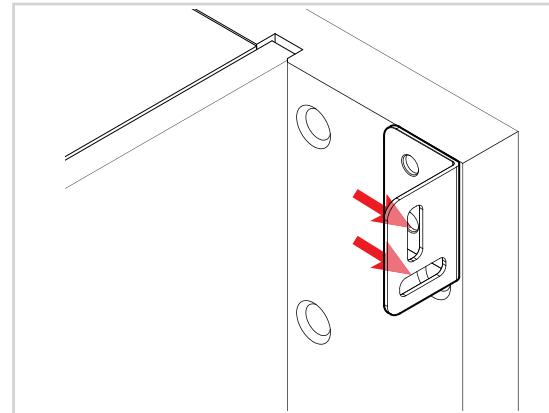


Securing to adjacent units

Clamp together the two units, checking the front edges are level and flush.

Using the screws provided, **1x30mm** screw should be fixed into each corner of the unit side.

The screws can be concealed by placing them behind the shelf or behind the hinge plates. The cover caps can be used to hide any visible screw heads that remain.

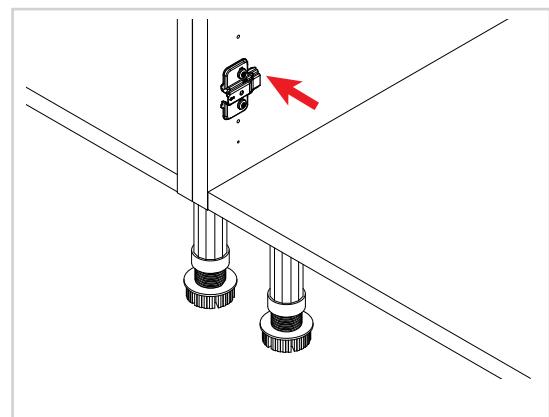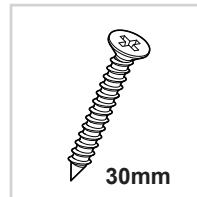


Placing the shelf / shelves into position

Position the shelf pegs into the pre-drilled holes.

Place the shelf/shelves into position so the pin of each shelf peg is inserted into the pre-drilled holes.


The shelf will touch the back panel when installed, if there is a gap between the back panel and shelf then it has been installed back to front and needs to be rotated.

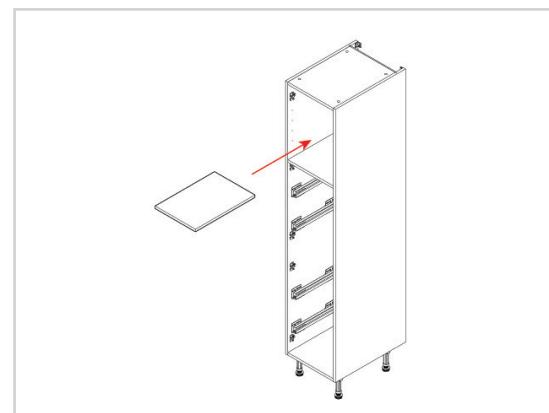

Inserting the drawers


Slide the drawer onto the runners, make sure the runner mechanism and the drawer sides' groove line up.

Push the drawer back into the unit. After it has been positioned on the runners; you should hear a click.

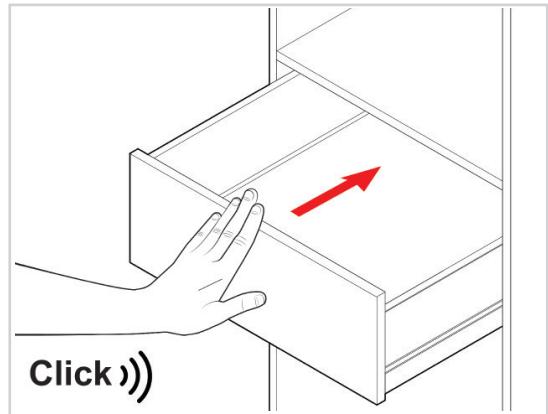

Attaching the frontal

The frontal needs to be re-attached to the unit. Position the hinge arm on the hooks of the hinge plate. Then push the rear of the hinge arm towards the hinge plate until it clicks.

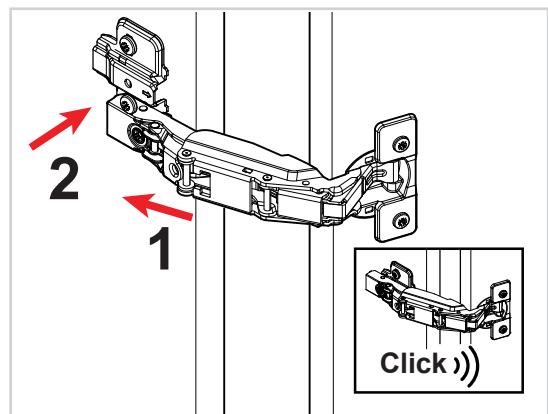


Adjusting the hinge

To adjust the hinges, use a screwdriver as required at points **1** and **2**.

Point 1 – Will adjust the frontals left and right.


Point 2 – Will adjust the frontals in and out.

To move the hinges up and down, loosen the screws **A** and **B**. Manoeuvre the door, then re-tighten the screws.

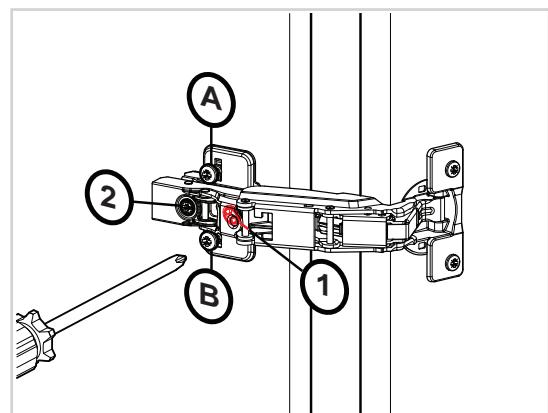


Adding the door buffers

Position **1x** door buffer at the top and bottom corners of the unit, as illustrated in the image.

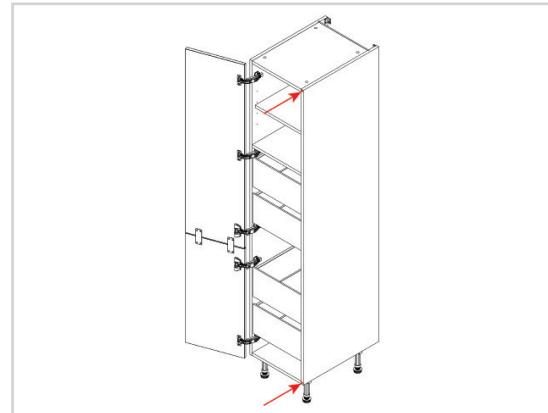

Cleaning the unit

Finally, the unit should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

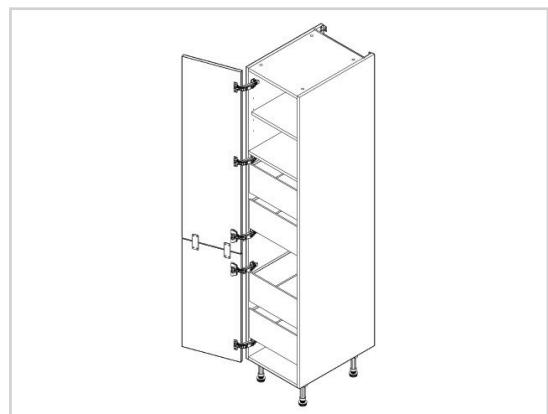

**Store the plinth clips and the remaining 15mm screws.
These will be used later when attaching the plinth.**

**For drawer alignment please review the following installation guide:
Drawer - Drawer Adjustment**