 


INFINITY / INFINITY PLUS


Wall Unit

Feature Sideboard Dresser - Fitting Guide


wren
KITCHENS

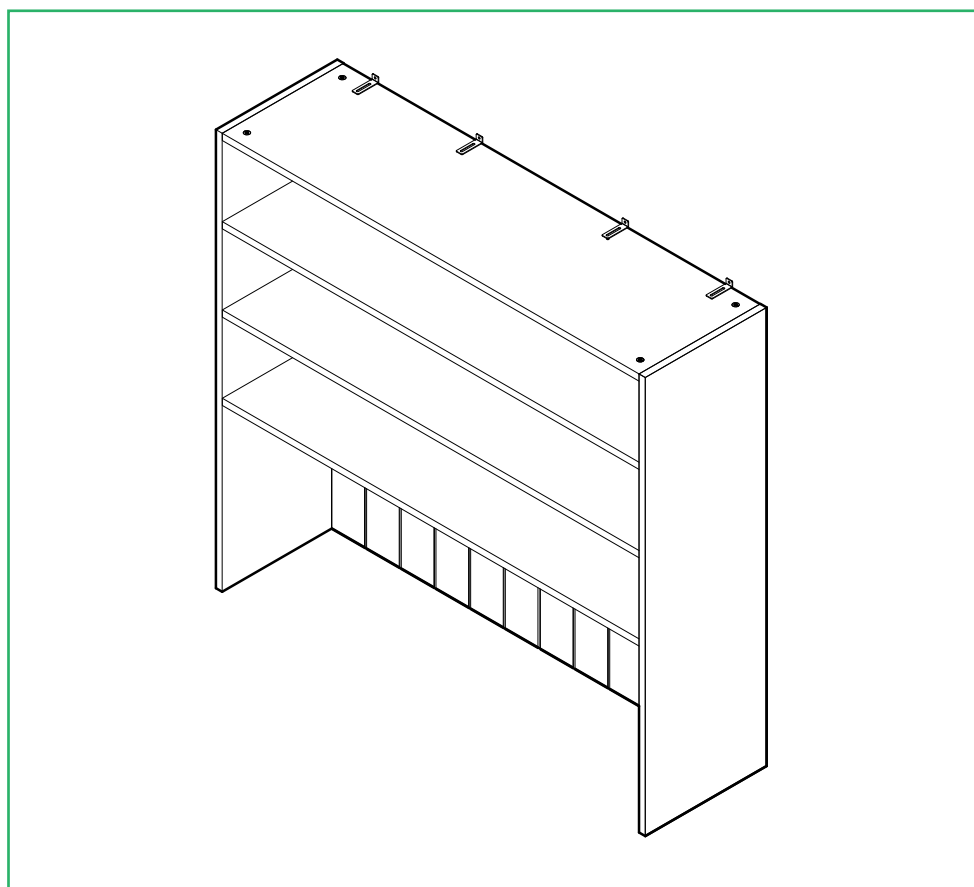


Tools Required

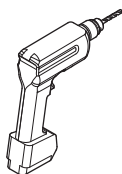

Drill

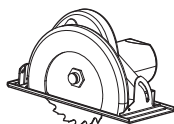


Circular Saw

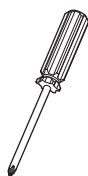


Screwdriver




Mallet

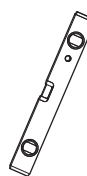

Spirit Level


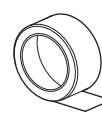


Masking Tape

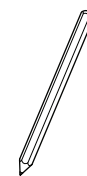


Pencil

Unit Parts

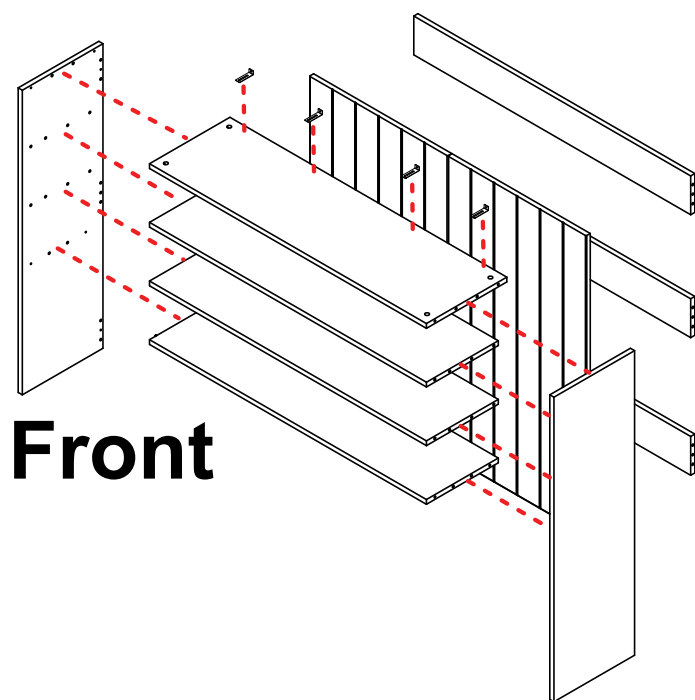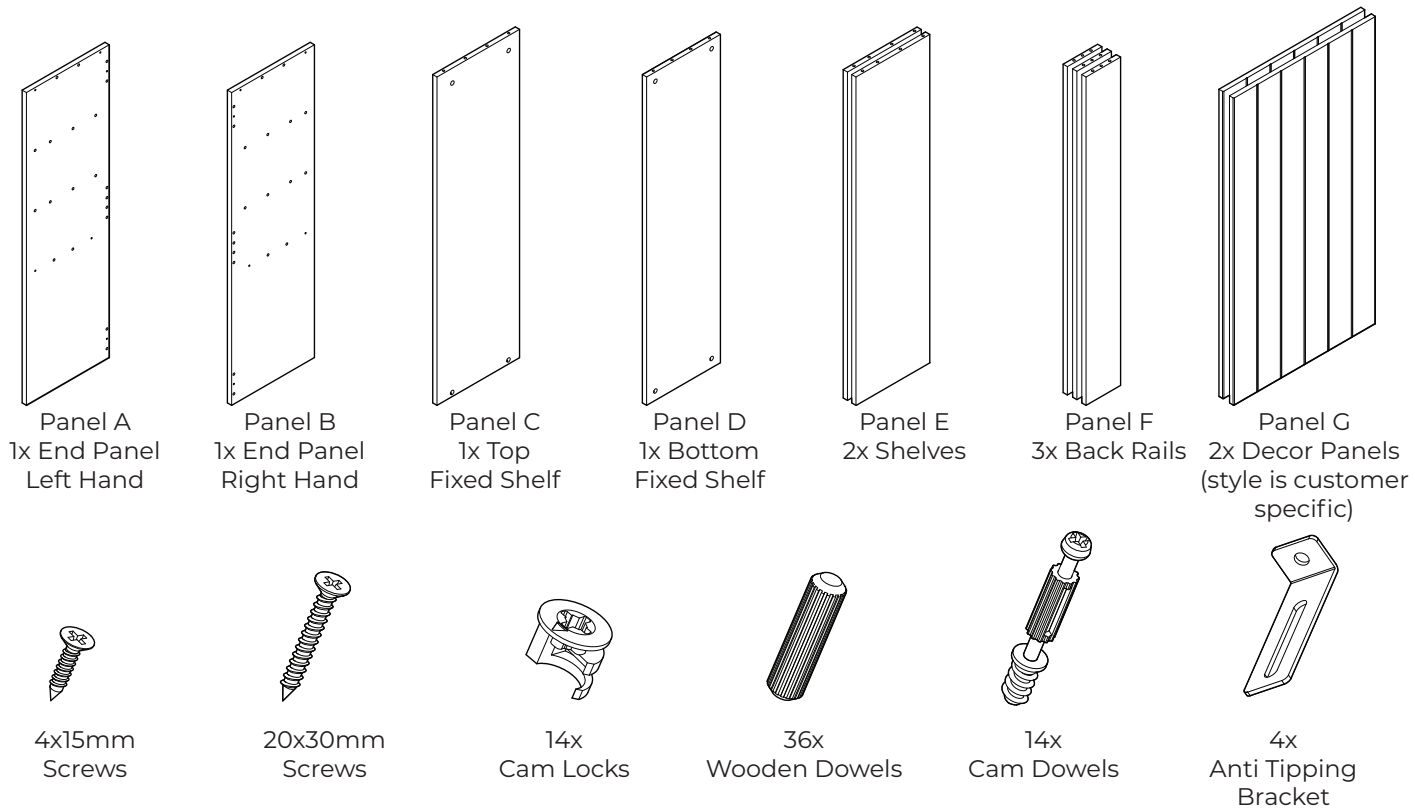

Front

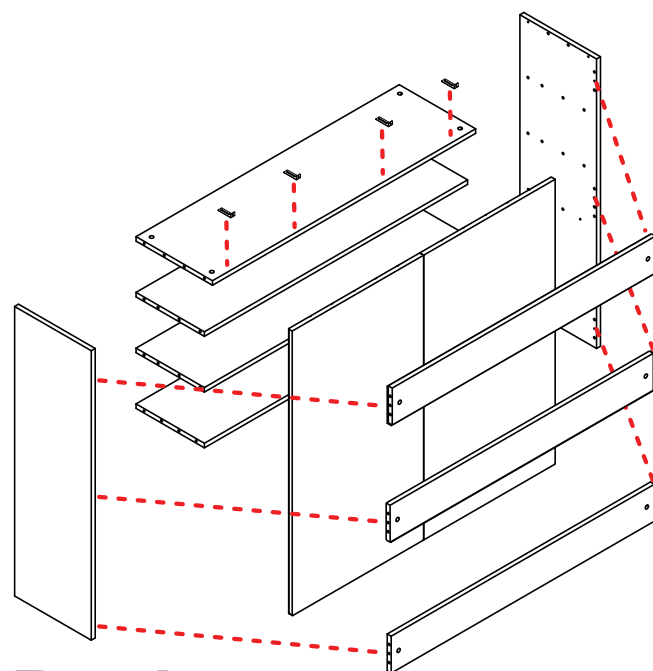

Back



Before installing any wall cabinets, ensure the wall construction is strong enough to support the weight of the fully loaded cabinet and that appropriate fixings are used. Wall cabinets must be fully secured using all supplied brackets, as specified in the installation guide.

If you are unsure, seek professional advice before proceeding.


Remember to take care when unpacking. Please keep your workspace clean, clear, and tidy when working. This will help keep all items safe from damage. Any waste cardboard or plastic should be flattened down and placed in the bin.

A minimum of two people will be needed to lift the unit.

Unpacking the parts and fittings


Remove all content from the packaging and ensure to familiarise yourself with all unit parts and fittings.

All parts and fittings should be kept on a clean and level surface.

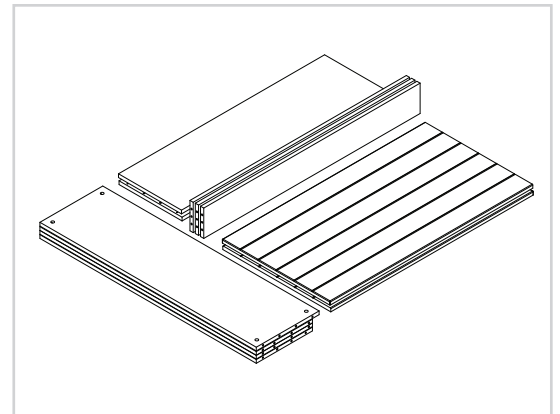


Removing the glue dots

The panels are held together with soft glue dots. Remove this glue by gently rubbing with a clean, dry cloth.

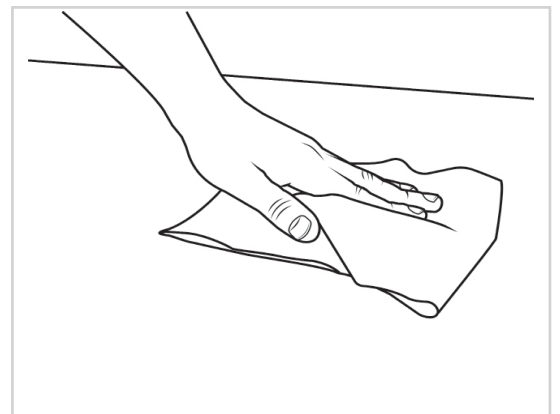


Inserting the cam dowels

Insert the cam dowels into the holes in end panels **(A)** and **(B)**, then screw them securely into position as shown.

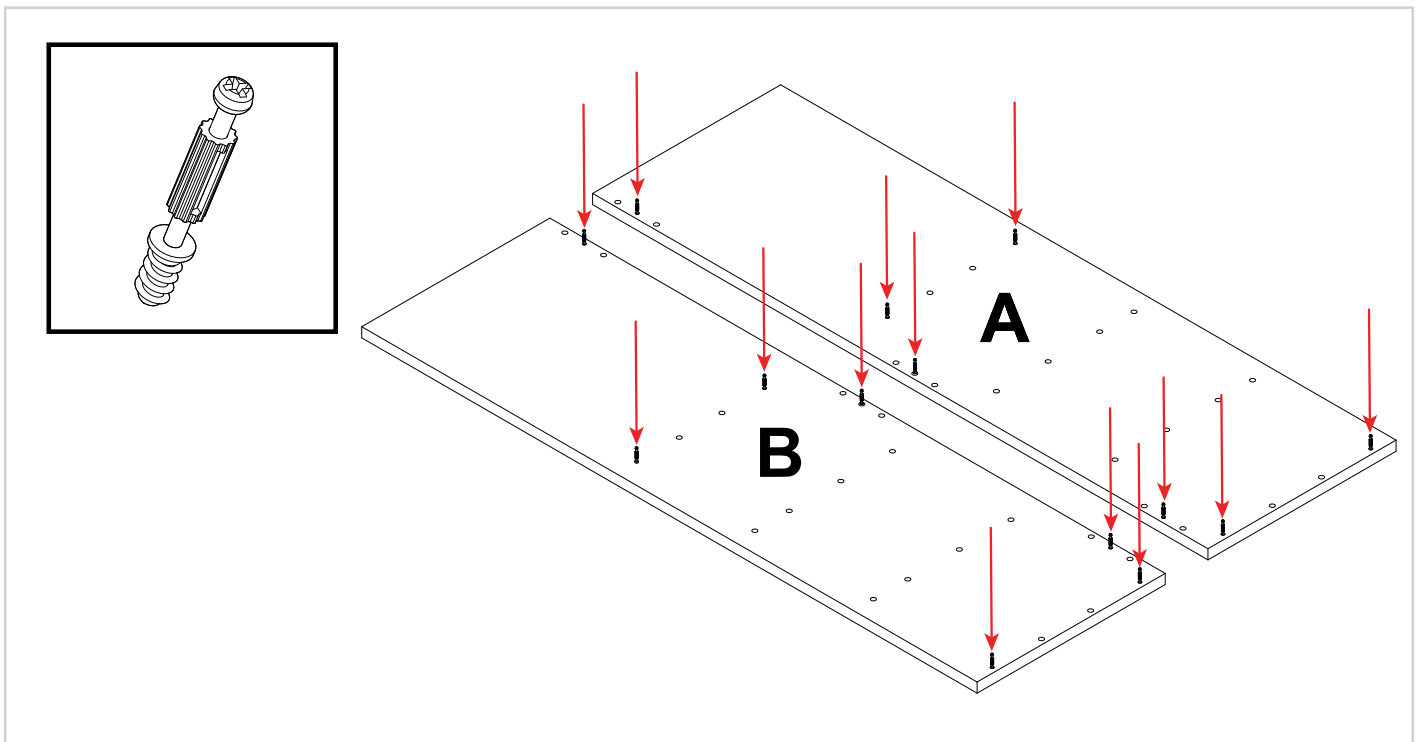

Inserting the wooden dowels




Fit the wooden dowels into the holes in end panels **(A)** and **(B)**, ensuring they are fully pushed into place as shown.

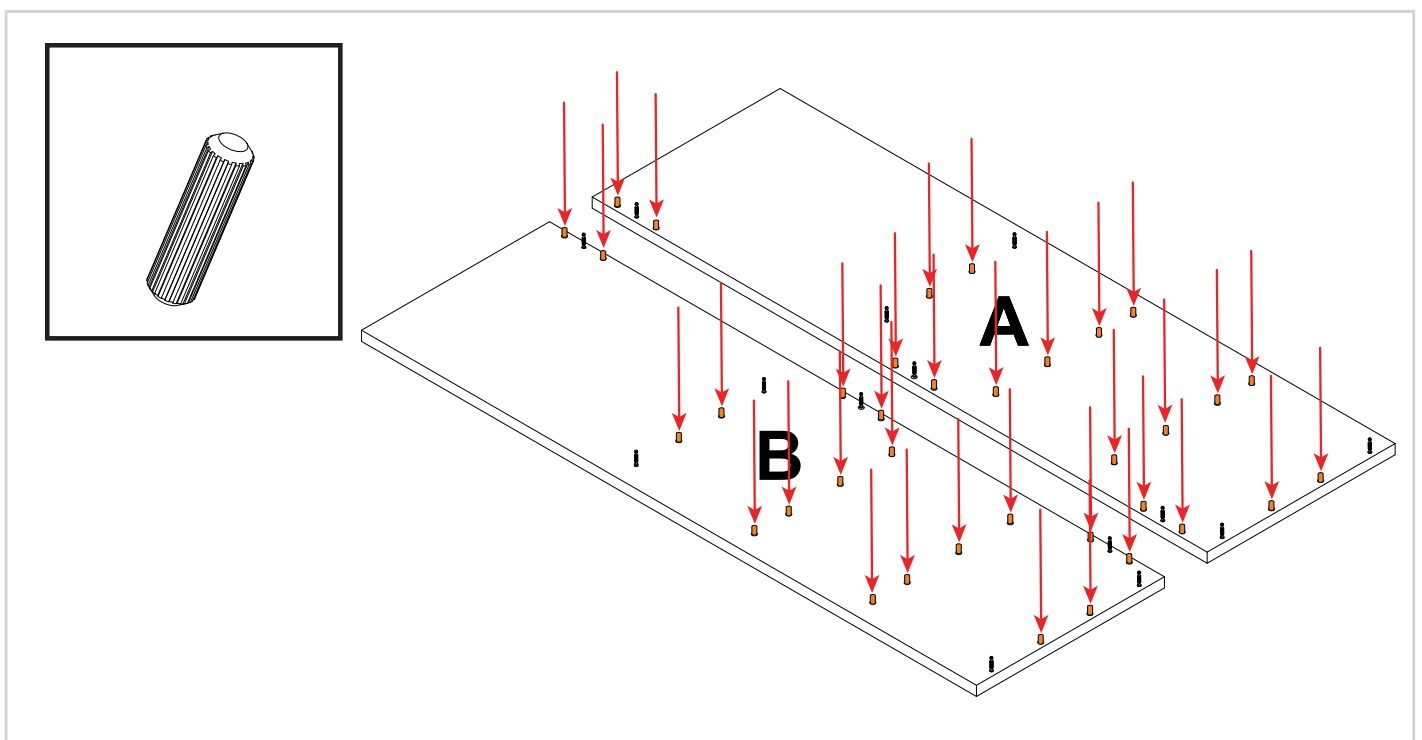

Assembling the unit

Using the expanding cam dowels and wooden dowels, assemble the top and bottom fixed shelves (**C & D**), shelves (**E**), and back rails (**F**) between end panels (**A & B**), as shown.

All cam lock holes should to be positioned facing the outside of the unit.

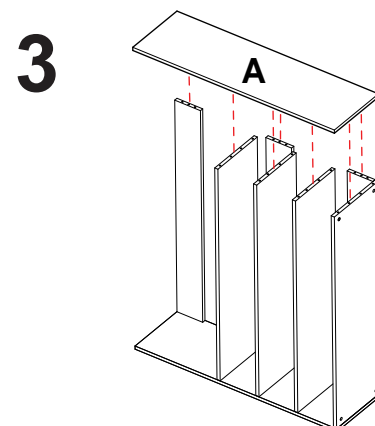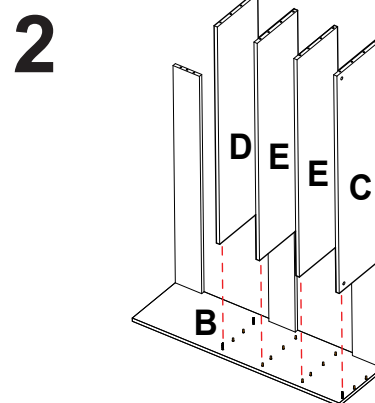
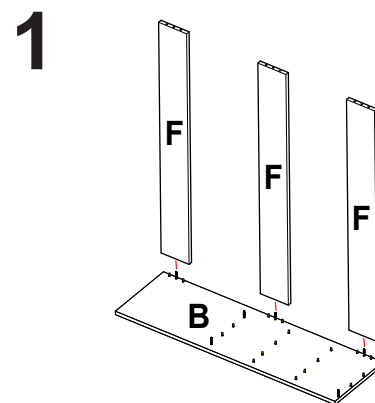


Ensure all cam locks are inserted with the arrow positioned facing the outside of the carcase.

Inserting the cam locks


Insert the cam locks into the holes in the top (**C**) and bottom (**D**) fixed shelves, and back rails (**F**).

Using a screwdriver, hand-tighten each cam lock to engage the expanding cam dowels and securely tighten the unit together.

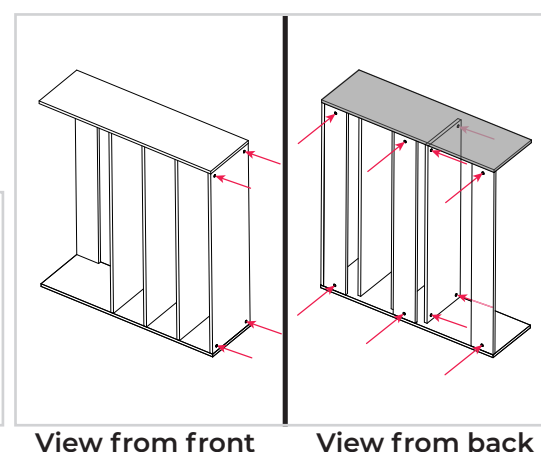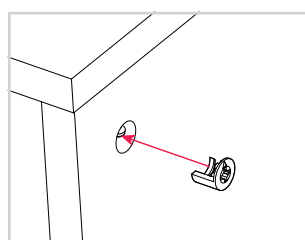

Rotating the unit

Lift the unit and carefully rotate it until it is resting on its top fixed shelf.

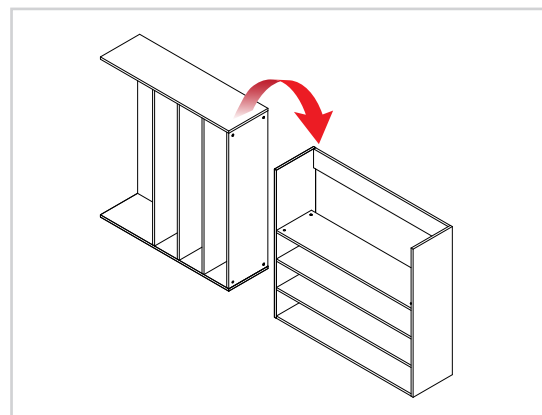


Measuring the back panels

Step 1 - Insert one of the decor panels into the dresser, taking care not to damage it.

Step 2 - Mark the bottom overhang of the decor panel against the back of the dresser. Masking tape can be added to make the marking more visible.


Repeat this process for the second decor panel.

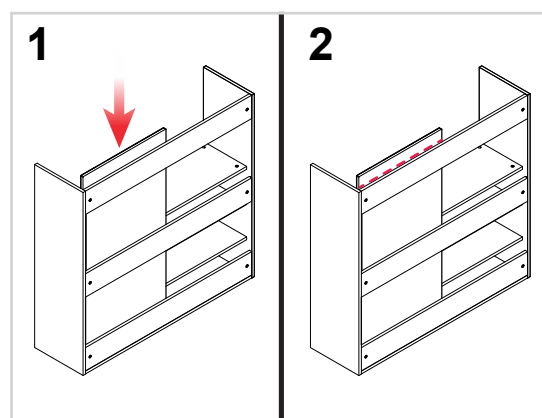

View from the back of the cabinet


Cutting the back panels

Remove both decor panels and cut them to the marked size.

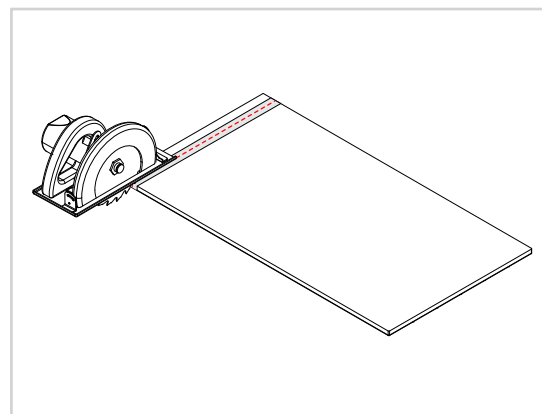

Installing the decor panels


Slide the decor panels (**G**) into position between the back rails and shelves (**E**) and (**D**), ensuring they are correctly aligned.

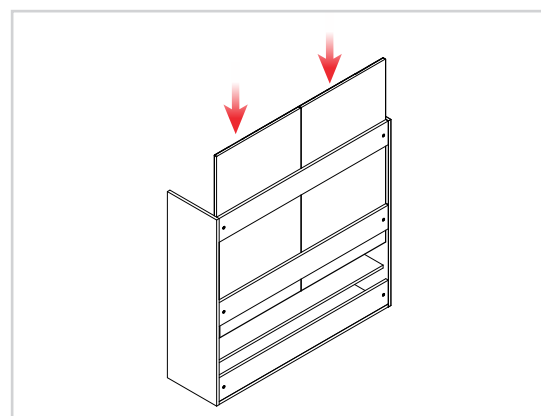

View from the back of the cabinet

Fixing the panel


Secure the decor panels by driving the supplied **30mm** screws through the back rails and into the panels.

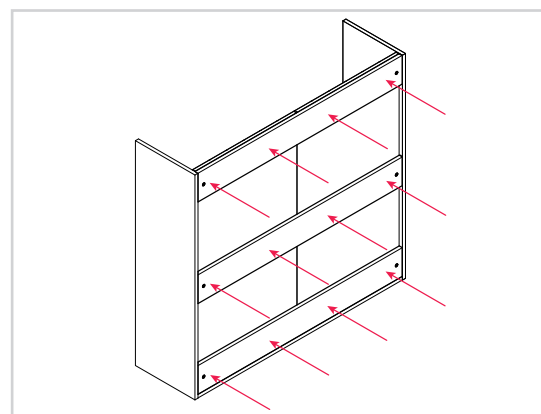

View from the back of the cabinet


Rotating the unit

Carefully rotate the unit into its upright position.

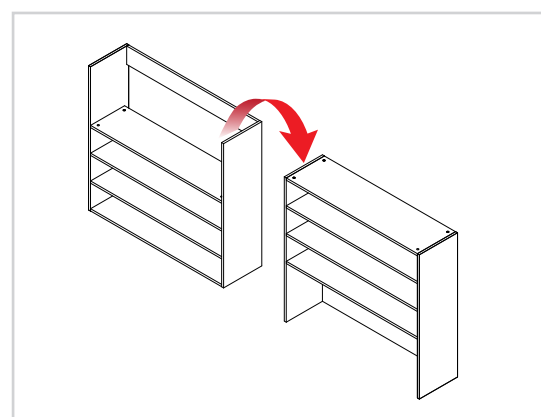

Fixing the brackets

Fix the anti-tip brackets to the unit using the supplied anti-tip brackets and **15mm** screws.

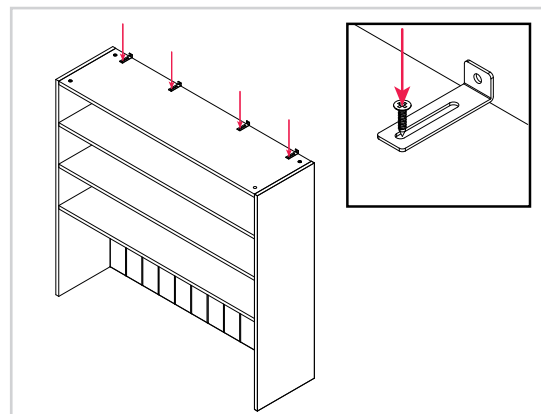


The sideboard table must be fixed securely to the wall before the feature dresser is installed. Refer to the sideboard table installation guide for fitting instructions.

No screws or wall plugs are provided for attaching the unit to the wall. This is due to variations in wall construction.

Securing the unit to the wall

Position the dresser on top of the sideboard table, ensuring it is correctly aligned and level.

Wall fixing screws are not supplied. Use suitable fixings for your wall type.

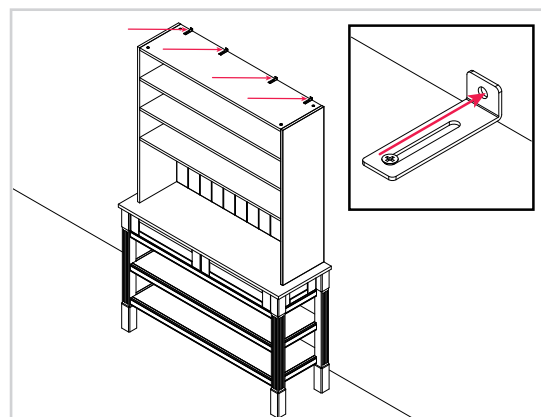

Cleaning the unit

Finally, the unit should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

