

AN-X10 ROUTERS: PPTP VPN SETUP

Use Case

Giving a specific device the ability to connect to a remote network.


Information

Because this is a Client to Gateway VPN, you need to enter the Username and Password you create in the PPTP client of the connecting computer.

Path - **Advanced** > **VPN** > **PPTP**

Create a New Tunnel

1. Click **Add a New Tunnel** and **Enable** it.
2. Give your tunnel a **Name**.
3. Enter a **Username** and **Password**. This will be entered in the PPTP client of the computer connecting with your tunnel.
4. Click **Apply**.

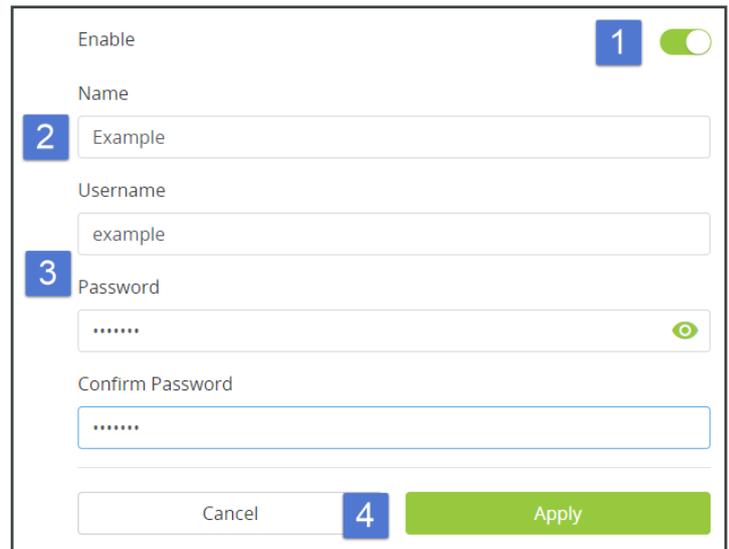

Record Your Public Address

You'll need a public address to enter in the PPTP client you're using to connect. You can either use a DDNS, or the Public IP address.


- The DDNS address can be found under **Settings > DDNS**.
- The Public IP address can be found under **Settings > WAN**.

Important - Because the Public IP address can change, we strongly recommend using the DDNS.

Configuring the VPN Client

This setup guide uses the built-in VPN client for Windows. A third party VPN setup would be similar.

1. In Windows, type **VPN** into the search bar, and select **VPN Settings**.
2. Click **Add a VPN Connection**, and select **Windows (built-in)** from the **VPN Provider** drop-down.
3. Enter a **Connection Name** to easily identify the VPN connection.
4. **Server Name or Address** is the Public IP or DDNS of the router.
5. Select **User name and password** from the **Type of Sign-in Info** drop-down.
6. Enter the **User name** and **Password** from your PPTP tunnel configuration, in their respective fields.
7. Click **Save**.

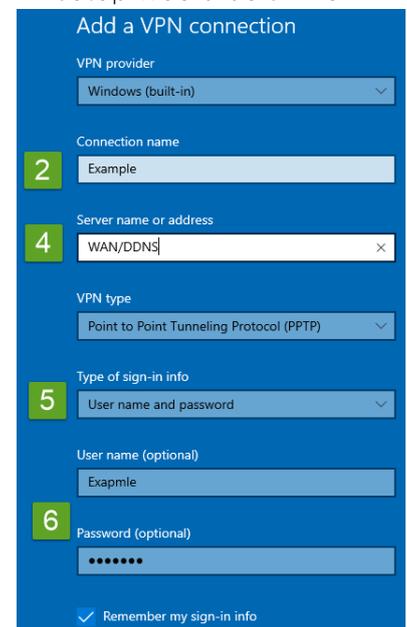

Firewall Settings

In **Settings** > **Firewall**, turn on **PPTP Passthrough**.




The screenshot shows the Firewall Settings page. The following settings are visible:

- Enable Firewall:
- Stateful Packet Inspection (SPI) ⓘ:
- DoS Prevention ⓘ:
- Block WAN Request ⓘ:
- Remote Management ⓘ:
- Port:
- Multicast Passthrough ⓘ:
- IPSec Passthrough:
- PPTP Passthrough:** (highlighted with a blue box)
- Enable DMZ ⓘ:

Connecting

To connect select the name of the **VPN Connection** and click the **Connect** button.

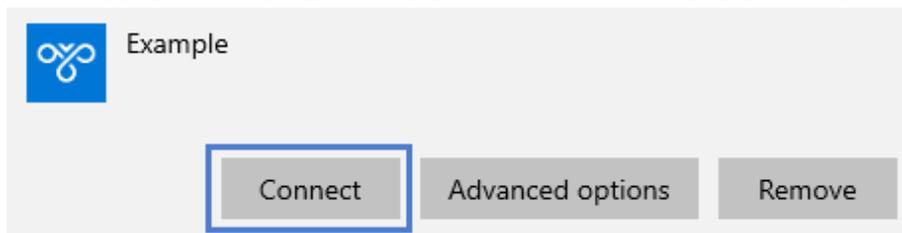

CONTACTING TECH SUPPORT

Phone: 866.838.5052 704.909.5229
Email: TechSupport@SnapAV.com