Options (Separately available parts)



Unit accessory


The following optional parts can be purchased separately from the Super Unit. These parts are to be mounted by the user.

Base plate set

These parts are used to fasten the Super Unit to a floor surface.

The bolts for mounting the unit to the floor should be prepared by the user.

Madalaada	Applicab	le model	Color	Accessories	
Model code	Unit type: Single pump type	Unit type: Double pump type	Coloi		
E-SUTPLATE-2	SUT03S1507-30 SUT03S3007-30 SUT06S6007-30 SUT10S8007-30 SUT03S1510-30 SUT03S3010-30 SUT03S3010-30 SUT03S4007-30 SUT06S3016-30	SUT06D4016-30 SUT06D6021-30 SUT10D6021-30 SUT10D8021-30 SUT16D8021-30	lvory white (Munsell code 5Y7.5/1)	(1) Base plate (4 pcs)(2) Tank fastening bolt (8 pcs)(3) Plain and spring washers for the above parts (8 pcs each)	

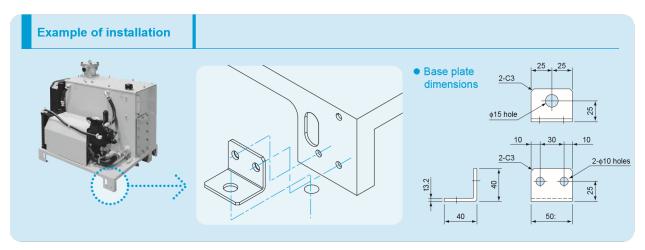

■ Level switch

Model code	Operating voltage	Operating current	Contact resistance	Protection class	Oil level triggering alarms	CE standard							
E-DLSN-130L-A-10					SUT03 (with 30 L tank) 21 L maximum Closed SUT06 (with 60 L tank) 50 L maximum Closed SUT10 (with 100 L tank) 83 L maximum Closed SUT16 (with 160 L tank) 135 L maximum Closed								
E-DLSN-130L-B-10	AC 100/110 V DC 24 V	0.02 A 0.05 A	1 Ω maximum	1 Ω maximum	1 Ω maximum	1 Ω maximum	1 Ω maximum IPG	·	SUT03 (with 30 L tank) 21 L maximum Open SUT06 (with 60 L tank) 50 L maximum Open SUT10 (with 100 L tank) 83 L maximum Open SUT16 (with 160 L tank) 135 L maximum Open	N/A			
E-DLSN-170L-A-10					SUT06 (with 60 L tank) 45 L maximum Closed SUT10 (with 100 L tank) 75 L maximum Closed SUT16 (with 160 L tank) 123 L maximum Closed								
E-DLSN-170L-B-10												SUT06 (with 60 L tank) 45 L maximum Open SUT10 (with 100 L tank) 75 L maximum Open SUT16 (with 160 L tank) 123 L maximum Open	

 $^{^{\}star}$ Directly mountable on the Rc1/2 option port on the top face of each tank.

■ Temperature switch

Model code	Operating voltage	Operating current	Contact resistance	Protection class	Oil level triggering alarms	CE standard
E-MQT83PD-L60X	-10 AC 100 \ DC 24 V		30 mΩ maximum	IP65	60°C	N/A

^{*} Directly mountable on the Rc3/8 option port on the top face of each tank.

■ Thermometer

Model code	Thermometer specification	Temperature indication range	Size
E-RBT-100-200L	Bimetal type	0 to 100°C	φ45

■ Micro separator

Model code	Size		
E-MSB-110	110 × 60 × 30		

Bracket/Piping Set for Manifolds

In order to install a control system on the Super Unit, select a bracket and piping set for the manifold according to the control system's size and number of series. Please prepare a manifold block separately.

Super Unit			Installation of 02 Size Control Systems				
Madalaada			Manifold bracket	Piping set			
Model code	Tank capacity	Return filter	Model code	Model code	Part Configuration		
SUT03S1507-30				E-SUT03S1507N-PIPE-02			
SUT03S1510-30			E-SUT03BASE-402 (Maximum installable series : 4)	E-SUT03S1510N-PIPE-02			
SUT03S1516-30			[Mountable manifold blocks] BT-102-50 (1 series) to BT-402-50 (4 series)	E-SUT03S1516N-PIPE-02	1		
SUT03S3007-30	30 L	Not provided	or BT-102-50-140 (1 series) to BT-402-50-140 (4 series)	E-SUT03S3007N-PIPE-02			
SUT03S3010-30				E-SUT03S3010N-PIPE-02			
SUT03S4007-30				E-SUT03S4007N-PIPE-02			
SUT06S3016-30			E-SUT06BASE-302 (Maximum installable series : 3)	E-SUT06S3016F-PIPE-02	2		
SUT06S6007-30	60 L		[Mountable manifold blocks]	E-SUT06S6007F-PIPE-02			
SUT06D4016-30	60 L		BT-102-50 (1 series) to BT-302-50 (3 series)	E-SUT06D4016F-PIPE-02			
SUT06D6021-30		Provided	BT-102-50-140 (1 series) to BT-302-50-140 (3 series)	E-SUT06D6021F-PIPE-02			
SUT10D6021-30		Fiovided	E-SUT06BASE-602 (Maximum installable series : 6)	E-SUT10D6021F-PIPE-02	3		
SUT10S8007-30	100 L		[Mountable manifold blocks] BT-102-50 (1 series) to BT-602-50 (6 series)	E-SUT10S8007F-PIPE-02			
SUT10D8021-30			or	E-SUT10D8021F-PIPE-02			
SUT16D8021-30	160 L		BT-102-50-140 (1 series) to BT-602-50-140 (6 series)	E-SUT16D8021F-PIPE-02			

Super Unit			Installation of 03 Size Control Systems			
Model code	Tank associtive Datum filter		Manifold bracket	Piping set		
woder code	Tank capacity	Return filter	Model code	Model code	Part Configuration	
SUT03S1507-30				E-SUT03S1507N-PIPE-03		
SUT03S1510-30				E-SUT03S1510N-PIPE-03		
SUT03S1516-30			E-SUT03BASE-203 (Maximum installable series : 2) [Mountable manifold blocks]	E-SUT03S1516N-PIPE-03		
SUT03S3007-30	30 L	Not provided	BT-103-40 (1 series), BT-203-40 (2 series)	E-SUT03S3007N-PIPE-03		
SUT03S3010-30				E-SUT03S3010N-PIPE-03		
SUT03S4007-30				E-SUT03S4007N-PIPE-03		
SUT06S3016-30				E-SUT06S3016F-PIPE-03	2	
SUT06S6007-30	60 L		E-SUT06BASE-203 (Maximum installable series : 2)	E-SUT06S6007F-PIPE-03	3	
SUT06D4016-30	00 L		[Mountable manifold blocks]	E-SUT06D4016F-PIPE-03	<u>(4)</u>	
SUT06D6021-30		Provided	BT-103-40 (1 series), BT-203-40 (2 series)	E-SUT06D6021F-PIPE-03		
SUT10D6021-30		Provided	E-SUT06BASE-403 (Maximum installable series : 4)	E-SUT10D6021F-PIPE-03		
SUT10S8007-30	100 L		[Mountable manifold blocks]	E-SUT10S8007F-PIPE-03	3	
SUT10D8021-30			BT-103-40 (1 series), BT-403-40 (4 series)	E-SUT10D8021F-PIPE-03		
SUT16D8021-30	160 L			E-SUT16D8021F-PIPE-03		

Component parts


Manifold bracket

Model code	Maximum installable series	Accessories						
E-SUT03BASE-402	4-series			Hexagon socket head cap				
E-SUT06BASE-302	3-series	,	1 pc. 4 pcs. 4 pcs.	bolt for mounting manifold				
E-SUT06BASE-602	6-series			(M8 × 85) 2 pcs.				
E-SUT03BASE-203	2-series			Hexagon socket head cap				
E-SUT06BASE-203	2-series		·	bolt for mounting manifold				
E-SUT06BASE-403	4-series			(M8 × 105) 4 pcs.				



Piping set



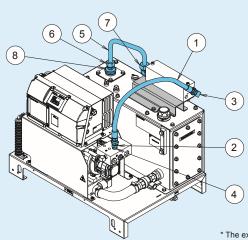

 $\ensuremath{^{\star}}$ The external shape differs depending on the model.


• For installing 02 size control systems

Model code Quantity Tightening torque (N·m) Hydraulic hose 54.0 to 66.0 2 Hose adaptor (straight) 43.0 to 47.5 43.0 to 47.5 3 Hose adaptor (elbow) E-SUT03S1507N-PIPE-02 1 E-SUT03S1510N-PIPE-02 E-SUT03S1516N-PIPE-02 5 Steel pipe 100.0 to 120.0 E-SUT03S3007N-PIPE-02 E-SUT03S3010N-PIPE-02 6 28.5 to 33.0 Steel piping joint (straight) Steel piping joint (elbow) 28.5 to 33.0 Bushing 95.0 to 110.0 9 Installation guide Hydraulic hose 54.0 to 66.0 Hose adaptor (straight) 64.0 to 70.0 Hose adaptor (elbow) 43.0 to 47.5 E-SUT03S4007N-PIPE-02 5 Steel pipe 100.0 to 120.0 6 Steel piping joint (straight) 28.5 to 33.0 Steel piping joint (elbow) 28.5 to 33.0 8 Bushing 95.0 to 110.0 9 Installation guide

• For installing 03 size control systems

•		•		
Model code		Name	Quantity	Tightening torque (N·m)
	1	Hydraulic hose	1	54.0 to 66.0
	2	Hose adaptor (straight)	1	43.0 to 47.5
E-SUT03S1507N-PIPE-03	3	Hose adaptor (elbow)	1	64.0 to 70.0
E-SUT03S1510N-PIPE-03	4	Bushing	1	110.0 to 120.0
E-SUT03S1516N-PIPE-03	5	Steel pipe	1	247.0 to 286.0
E-SUT03S3007N-PIPE-03	6	Steel piping joint (straight)	1	95.0 to 110.0
E-SUT03S3010N-PIPE-03	7	Steel piping joint (elbow)	1	57.0 to 66.0
	8		_	
	9	Installation guide	1	
	1	Hydraulic hose	1	108.0 to 132.0
	2	Hose adaptor (straight)	1	64.0 to 70.0
	3	Hose adaptor (elbow)	1	110.0 to 120.0
	4		_	
E-SUT03S4007N-PIPE-03	5	Steel pipe	1	247.0 to 286.0
	6	Steel piping joint (straight)	1	95.0 to 110.0
	7	Steel piping joint (elbow)	1	57.0 to 66.0
	8		_	
	9	Installation guide	1	



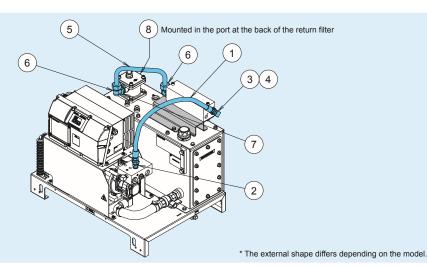

• For installing 02 size control systems


•				
Model code		Name	Quantity	Tightening torque (N·m)
	1	Hydraulic hose	1	54.0 to 66.0
	2	Hose adaptor (straight)	1	43.0 to 47.5
	3	Hose adaptor (elbow)	1	43.0 to 47.5
	4		_	
E-SUT06S3016F-PIPE-02	5	Steel pipe	1	100.0 to 120.0
	6	Steel piping joint (elbow)	2	28.5 to 33.0
	7	Bushing	1	57.0 to 66.0
	8	Plug	1	95.0 to 110.0
	q	Installation quide	1	

• For installing 03 size control systems

Model code	Name		Quantity	Tightening torque (N·m)
	1	Hydraulic hose	1	54.0 to 66.0
	2	Hose adaptor (straight)	1	43.0 to 47.5
	3	Hose adaptor (elbow)	1	64.0 to 70.0
	4	Bushing	1	110.0 to 120.0
E-SUT06S3016F-PIPE-03	5	Steel pipe	1	247.0 to 286.0
	6	Steel piping joint (elbow)	2	95.0 to 110.0
	7		_	
	8	Plug	1	95.0 to 110.0
	9	Installation guide	1	

Piping set

Part Configuration 3

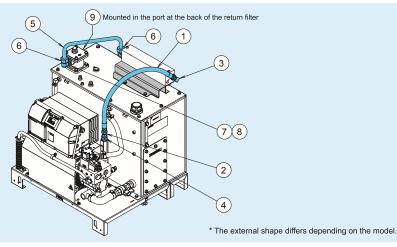

• For installing 02 size control systems

Model code	Name		Quantity	Tightening torque (N·m)
	1	Hydraulic hose	1	54.0 to 66.0
	2	Hose adaptor (straight)	1	64.0 to 70.0
	3	Hose adaptor (elbow)	1	43.0 to 47.5
E-SUT06S6007F-PIPE-02	4	High-pressure bushing	1	110.0 to 120.0
E-SUT06D4016F-PIPE-02	5	Steel pipe	1	100.0 to 120.0

5 100.0 to 120.0 Steel pipe E-SUT06D6021F-PIPE-02 6 Steel piping joint (elbow) 2 28.5 to 33.0 E-SUT10D6021F-PIPE-02 7 1 57.0 to 66.0 Low-pressure bushing 8 9 Plug 1 95.0 to 110.0 10 Installation guide 1 Hydraulic hose 54.0 to 66.0 2 Hose adaptor (straight) 43.0 to 47.5 43.0 to 47.5 3 Hose adaptor (elbow) High-pressure bushing 110.0 to 120.0 E-SUT10S8007F-PIPE-02 5 Steel pipe 100.0 to 120.0 E-SUT10D8021F-PIPE-02 E-SUT16D8021F-PIPE-02 Steel piping joint (elbow) 28.5 to 33.0 6

9 Plug


Low-pressure bushing (small) 8 Low-pressure bushing (large)

10 Installation guide

• For installing 03 size control systems

Model code	Name		Quantity	Tightening torque (N·m)
E-SUT06S6007F-PIPE-03 E-SUT10D6021F-PIPE-03	1	Hydraulic hose	1	108.0 to 132.0
	2	Hose adaptor (straight)	1	110.0 to 120.0
	3	Hose adaptor (elbow)	1	110.0 to 120.0
	4		_	
	5	Steel pipe	1	247.0 to 286.0
	6	Steel piping joint (elbow)	2	57.0 to 66.0
	7		_	
	8		_	
	9	Plug	1	95.0 to 110.0
	10	Installation guide	1	
E-SUT10S8007F-PIPE-03 E-SUT10D8021F-PIPE-03 E-SUT16D8021F-PIPE-03	1	Hydraulic hose	1	108.0 to 132.0
	2	Hose adaptor (straight)	1	110.0 to 120.0
	3	Hose adaptor (elbow)	1	110.0 to 120.0
	4		_	
	5	Steel pipe	1	247.0 to 286.0
	6	Steel piping joint (elbow)	2	57.0 to 66.0
	7	Bushing	1	114.0 to 132.0
	8		_	
	9	Plug	1	142.5 to 165.0
	10	Installation guide	1	

Part Configuration 4

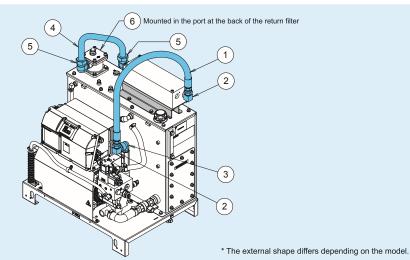

57,0 to 66.0

114.0 to 132.0

142.5 to 165.0

• For installing 03 size control systems

Model code	Name		Quantity	Tightening torque (N·m)
E-SUT06D4016F-PIPE-03 E-SUT06D6021F-PIPE-03	1	Hydraulic hose	1	108.0 to 132.0
	2	Hose adaptor (elbow)	2	110.0 to 120.0
	3	Female-male elbow	1	110.0 to 120.0
	4	Steel pipe	1	247.0 to 286.0
	5	Steel piping joint (elbow)	2	57.0 to 66.0
	6	Plug	1	95.0 to 110.0
	7	Installation guide	1	