

**HOLDEN CRUZE JG-JH
SEDAN 05/09 – 10/16**

PART NO.

UNT304

1. In the luggage area remove the retractable cover.
2. Remove floor cover and expose spare wheel.
3. Remove the L/H/S & R/H/S tool trays.
4. Remove the centre rear trim.
5. Remove the Passenger side rear trim to expose the connection for the 8 way connectors.
6. Disconnect the 8 way connectors.
7. Attach the wiring harness 8 way connectors to the corresponding vehicle 8 way connectors.
8. Mount the ECU unit to internal frame using the double sided tape on the ECU.
9. Run the White Earth wire to the Earth Bolt located close by.
10. Remove the Driver side rear trim to expose the connection for the 8 way connectors.
11. Disconnect the 8 way connectors.
12. On the Towbar Wiring Harness locate the Cable marked R/H/S.
13. Attach the wiring harness 8 way connectors to the corresponding vehicle 8 way connectors.
14. Route the cable back towards the L/H/S via the rear panel all the way to the R/H/S 8 way connector.
15. On the Towbar Wiring Harness locate the 1 way connector on the Green Wire.
16. Connect the 1 way connector from the Cable just routed to the green wire.
17. Locate a grommet at the rear of the vehicle or in the spare wheel well.
18. Pierce a hole in the middle to allow the towbar wiring harness to be fed through the grommet and out the other side of the vehicle.
19. Pull the wiring harness through the grommet to meet the required length.
20. Using cable ties secure the wiring harness to meet the required length.

Continued over page

**HOLDEN CRUZE JG-JH
SEDAN 05/09 – 10/16**

PART NO.

UNT304

21. Fit the required socket to the wiring harness and mount the plug to the desired position.
22. Run the remaining power wire to the battery. This can be run either under the trims on the passenger side and out through the fire wall. Or out through a grommet and under the vehicle and up into the engine bay.
23. If the power wire is run under the vehicle ensure the cable is tied so that no part hangs down.
24. Connect the fuse holder to the positive terminal on the battery.
25. Connect the power wire to the fuse holder.
26. Insert the 15amp fuse.
27. Replace the Passenger side rear trim.
28. Replace the Driver side rear trim
29. Replace the centre rear trim.
30. Replace the L/H/S & R/H/S tool trays.
31. Replace floor cover and expose spare wheel.
32. Replace the retractable cover.
33. Test towbar wiring with a trailer testing box.

