 
PART NUMBER: **T4T599**



<u>Toyota Rav 4 2013 onwards</u> Towing Capacity 1500 Kg / Ball Load 150 Kg Lug # L4120

- 1) Remove bumper bar.
 - a) Remove 4x 8mm screws in wheel arch and 1x10mm screw under mud flap.
 - b) Remove 2x 10mm screws behind tail gate.
 - c) Remove 6x scrivets from under bumper bar.
 - d) Unplug reverse sensor plug from behind LHS mud flap.
 - e) Carefully unclip bumper at the top of wheel arch and flex outwards to unclip from body.
- 2) Remove impact beam via 6x M10 bolts and discard.
- 3) Lower exhaust and remove L bracket from top of exhaust.
- 4) Remove shipping hook from LHS.
- 5) Lift towbar up over exhaust and fit to bottom of chassis rail using 4x M12 bolts & washers into captive nuts on bottom of chassis rail.
- 6) Fit 2x M8 bolts & washers into rear beaver panel.
- 7) Tighten all bolts to torque listing below.
- 8) Cut bumper:

Find centre of bottom of bumper and measure 45mm either side & 100mm up from bottom of bumper



90mm Bottom of bumper

- 9) Refit exhaust.
- 10) Refit Bumper.
- 11) Reconnect reverse sensors.
- 12) Fit ball mount with pin & clip supplied.
- 13) Fit door sticker supplied to door.





ECU MUST BE FITTED WITH THIS TOWBAR

ECU SOLD SEPARATELY

RECOMMENDED ASSEMBLY TORQUE LISTIN Diameter Grade 8.8 Bolt	
Diameter	Nm
M6	9.5
M8	21.7
M10	43.4
M12	77.3
M16	189.8

