



# avocor

## K SERIES USER MANUAL

for models AVK-5510 | AVK-5610 | AVK-7510 | AVK-8510 | AVK-9810

# TABLE OF CONTENTS

<b>IMPORTANT SAFETY INSTRUCTIONS</b>	<b>2</b>
<b>Battery Disposal</b>	<b>3</b>
<b>Precautions</b>	<b>4</b>
Product	4
Power and Plug	4
Power Cord and Signal Cable	4
Use Environment	4
Cleaning	5
<b>General Operation</b>	<b>5</b>
Switching On	5
Switching Off	6
<b>Troubleshooting</b>	<b>6</b>



## IMPORTANT SAFETY INSTRUCTIONS

The lightning with arrow symbols inside the equilateral triangle is designed to remind users that there is a non-insulating "dangerous voltage" inside the product casing, which may be strong enough to constitute a risk of electric shock.

1. To reduce the risk of electric shock, do not remove the cover (or back), as there are no user-repairable components inside. Transfer the repair to qualified personnel.
2. The exclamation mark inside the equilateral triangle is intended to alert users of important operation and maintenance instructions in the literature accompanying the device.
3. Do not install this device in enclosed or building spaces such as bookcases or similar devices, and maintain good ventilation in open spaces. The ventilation openings should not be impeded by items such as newspaper tablecloths, curtains, etc.
4. Before installing or operating the device, refer to the information on the external bottom casing for electrical and safety information.
5. The power plug/electrical pair is used as a disconnected device and should remain operable.
6. To reduce the risk of fire or electric shock, do not expose this device to rainy or damp environments. The device shall not drip or splash, and objects filled with liquid (such as vases) shall not be placed on the device.
7. Batteries (batteries or battery packs) should not be exposed to excessive heat, such as sunlight or sparks.
8. Do not place the device in an unstable position. The device may fall, causing serious personal injury or death. Many injuries, especially to children, can be avoided by taking simple preventive measures, such as:
  - Do not place open flames on the device, such as lighting candles.
  - The exclamation mark inside the equilateral triangle is intended to alert users of important operation and maintenance instructions in the literature accompanying the device.
  - Use cabinets or brackets recommended by the device manufacturer.
  - Only use furniture that can safely support the device.
  - Do not place the device on tall furniture (such as cabinets or bookcases) without fixing the furniture and device on suitable brackets. Do not place the device on the cloth or other materials between the device and the supporting furniture.
  - Educate children about the dangers of climbing onto furniture when coming into contact with the device or its control devices. If your existing device is retained and located, the same precautions should be applied as mentioned
9. Do not place open flames on the device, such as lighting candles.
10. Keep a minimum distance of 5cm around all edges of the device for sufficient ventilation.
11. Hanging the device on the wall.

Warning: this operation requires two people.

To ensure a safe installation, observe the following safety notes:

- Check that the wall supports the device's weight and mount assembly.
- Follow the mounting instructions provided. The device must be installed on a vertical wall.
- Make sure to use screws only suitable for the material of the wall.
- Ensure the cables are placed so there is no danger of tripping over them. All other safety instructions about our device are also applicable here.

## BATTERY DISPOSAL

The batteries used in this device contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to local laws or regulations. Do not dispose of batteries with regular household waste. For more information, please contact the local authority or the retailer where you purchased the device. All trademarks are the property of their respective owners, and all rights are acknowledged.



This device is a Class II or double-insulated electrical appliance. It has been designed not to require a safety connection to the electrical earth.



Always keep candles or other open flames away from this device to prevent a prolonged fire.



Correctly dispose of this device. This marking indicates that this device should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the device was purchased. They can take the device for environmentally safe recycling.

## PRECAUTIONS

Read all of the instructions before operating the device. Keep these instructions for future use.

### PRODUCT

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into the device through the cabinet slots, as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the device.
- Do not attempt to open the cabinet, as this may cause damage. No parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not scratch or mar the device screen
- Do not impact the device screen with hard pressure, as this may severely damage the screen.

### POWER AND PLUG

Unplug the device under the following conditions:

- If the device will not be used for a long period of time.
- If the power cord or the power outlet/plug is damaged.
- Follow the instructions to install and adjust the device. Adjust those controls that are covered in these operating instructions, as improper adjustment of other controls may result in damage. If this happens, unplug the device and refer to the service personnel.
- If the device is subject to impact or has been dropped to have the cabinet damaged.

### POWER CORD AND SIGNAL CABLE

- Do not allow anything to rest on or roll over the power cord and the signal cable.

- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

## USE ENVIRONMENT

- Do not place the device on an unstable cart, stand, or table.
- Place the device in a place that allows good ventilation.
- Do not use the device near damp and cold areas.
- Protect the device from overheating.
- Do not use the device near damp and cold areas.
- Protect the device from overheating.
- Keep the device away from direct sunlight.
- The device shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the device.
- Do not use the device near excessively dusty locations.

## CLEANING

- Wipe the screen and the cabinet with a soft cloth or special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen, as this may damage the surface of the device.

## GENERAL OPERATION

### SWITCHING ON

- Insert two batteries into the remote control.
- Precautions on using batteries:
  - Only use the battery types specified.

- o Make sure you use the correct polarity.
- o Do not mix new and used batteries.
- o Do not use rechargeable batteries.
- o Do not expose batteries to excessive heat such as sunshine or fire, or throw them in a fire, recharge them, or try to open them, as this could cause them to leak or explode.
- o Remove the batteries from the remote control if you have not been using it for a long period of time.
- Connect the supplied power cable to the device first. Then, connect the power cable to the power outlet.
- The device should only be connected to an AC power supply. It must not be connected to the DC supply under any circumstances, as there is a risk of electric shock.
- When powered on, the device will be turned on directly or standby.

**Note:** For some models, switch the device on by pressing the power button. The device is in standby mode if the power indicator lights up red. Press the button on the remote control or the “on” button on the device to turn on.

## SWITCHING OFF

- To put the device into standby mode, press the button on the remote control or the device. The device remains powered on but consumes little energy.
- Unplug the mains socket from the mains outlet to switch off the device.

**Note:** For some models, press the power button to switch off the device.

## TROUBLESHOOTING

### NO PICTURE, NO SOUND

- Check if the fuse or circuit breaker is working.
- Plug another electrical device into the outlet to make sure it is working or turned on.
- The power plug is in bad contact with the outlet.

- Check the signal source

### **No COLOR**

- Change the color system.
- Adjust the saturation.

### **THE REMOTE CONTROL DOES NOT WORK**

- Change the batteries.
- Batteries are not installed correctly.
- The main power is not connected.

### **No PICTURE, NORMAL SOUND**

- Adjust the brightness and contrast.

### **NORMAL PICTURE, NO SOUND**

- Press the Vol+ button to increase volume.
- Change the sound system.
- Volume is set to mute; press the mute button to restore sound.

### **IF THE DEVICE CRASHED**

- Press the Power button to turn off the device; then press the Power button again to reset the device.
- Unplug the power cord, then press the Power button to reset the device.

**Note:** Please contact sales if these two methods cannot be resolved.