

MAXHUB UC M40 User Manual

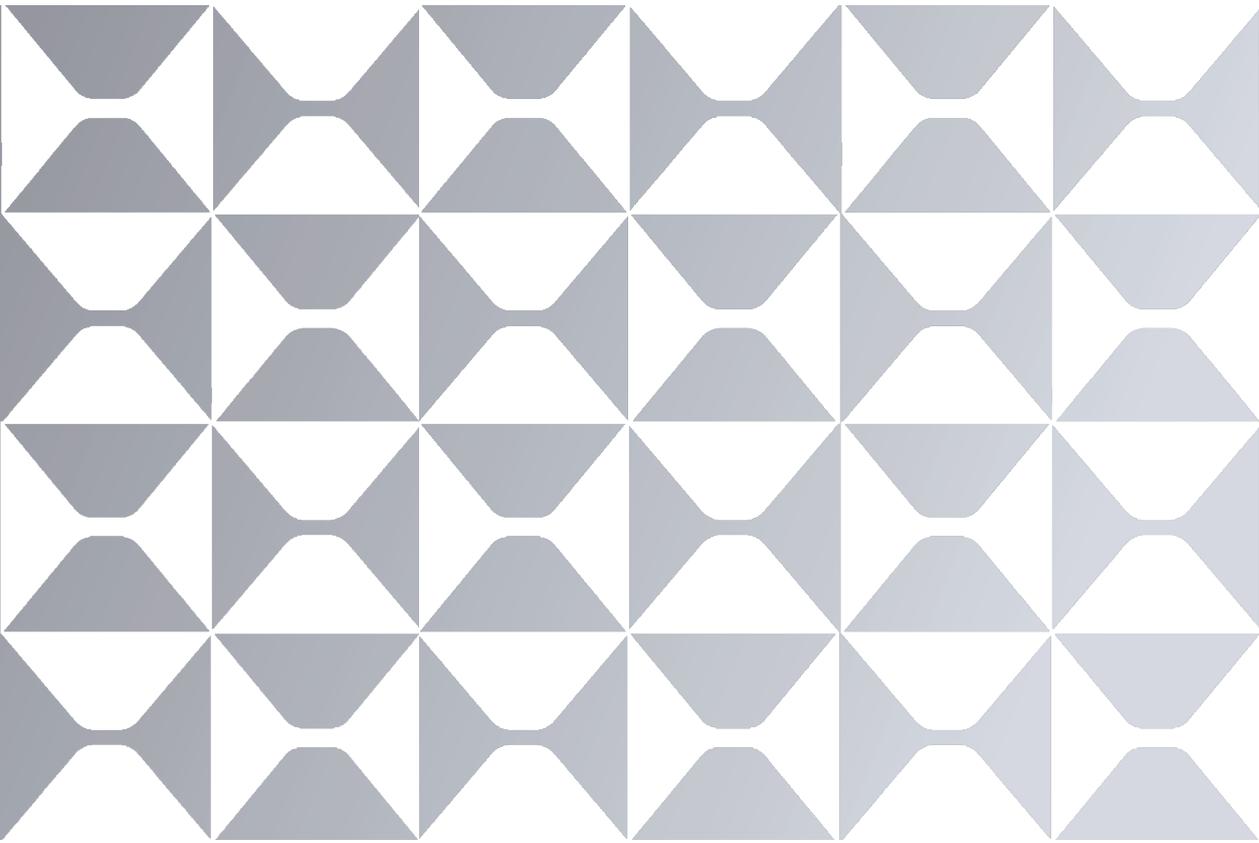


TABLE OF CONTENTS

1. Safety Warnings	02
2. Product Images	03
3. Connection	05
4. Hardware Mode	06
5. Pro Mode	08

1. Safety Warnings

Before using this equipment, please read carefully and observe the following precautions to avoid dangerous or improper operations.

Working Environment

- ① DO NOT expose the camera to any heat source (such as electric heaters).
- ② Use it in an environment with a temperature of 0~40°C and humidity of 10%~90%RH.
- ③ DO NOT place the product in dusty and humid environments to avoid internal circuit fault.
- ④ DO NOT expose the equipment directly to the sun to avoid a rising equipment temperature that affects the normal use of the equipment

Children Safety

- ① The product and its accessories may be composed of some small parts. Please place them beyond the reach of children to avoid potential dangers.
- ② The lens of this equipment is made of glass. If it is damaged, please handle it carefully to avoid being scratched by broken glass and keep it away from children.

Power Supply

- ① If an external power supply is to be used, follow all safety guidelines for third-party power supply devices.

Waterproofness

- ① The product is not waterproof. Please keep it dry.

Repair and Maintenance


- ① Please contact professional service personnel for maintenance services
- ② When the equipment is damaged, please do not disassemble it for repair without permission. Instead, please call the Customer Service Center for repair.
- ③ DO NOT insert any sharp or pointed object into the device.
- ④ DO NOT drop or strike the device to avoid damage.
- ⑤ The temperature of the equipment may rise during operation, which is a normal phenomenon. In this case, turn off the device and let it cool before trying to use it again.

Statement

- ① Intellectual property rights statement: The hardware and software of this product are patented. Anyone who reproduces this product or the content of the Manual without the authorization of the Company shall assume legal liabilities.
- ② The Manual is for reference only, and the actual functions of the product are subject to your order and the product you received.
- ③ All images are for illustration purpose only and may not reflect the actual product. The Company reserves the right Add Packaging content design of the product without prior notice.

2. Product Images



1. Packaging content

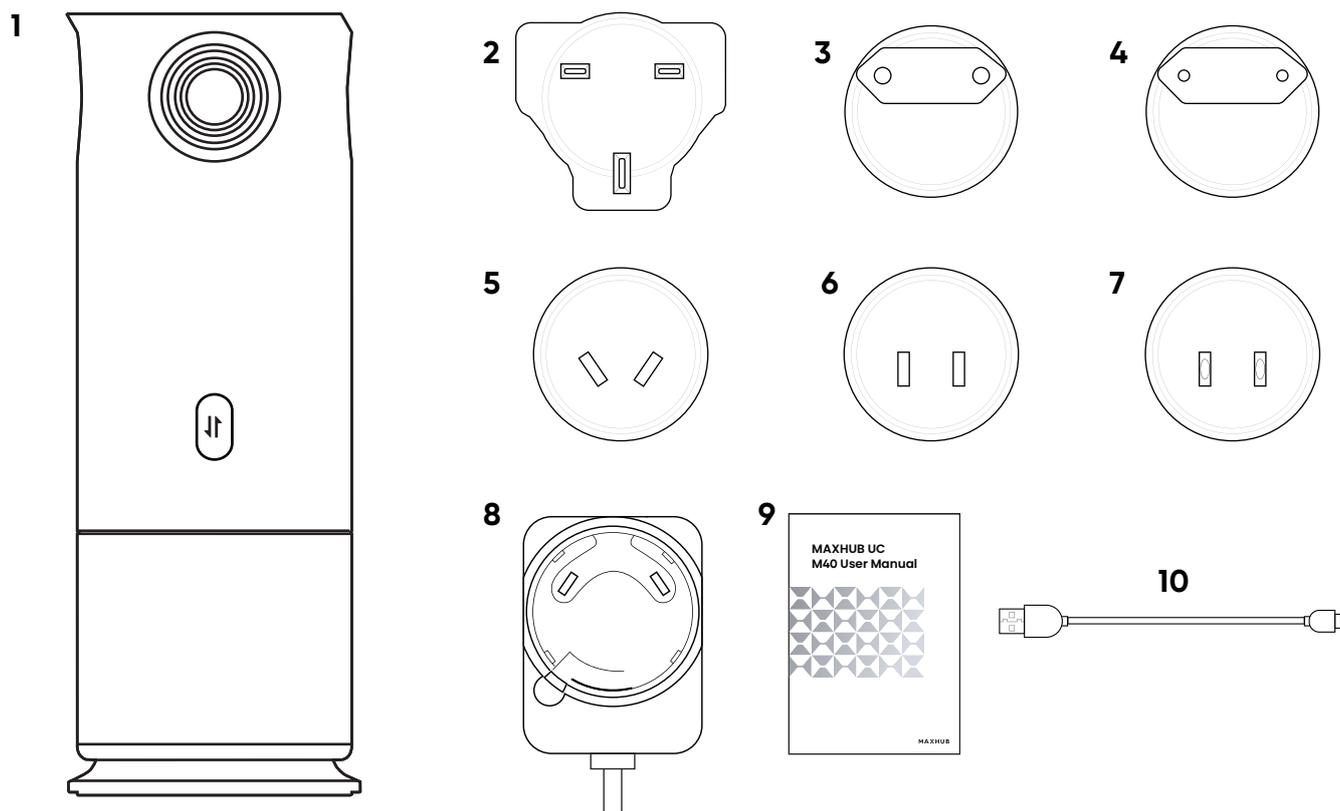

1	UC M40	2	UK
3	EU	4	EU
5	AU	6	CN


7	US	8	Power Adaptor (12V/1A)
9	UC M40 User Manual		
10	USB 2.0 Cable (Type-A to Type-C) 1.5 meter		

2. Appearance

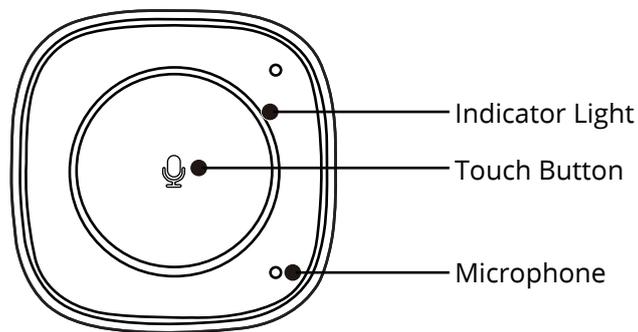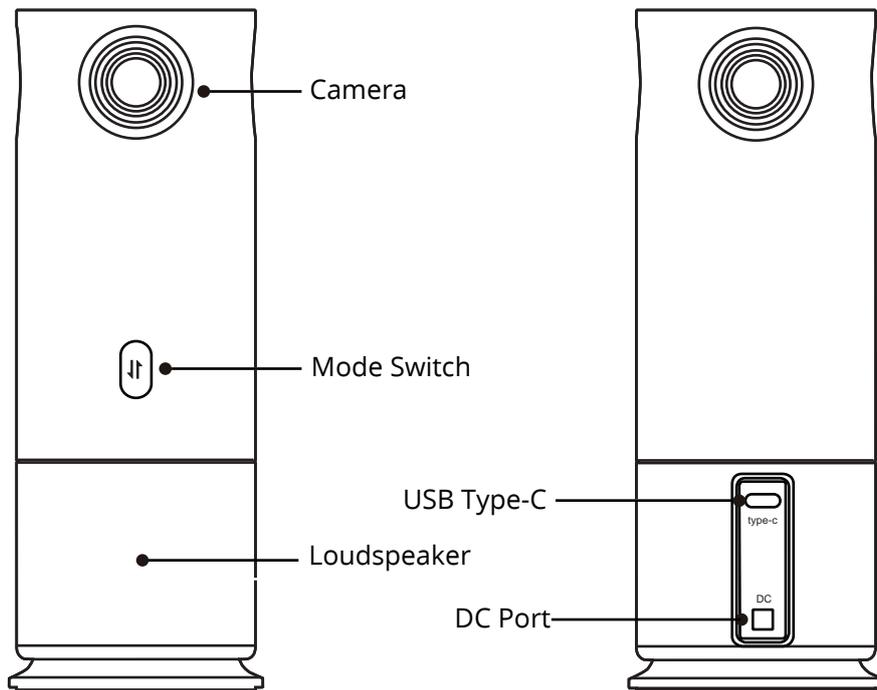

3. Connection

Please connect the device according to the following figure before use.

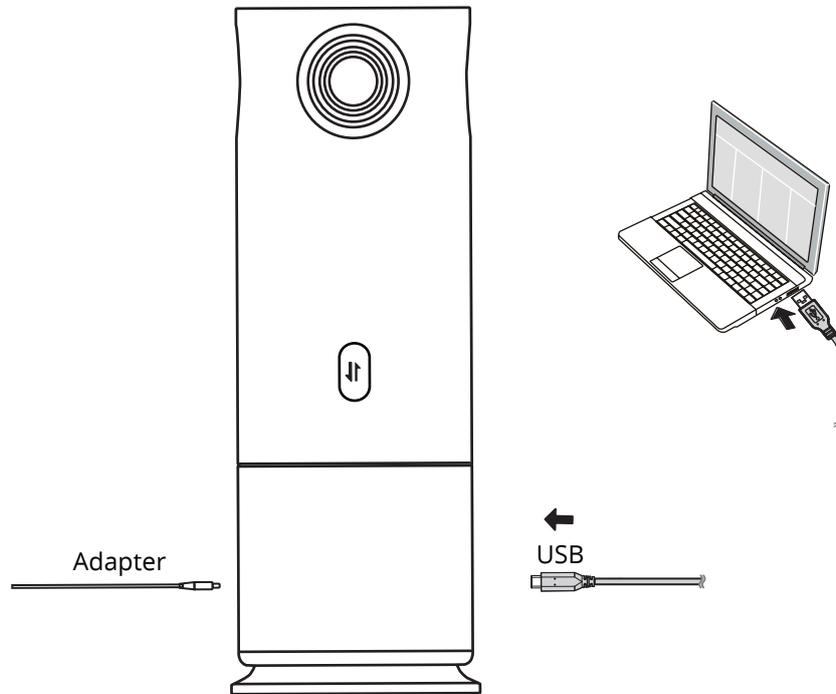


- ① The video conference equipment is connected to the 12V/1A adapter and automatically starts up.
- ② Connect the USB cable to the computer.
- ③ Select the following modes and follow the instructions to get started.

Note:


- (1) If the 12V/1A power adapter isn't being utilized, the camera would only provide USB video output. Plug in the power adapter to get full access to Video and Audio.
- (2) USB 3.0 (5V / 900 mA) or above must be used as the power supply source.

4. Hardware Mode :

- ① Connect the USB cable to the computer.

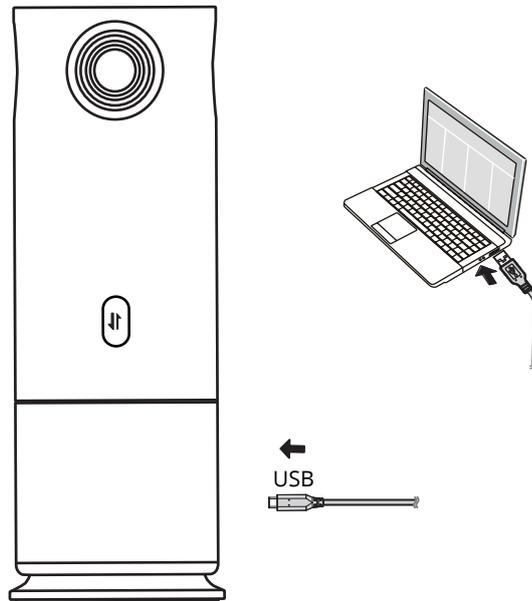


- ② Open Video Platforms such as Tencent Meeting, Zoom and Microsoft Teams, and select MAXHUB UC M40 as the main camera source.
- ③ Select UC M40 as the main Speaker and Microphone source from your Video Platform and start your Video Meeting. Volume can be adjusted from your computer directly.
- ④ Press the  button, select the display layout to be output (Panoramic / Compose / Grid / Portrait / Split / AI Speaker Tracking (Dual) / AI Speaker Tracking (Pano) modes).

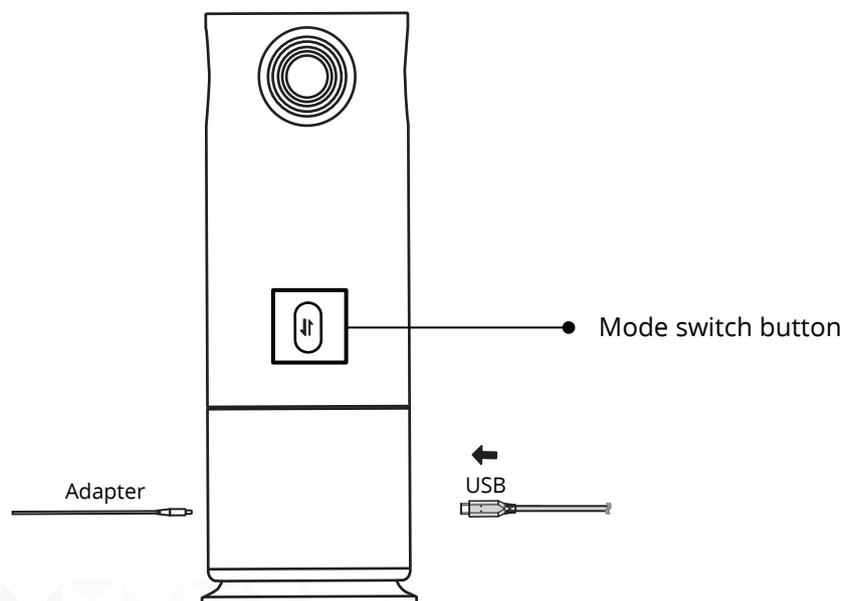

⑤ Touch  to mute/unmute microphone, status light:

- White: microphone ON;
- Red: microphone OFF;
- The blue LED "circle" indicates the direction of the sound source.

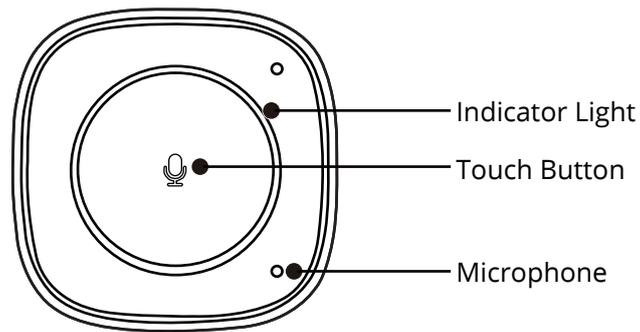


⑥ Equipment power off.

*Note: Some video conferencing platforms require you to select the MAXHUB UC M40 camera and microphone.

5. Pro Mode

① Connect the USB cable to the computer.

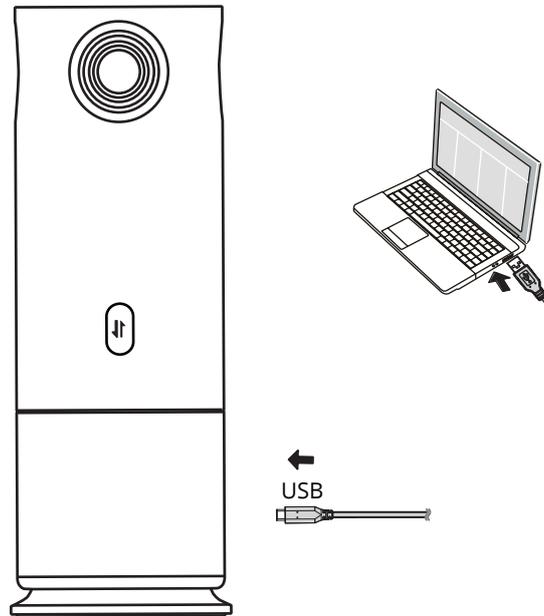


② Go to your computer disk, open the PanoCAM Studio folder, and double-click on the PanoCAM Studio Setup_1.0.2930.0 to install. (You can refer to the Quick start guide-English-f0965 in the PanoCAM Studio folder for more detail.)

*Note: If you are on a MacOS, install the PanoCAM Studio Installer_1_3107.2.pkg

Name	Date modified	Type	Size
autorun	7/27/2022 7:14 AM	Setup Information	1 KB
PanoCAM Studio_Installer_1.3107.2.pkg	7/26/2022 5:20 PM	PKG File	58,294 KB
PanoCAMStudioSetup_1.0.2930.0	7/26/2022 5:20 PM	Application	50,762 KB
Quick Start Guide-Chinese-b3fae	7/15/2021 7:01 PM	Adobe Acrobat 文档	868 KB
Quick Start Guide-English-f0965	7/15/2021 7:01 PM	Adobe Acrobat 文档	1,880 KB
studio	10/29/2021 4:26 PM	Icon	107 KB

③ Open the PanoCAM Studio Software and select the desired "Display Layout" as well as all other necessary controls. (Compose/ Manual/ Body-fit/ Discussion/ Grid/ Presentation/ Speaker modes).

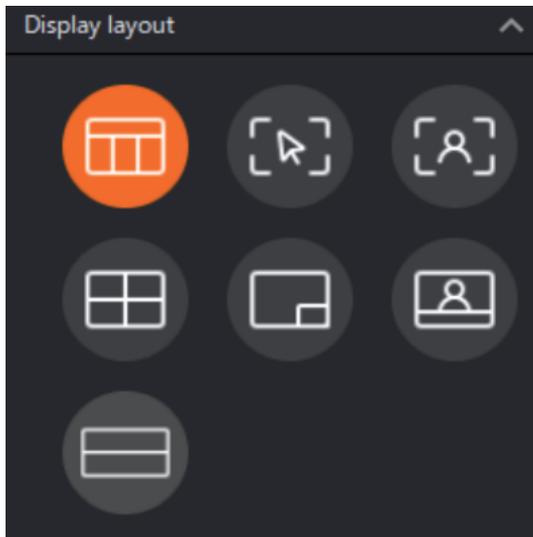

B. Angle Adjustment


choose:

FOV-Top: Vertical+ 45° Up/ -15° Down


FOV-Center: Vertical ± 30°

FOV-Down: Vertical+ 20° Up/ -40° down

A. Select the Display layout to be output.

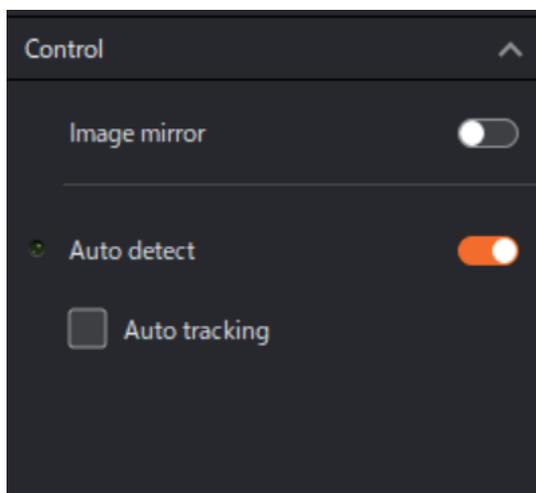


C. Turn Image mirror/ Auto detect/ Auto tracking on/off.

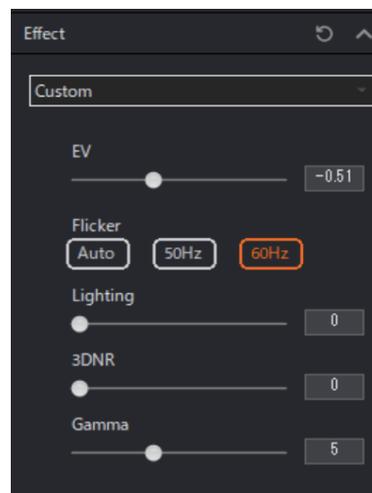

D. Select the required video effect.
Or customizing the parameters in custom mode.

④ Touch  to mute/unmute microphone, status light:

- White: microphone ON;
- Red: microphone OFF;
- The blue LED "circle" indicates the direction of the sound source.

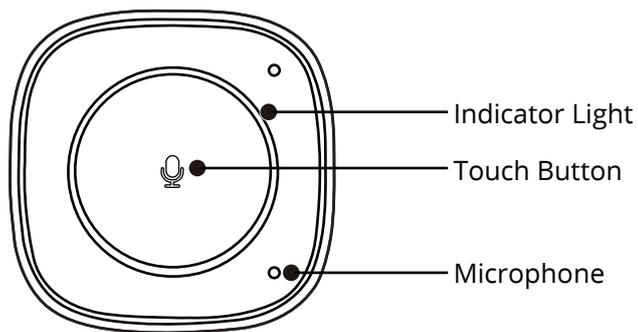

⑤ Open Video Platforms such as Tencent Meeting, Zoom and Microsoft Teams, and select Studio Camera as the main camera source.

⑥ Select UC M40 as the main Speaker and Microphone source from your Video Platform and start your Video Meeting. Volume can be adjusted from your computer directly.

⑦ Equipment power off.

*Note: Some video conferencing platforms require you to select a Studio camera and microphone

MAXHUB

