



OPS72A Quick Install Guide

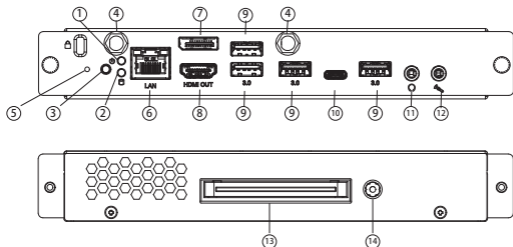


Port	Function
1 POWER_LED	1 x Power LED (Runing: Red LED Blinking)
2 SSD_LED	1 x SSD LED (Runing: Green LED Blinking)
3 Power Button	1 x Power Button
4 Antenna	2 x 2.4G/5G Dual frequency antenna
5 Reset Button	1 x Reset Button
6 LAN	1 x RJ45 (10/100/1000M)
7 DP OUT	1 x DP1.4
8 HDMI OUT	1 x HDMI 2.0
9 USB 3.0	4 x USB 3.0
10 USB Type-C	1 x USB Type-C
11 Mic In	1 x Mic In
12 Audio OUT	1 x Audio OUT
13 OPS Slot	1 x OPS Slot (80 Pin)
14 DC Power	1 x DC Jack (12~19V DC)

OPS PC Quick Install Guide


Step 1: Remove OPS PC backplane

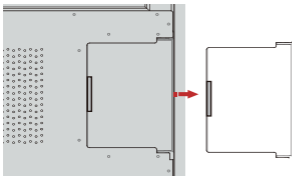

Step 2: Insert OPS PC into the panel slot

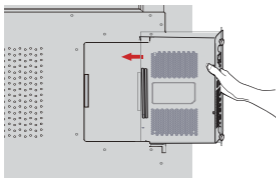

Step 3: Fix the screws or mounting ears and tighten it

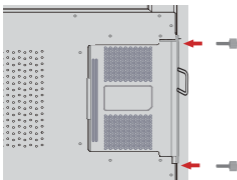

Step 4: Press the power button to turn it on and operate like a regular computer



1. Do not plug or unplug the OPS PC when powered on. Please make sure to plug or unplug the OPS PC after disconnecting the power of the large screen.
2. Do not use OPS PC without tightening the screws or missing screws.
3. Do not cover the vents of OPS PC with tape, paper, textiles, etc.;
4. When using for the first time, if the screen is blurred, flickering, no signal, etc. after booting, OPS PC may not be installed correctly; please check the installation status or reinstall it.