

manual.pdf - Adobe Acrobat Reader DC (32-bit)

Файл Редактирование Просмотр Подпись Окно Справка

Главная Инструменты manual.pdf x Войти

Добавить комментарий

96 / 138

Заккрыть

Figure 6-2. Shows QC devices on the Infeed/Waxer & Transfer

6.1.2 Necker Die Removal

Changing a Necking Die requires a 60 degree rotation of the Die retention collar. The Collar remains attached to the die housing. Twist the knurled Collar until the tabs align and pull the die out of the holder. Refer to Figure 6-3, page 6-2.

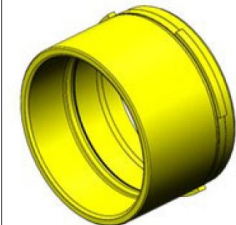

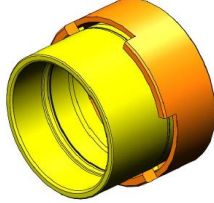
Example of Die	Example of Die Collar	Assembled
		

Figure 6-3. Necker Die

March 2021

Installation, Operation, and Maintenance Manual

6:13 03.03.2021 ENG