

www.rohlhome.com



Five-Hole Bidet Faucet

- ROHL Country Bath Collection
- A1460LM (Metal Levers)
- A1460LP (Porcelain Levers)
- A1460XM (Cross Handles)
- A1460LH (Hex Metal Levers)
- A1460LC (Swarovski® Crystal Levers)
- A1460XC (Swarovski® Crystal Cross Handles)

FEATURES	COLORS/FINISHES	WARRANTY
 Operation: Water will flow through the molded spout in the bowl or through the spout and vertical spray at the same time. The water from the spout never goes off. Diverter and vacuum breaker are on the center column. Rough dimensions will fit Kohler and TOTO bidets. 4 x 1 1/8" cutouts 	 Polished Chrome Polished Nickel Satin Nickel Tuscan Brass Inca Brass 	 Limited Lifetime* * No Warranty on Tuscan Brass Finish
	A1460XM	A1460LH
A1460LM & A1460LP	A1460LC	A1460XC

Rohl. Authentic Luxury for Kitchen and Bath®

www.rohlhome.com

A1460 Spare Parts (metoi handie) Bidet Top Cap 18.09.017 Bidet Top Screw 18.09.016 C7578 \bigcirc Bidet Trim Cap (Specify) Pop-up Knob 18.09.018 Bidet Escutcheon Pop-up Guide 18.09.019 18.09.004 Metal Washer C7223 囹 Lock-nut C7672P - 🐨 C7627/6 C7670 (metal liana C7550/316 -- 🗍 C7225 Bidet Diverter. Ω C7075/Right (cartridge Cold for C7618-C7670 C7693) രള്രം Valve with Actuator Rod C7075/Right (cartridge Hot for all models) 7632 Vacuum Breaker 見 18.09.020 C7224 C7693 Clip Seal C7582 Aerator Spray Assembly -Rubber Washer Steel Washer Locknut Actuator C7260.26 18.09.003 Supply Hose 1/2" x 1/2" 18.09.021 Nut 8 C7419.CD P-P Spray Hose 1/2" x 3/8" 18.09.022

Consult your local ROHL showroom for additional information and specifications. For complete warranty details and a list of showrooms, go to www.rohlhome.com.

Rohl, Authentic Luxury for Kitchen and Bath®

Installation Instructions

ΑΤΤΕΝΤΙΟΝ Maximum fixing nut torque value = 10 lbf.ft. - Assemble the cap (H), the handle (G) and the indication plate (F). - Repeat this procedure for the cold valve. - Connect the hot and cold valve body (I) to the two holes cross (B) using the flexible hoses (L) and placing the washer between the two parts. Connect hot and cold water supplies to side valve inlet. - Ensure all connections are firmly tightened. c - Before use Turn on the Hot and Cold supplies to the faucet. Maximum temperature for Hot water supply to the faucet is 145° F. Minimum recommended pressure is 15 psi – Maximum recommended pressure is 75 psi. Check the installation carefully for leaks. If further building work is to be carried out in the vici of the faucet, it should be covered to prevent paint, adhesive, etc. from damaging the surface. Cleaning Clean the chromium plated surfaces with soap and water or with mild liquid detergent. Do not use Care and use for finishes Country Bath Products are all authentic finishes that have not been coated with any product. After each use, pat the fixture down to remove any excess water. This will prevent any water spotting or mineral build-up. Use only soft liquid scap and water to clean the surface. Use a soft brush to clean any gaps. Avoid any products that have ammonia or alcohol like Windex, 409 or Fantastik. These products can damage the finish leaving black or white spots. Never use an abrasive product like Softscrub, Comet, Ajax or Bon Ami. For deep polishing we recommend Bruno's Wax for all finishings. Tuscan Brass is a living finish and has no warranty. It will lighten with use. To extend the life of the finish, apply Bruno's Wax by patting it on, letting it dry and patting it off. Never rub or buff this finish. WARNING: the use of cleaning products not recommended might irreparably harm the surfaces of the faucets which in such case are not covered by our warranty. Limescale The faucet is fitted with an aeration device in the Hot/Cold water outlet. This may need occasional cleaning especially in hard water areas. This is accomplished by unscrewing the outlet in a counter clockwise direction, dismantling and leaving the inner screen mesh immersed over night in vinegar or lemon juice.

Consult your local ROHL showroom for additional information and specifications. For complete warranty details and a list of showrooms, go to www.rohlhome.com.

Do not use chemical descaling liquids for this purpose.

www.rohlhome.com



Installation Instructions

ATTENTION

READ THESE INSTRUCTIONS BEFORE INSTALLATION AND USE OF ALL FAUCETS AND WALL VALVES

INSTALLATION and WARRANTY INSTRUCTIONS TECHNICAL INFORMATION

All flexible hoses are designed and manufactured for use with water in exposed locations only. **Do not expose** to household cleaners, chlorine, cloride, hydrochloric acid or other corrosive chemicals.

- All connections with threads M10x1 male must be hand tighten. Do not over tighten. Over tightening may cause damage to the hose.

All faucets washers and o-rings are designed and manufactured for use with water. **Do not expose** to household cleaners, chlorine, cloride, hydrochloric acid or other corrosive chemicals.

Faucets are designed for use with the tempratures and pressures listed below:

- minimum cold water supply 50 °F
- maximum hot water supply 145 °F
- minimum pressure 15 psi
- maximum pressure 75 psi
- maximum fixing torque value = 10 lbf.ft.

<u>Please note</u>: The recommended best pressure for best performance is between 40 psi and 60 psi. More pressure than 60 psi or less pressure than 40 psi may affect the diverting action in side spray faucets.

- Do not use any Rohl Country/ Nicolazzi faucet with sulphorous water.
- □ The minimum temperature for all faucets is 50 degrees F. Below 50 degrees F will void the warranty.
- □ When available, filter systems must be placed between hot and cold supply lines and the faucet. Improper use or non-use of filters may make diverting faucets with hand sprays perform poorly.
- □ Don't modify faucet and their components
- □ Use only original spare parts if there are replacements to be ordered.
- □ Installation must be made by authorized plumbers or installers. Improper installation or diagnosis of problems is not covered by the warranty.
- □ Yearly maintenance of cleaning and flushing is recommended.

Operation and use of any faucet or wall valve that do not conform to these technical instructions will void the warranty.

Consult your local ROHL showroom for additional information and specifications. For complete warranty details and a list of showrooms, go to www.rohlhome.com.