
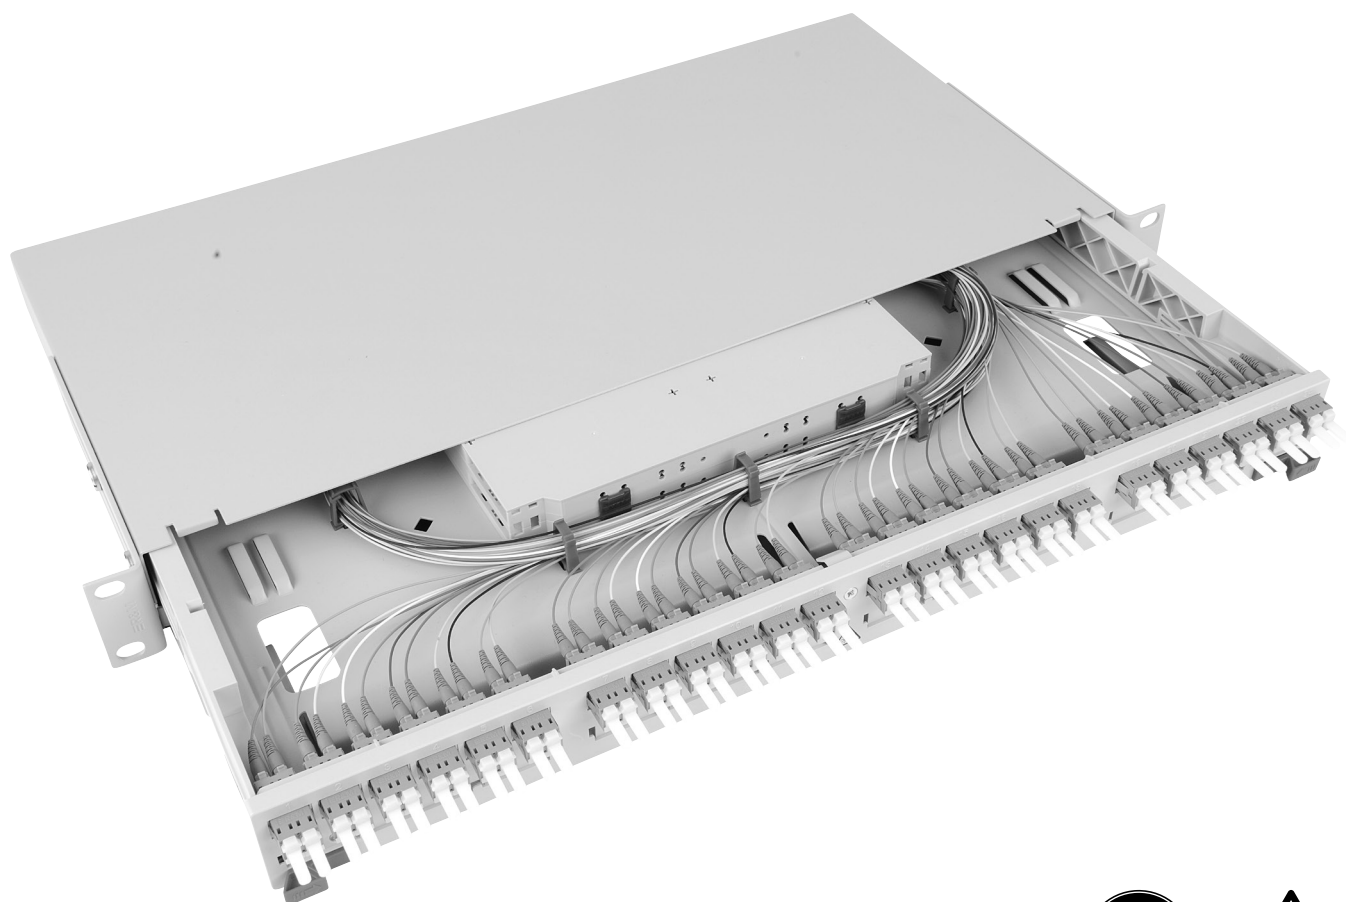


Installationsanleitung UniRack 2


Installation guide UniRack 2

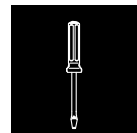

021.6517





A – Lieferumfang / Scope of delivery

A1

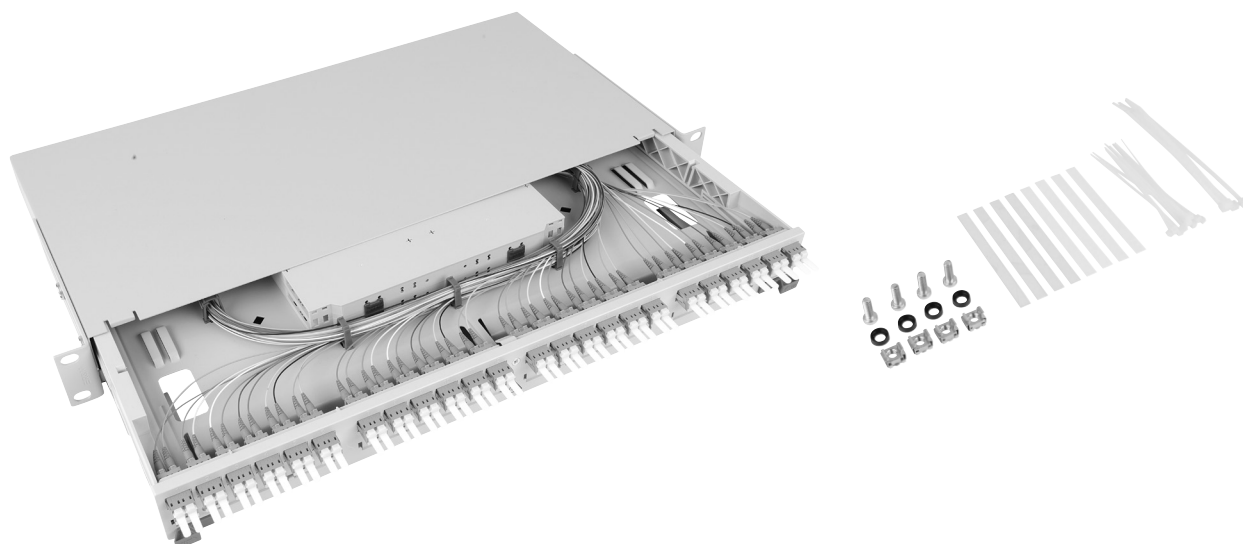


021.6517. / 021.6518

B – Vorbereitung / Preperation

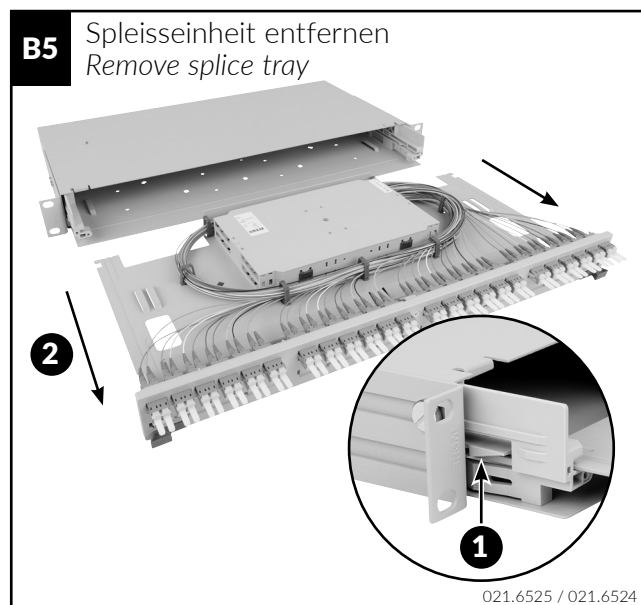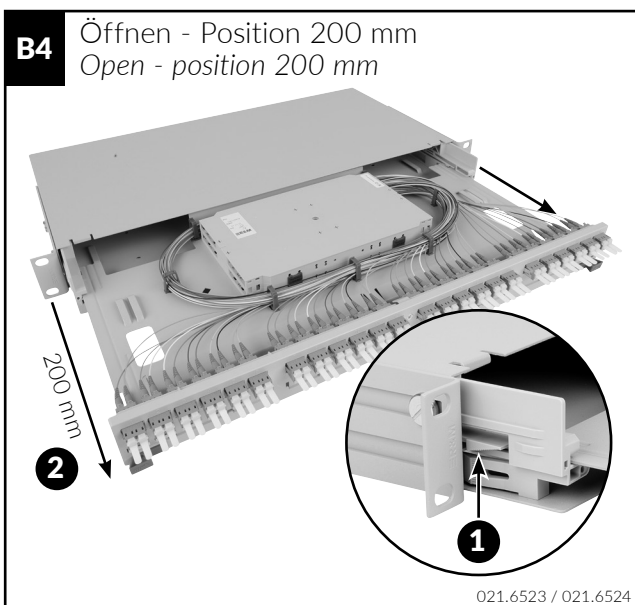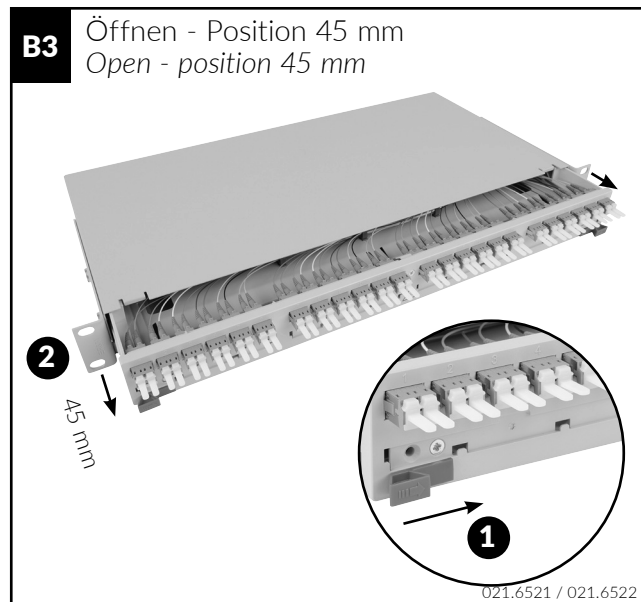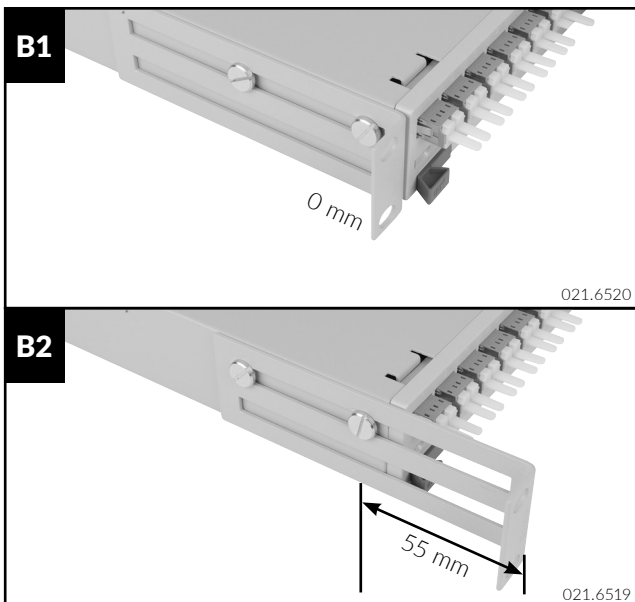


C – Installation / Installation

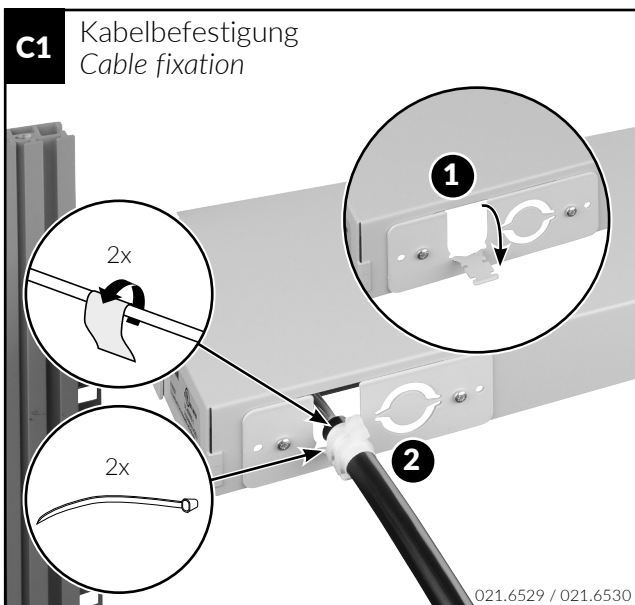


C – Installation / Installation



C3 Biegeradius
Bending radius

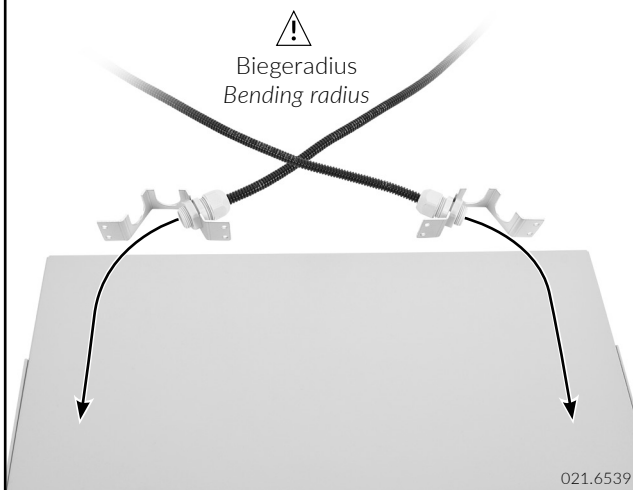


C4 Spleisskassette R40
Splicetray R40

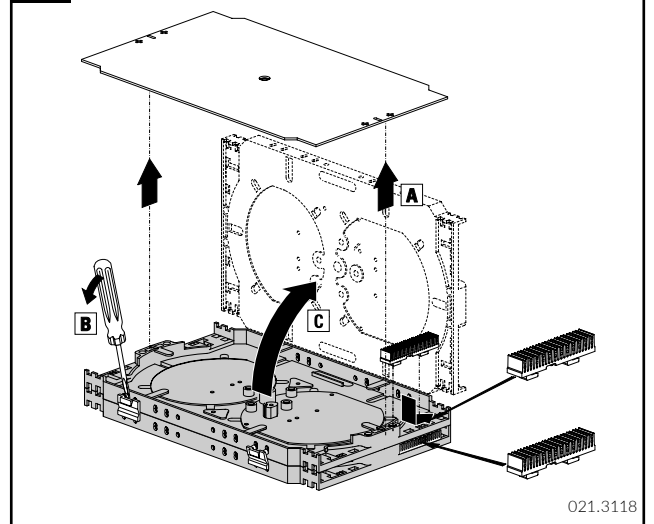


C5 Eingang links
Entry left

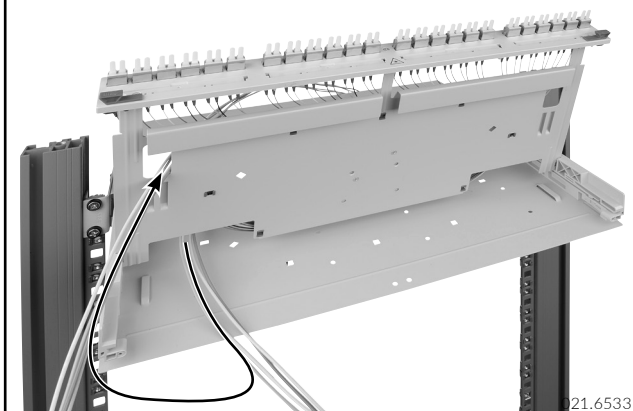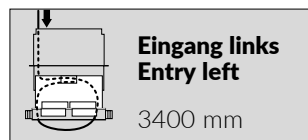


C6 Eingang rechts
Entry right





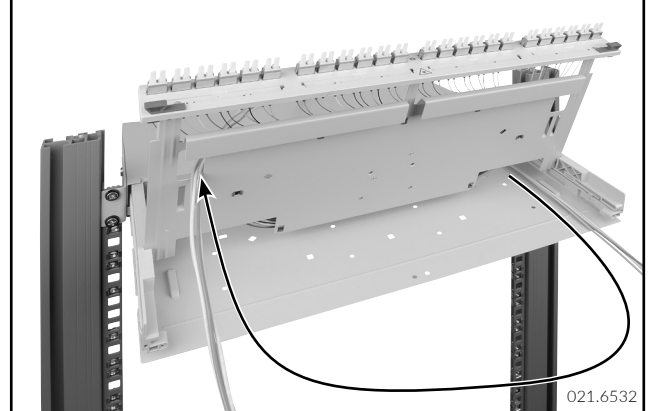


C7 Bündelader Befestigung
Loose tube fixation

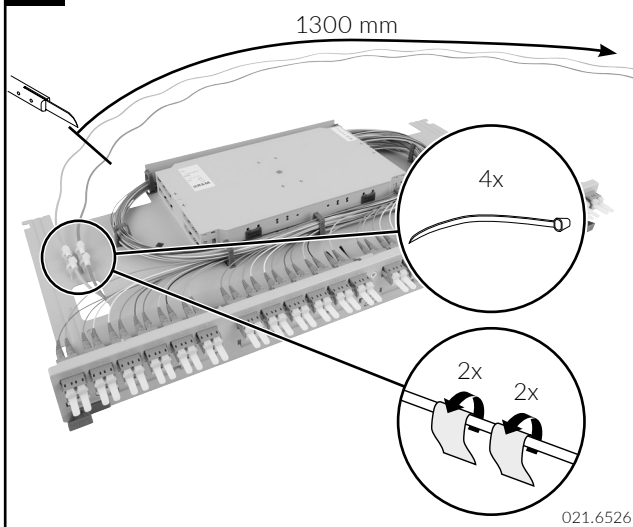


C8 Bündelader Befestigung
Loose tube fixation

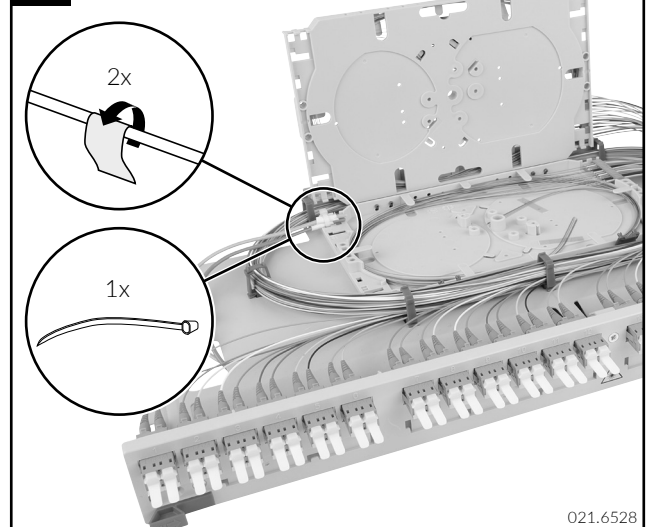

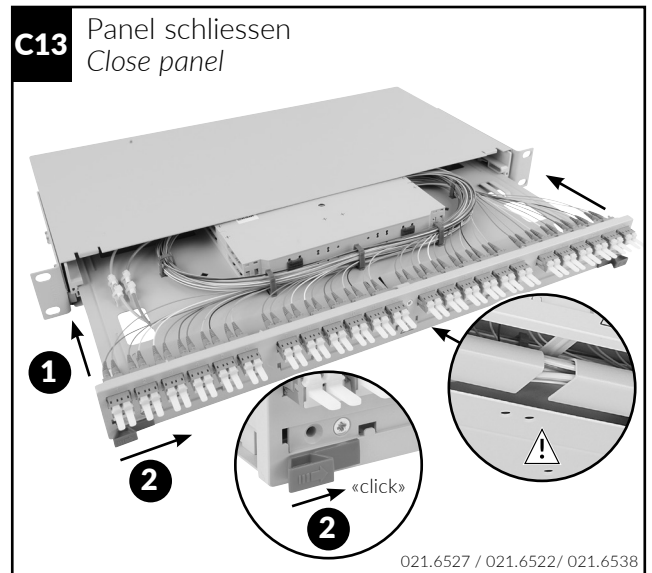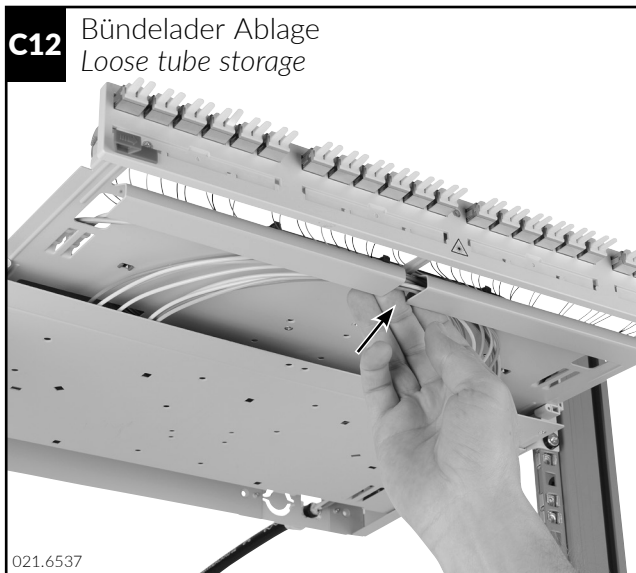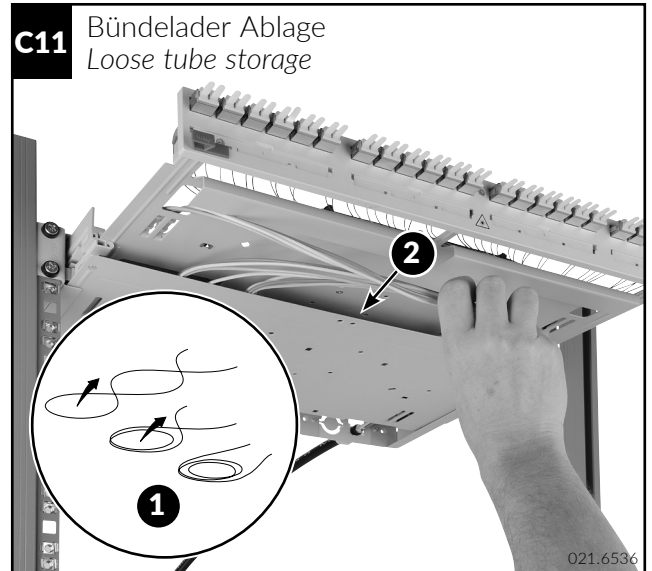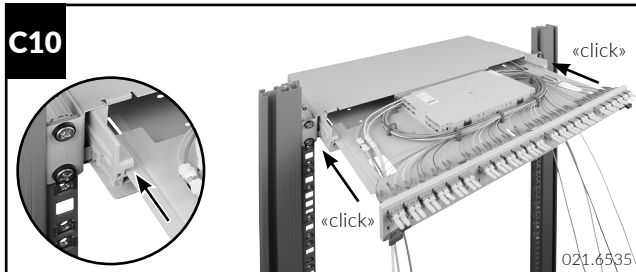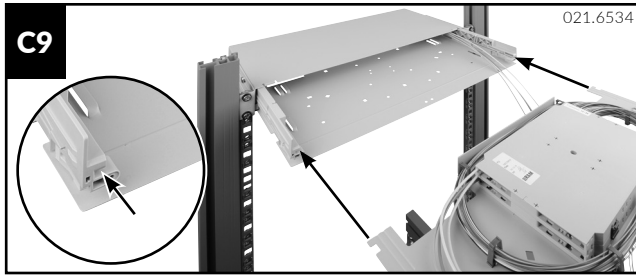

C – Zubehör / Accessories

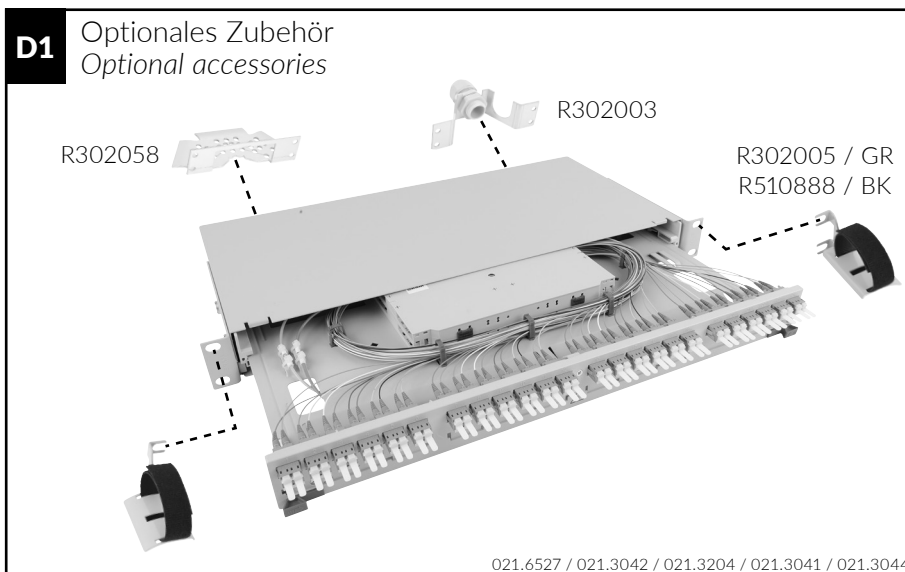

Headquarters

Switzerland

Reichle & De-Massari AG

Binzstrasse 32

CHE-8620 Wetzikon

Telephone HQ +41 (0)44 933 81 11

Telefax HQ +41 (0)44 930 49 41

E-Mail hq@rdm.com

www.rdm.com

R&M

Please note:

This guide shows the best practices for installation **ONLY**. R&M expressly disclaims all liability for any damage to material, equipment, and for any injury or death. Legal health and safety regulations should have priority over best practices as shown in this guide. R&M does not guarantee this guide to be free of errors. Products included may vary from products shown. Please exercise caution.