

# ***Rigging Projects***

**Locking Headboard Car**

**12T, 15T, 18T**

**User Guide**



RP3928 - HBL- UG - 03

## Setup Guide

|                                      |   |
|--------------------------------------|---|
| Securing Sail Plate to Headboard Car | 4 |
| Installing Headboard Car onto Track  | 4 |
| Trigger Seat Installation            | 5 |
| Sail Plate installation              | 5 |
| Gaff Lock Halyard Connection         | 5 |
| Headboard Car Load Diagram           | 6 |
| Safety Lockout Mode                  | 7 |

## How to

|              |    |
|--------------|----|
| On the Lock  | 8  |
| Manual Lock  | 9  |
| Off the Lock | 10 |
| Reefing      | 11 |
| Sensor Kit   | 12 |

## Service Guide

|                      |    |
|----------------------|----|
| Inspection Intervals | 14 |
| Serviceable Parts    | 12 |
| Troubleshoot         | 15 |

## Global View

|                                     |    |
|-------------------------------------|----|
| Exploded Diagram Headboard Car      | 16 |
| Bill of Materials                   | 17 |
| Exploded Diagram Self Lock Cassette | 18 |
| Bill of Materials                   | 19 |

## Customer Support

|                   |    |
|-------------------|----|
| Email & Telephone | 20 |
|-------------------|----|

## Introduction

This manual provides an overview of the Rigging Projects Self Locking Headboard Car system and its maintenance. Please read this manual carefully before installation, use or maintenance, to ensure that you have understood and are familiar with all relevant details.


Prior to using this product, all persons should be made aware of the possible hazards associated with its operation and use. Any service work, repairs maintenance or equivalent work carried out on the product should be undertaken by technically qualified persons.

## Key Design Features

- Patented self-lock mechanism; negates the need for internal trip lines within the mast
- A choice between an manual lock or self-lock
- Automatic self locking activation
- Aluminium carriage with independent titanium locking cartridge
- Titanium cartridge carries all the vertical load, hence lowering the centre of effort in the car & reducing track levering
- Impossible to false lock on fastener holes in track
- Safety system to allow triggers to be disengaged independently from trip line
- An external manual trip line is also installed as a backup

## Caution

The Rigging Projects Locking Headboard Car has been tested extensively to ensure the safety of the product. However, it is important for the users to understand the risks involved in the event of a mechanical failure. Care should be taken to stow the halyard appropriately to avoid entanglement should the sail drop unexpectedly. Failure to take safety precautions could lead to severe injury or death.

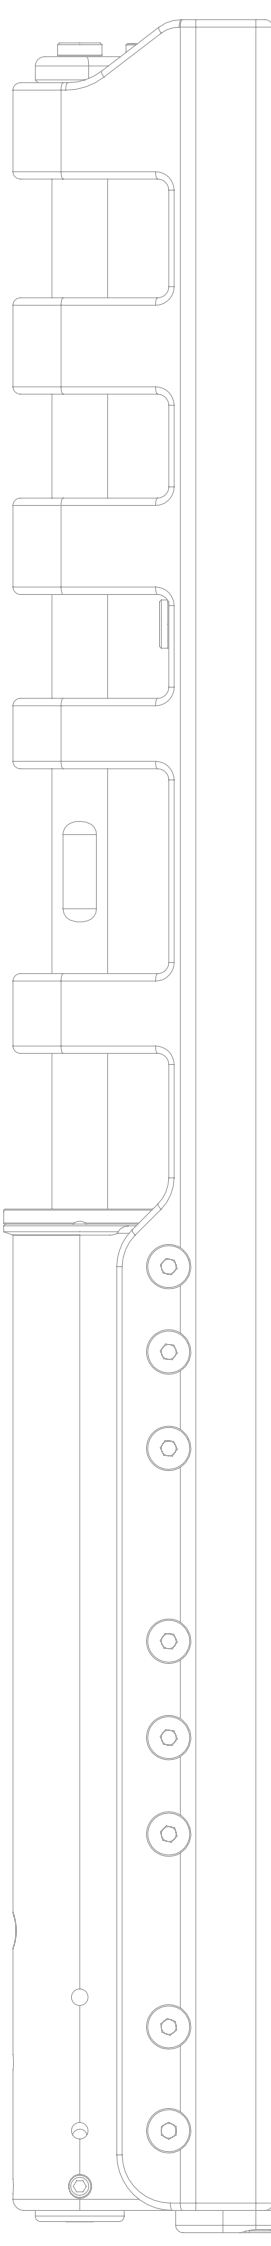

| Headboard Car | Recommended Halyard Ø(mm) | Max Halyard Load 80% BL (T) | Min. Gate length |        |
|---------------|---------------------------|-----------------------------|------------------|--------|
|               |                           |                             | Auto             | Manual |
| HB12          | 12                        | 6.4                         | 690              | 550    |
| HB15          | 13                        | 8.0                         | AOR              | AOR    |
| HB18          | 14                        | 9.6                         | 780              | 630    |

## Secure Sail Plate on Headboard Car


1. Undo the retaining button head fastener ④
2. Remove car main pin ③
3. Align sail plate ① in place, ensure the main washer ⑤ is correctly positioned between the sail plate ① and the main car ②

**Please do not apply any grease or Tef-Gel to main washer ⑤**

4. Insert main pin through the car, washer and sail plate secure with cap head fastener.
5. The main pin is required to align with the pawl shaft located in the main car housing. Some alignment of the pawl shaft might be required to seat main pin correctly

**Do not use a hammer to secure the pin**

6. Use a few drops of Blue Loctite 423  on the fastener ④ that retains the main pin.

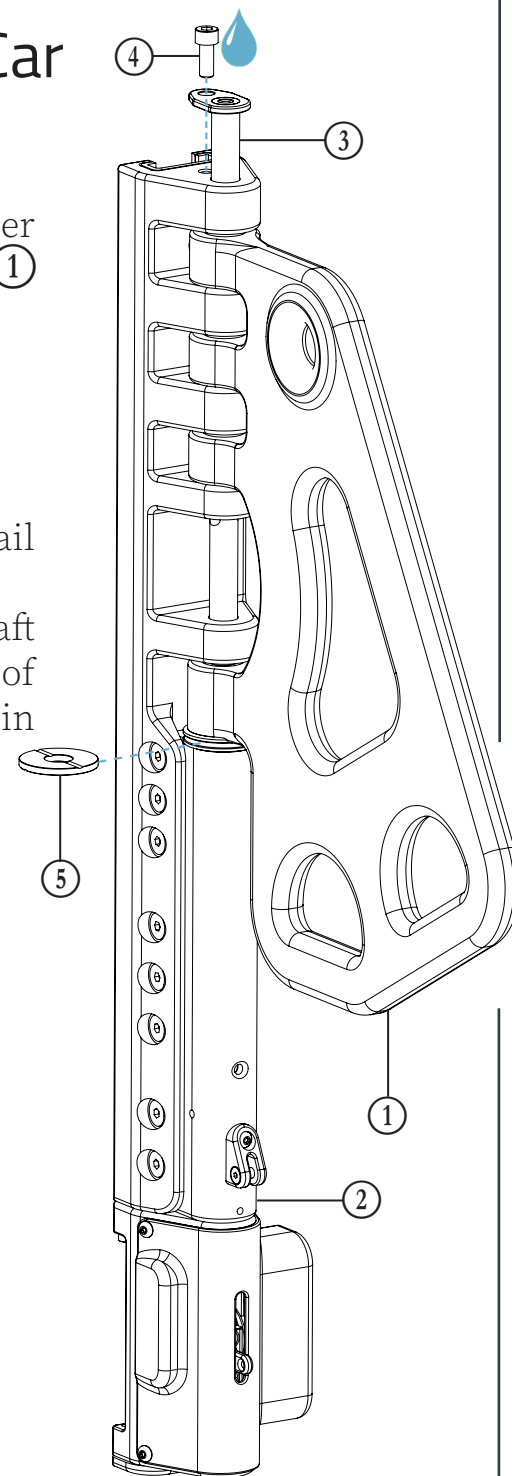

## Installing Headboard Car onto Track

1. Remove gate track section from mast
2. Slide the locking headboard car on to track ensuring the barrel section of the car is at the lower end
3. Reinstall gate section. Make sure track joins are seamlessly aligned

## Trigger Seat Installation


If retrofitting the headboard car, the self locking trigger seat must be installed by a Rigging Projects technician.

## Halyard Indicators

If there is no sensor kit installed Rigging Projects recommends marking your main halyard at full hoist and at all reef point with a whipping in different colours.

## Disclaimer


It is not permitted to modify the product or its parts, other than replacing parts specified in this manual. Rigging Projects Ltd is not liable for any dangerous situation, accidents, damage and consequences thereof caused when deviating from the instructions, guidelines and procedures described in this manual. To retain warranty do not deviate from the instructions, guidelines and procedures described in this manual.

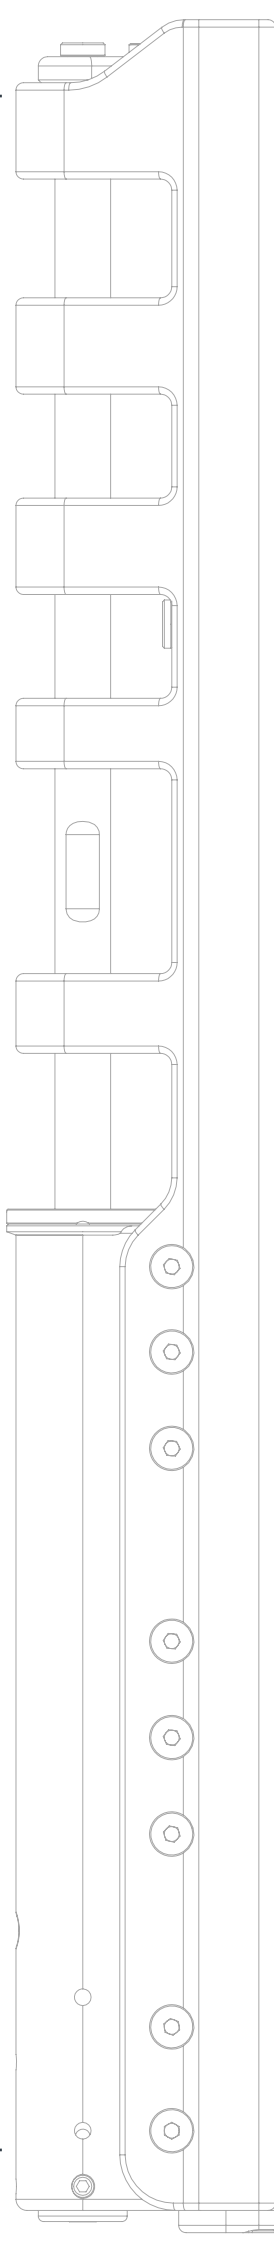

# Headboard Car Load Diagram

| Rotation from Center | % of Maximum Working Load |
|----------------------|---------------------------|
| 0°                   | 100%                      |
| 15°                  | 100%                      |
| 30°                  | 85%                       |
| 45°                  | 70%                       |
| 60°                  | 60%                       |
| More than 60°        | Not advised               |
| 105°                 | Maximum Rotation          |


This diagram shows the operating range of a mainsail headboard car relative to the boat's centerline. As the headboard car rotates away from the centerline, its load capacity decreases.

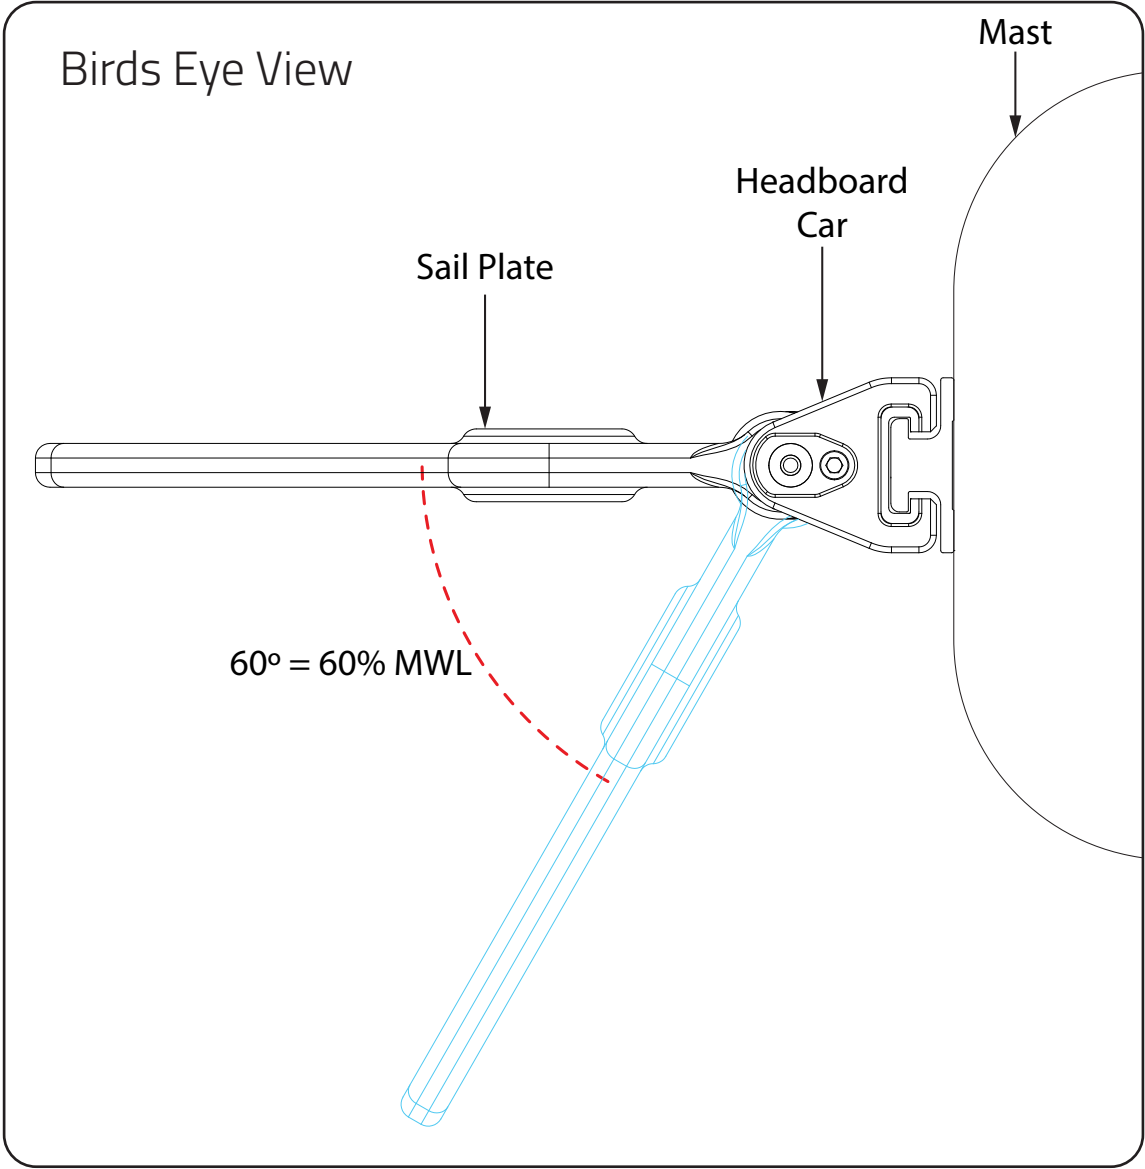

# Safety Lock Out Mode

In the unlikely event of the main pawl not retracting during the dropping of the sail, follow these steps:

1. Using a metal rod (max. 5mm diameter- a bolt, Allan key or screw driver)
2. Ascend the mast to the headboard car
3. Move the car away from the high load track section where the pawl can engage
4. Insert the rod through small hole perpendicular to the pawl housing
5. Ensure the rod is installed through entire body
6. Ease the main halyard
7. Contact Rigging Projects customer support

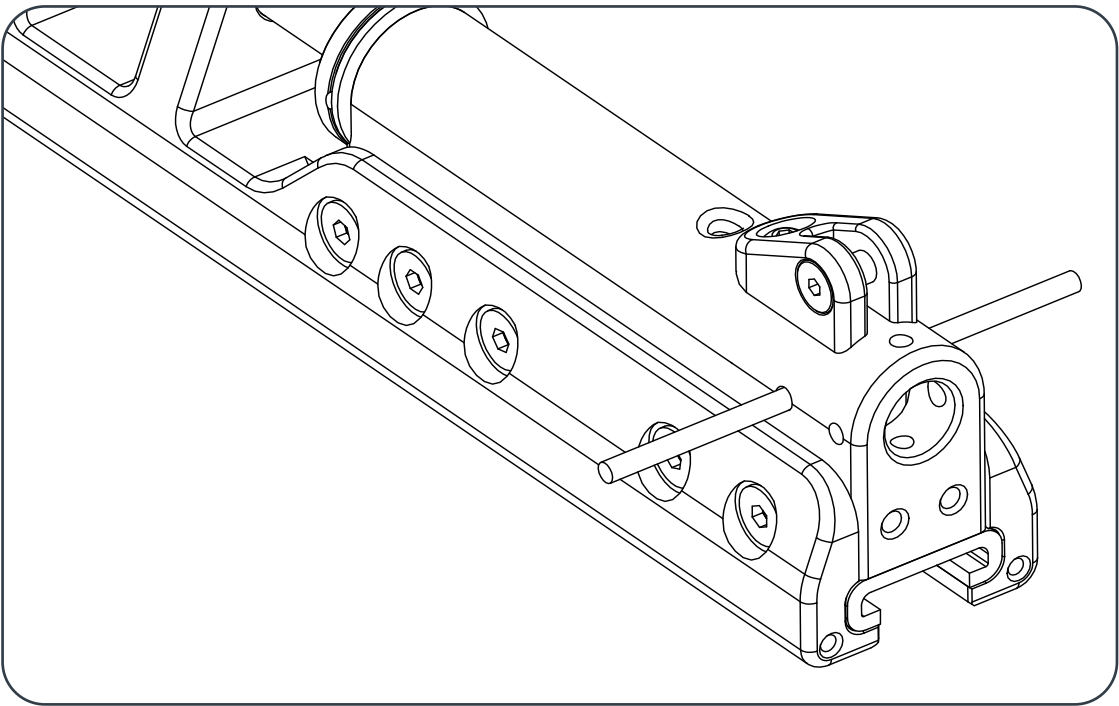


# On The Lock

## 01 During Hoist Pawls Retracted

1. Ease main sheet, vang and tack tension before manoeuvre


During this time the self lock pawl is free to spring over the trigger seat and the main pawls ② are retracted

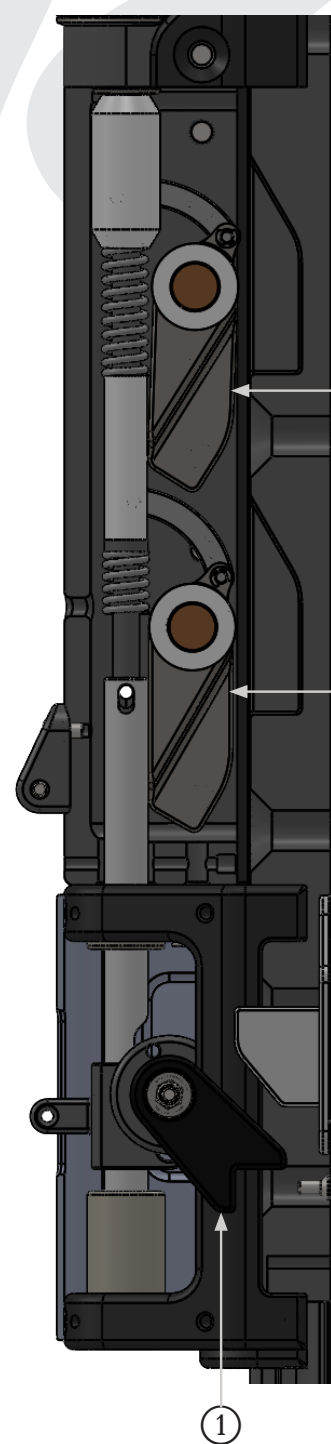

## 02 Over Hoist Position

1. Hoist the halyard and wait for the position sensor signal to indicate the correct height. Without sensor kit: to maximum hoist halyard mark


Once hoisted past the trigger seat ③, the self lock pawl ① is in lock mode and ready to activate the main pawls ②

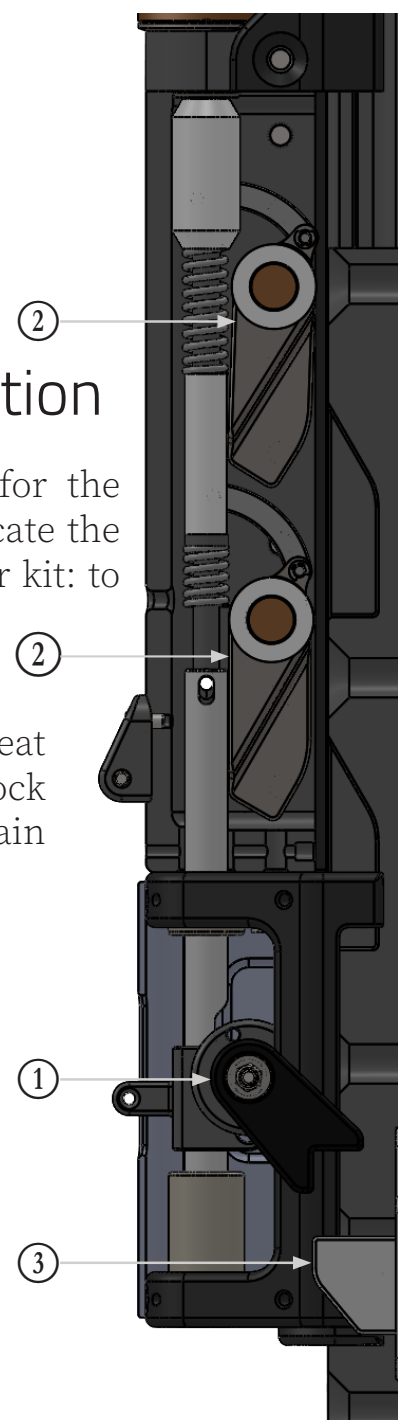

## 03 Self Lock Engages

1. **Slowly ease** the halyard to allow the self lock pawl ① to engage with the trigger seat ③.


When the self lock pawl ① is engaged with the trigger seat ③, the mechanism causes a chain reaction to activate the main pawls ② x2 into the high load track section ④.

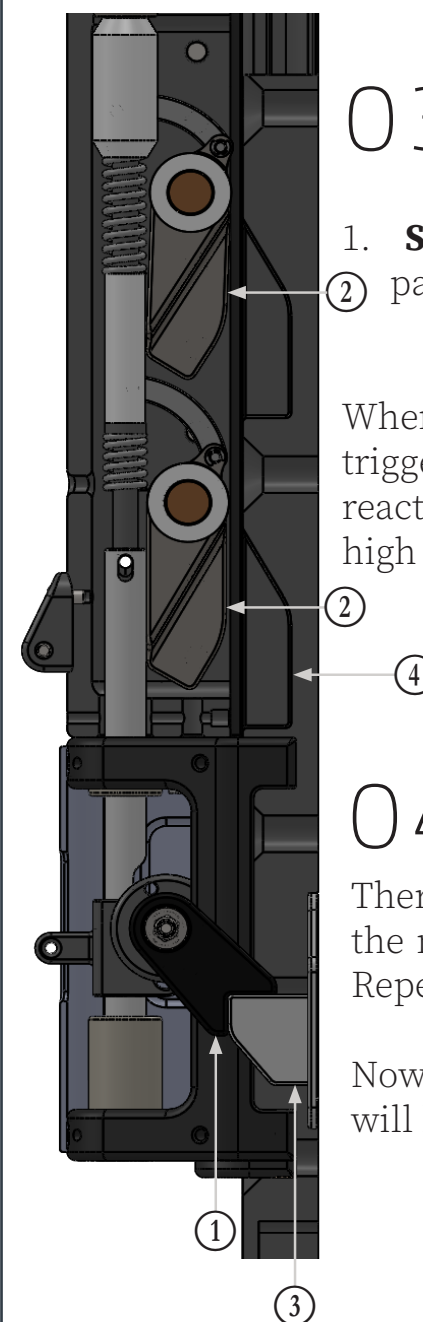

## 04 On the Lock

There will be no weight on the halyard if the main pawls ② x2 is properly engaged. Repeat the process if not.

Now the main pawls ② x2 is engaged there will be no weight on the self lock pawl ①.

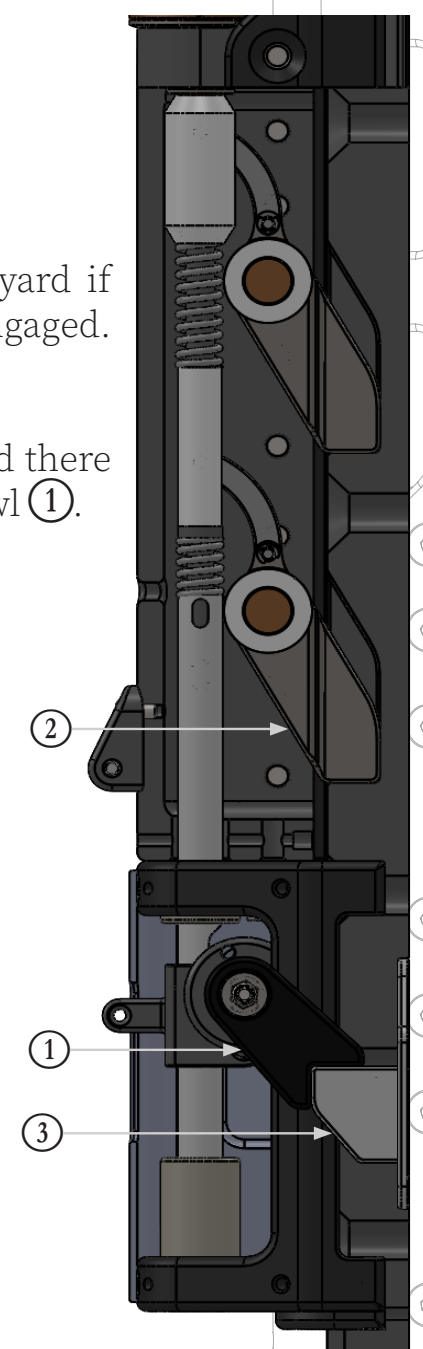


Please ensure the halyard is stowed appropriately so that there is no risk of entanglement in the event of mechanical failure and the sail drops unexpectedly

# Off The Lock

## 0 1 Over Hoist

- 1. Ease main sheet, vang and tack tension before manoeuvre
- 2. Hoist the halyard until the sensor indicates the correct position of the car. Without sensor kit: to maximum hoist halyard mark.


During the hoist the main pawls ② automatic retracts and the self lock pawl ① goes into **unlock mode** and is able disengaged from the trigger seat ③.

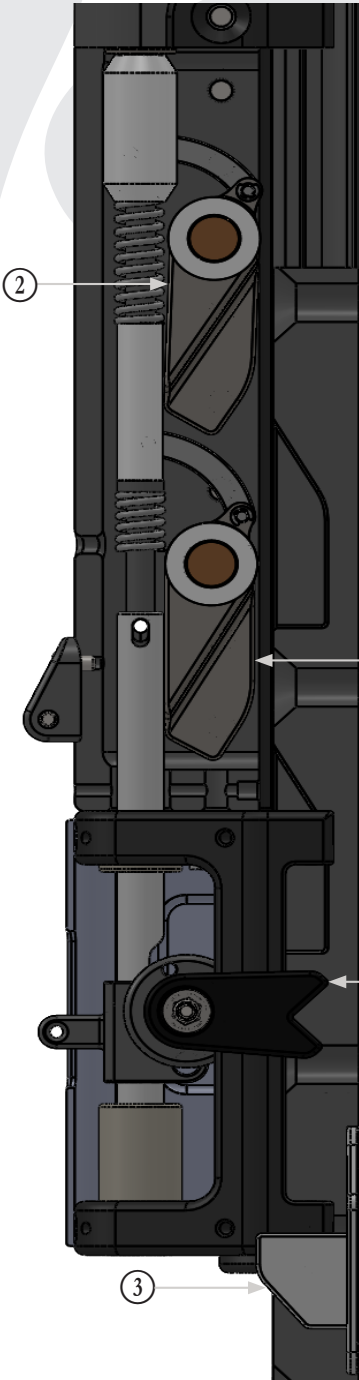

## 0 2 Halyard Ease

- 1. Ease the halyard to drop the sail

Now both of the pawls are disengaged and the sail is free to be lowered

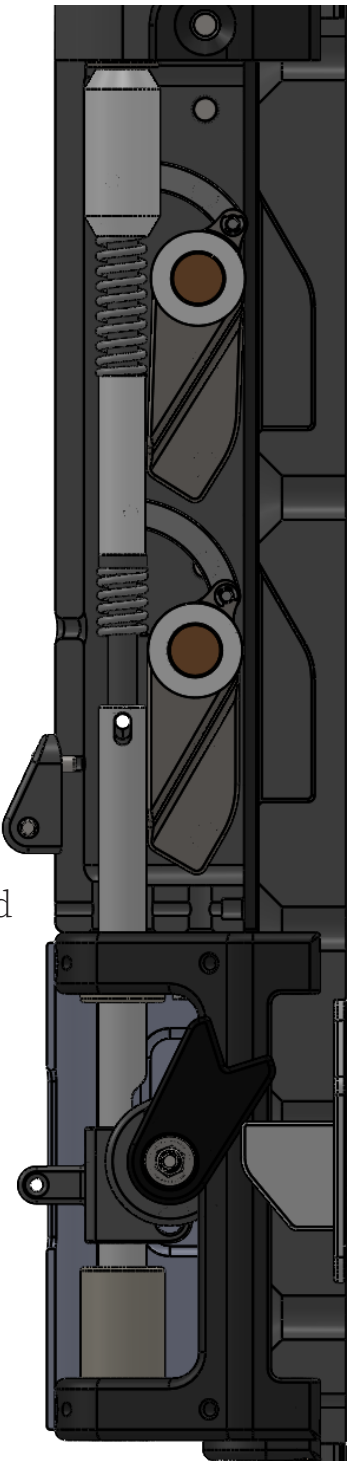

| Minimum Overhoist Required to Unlock |        |           |
|--------------------------------------|--------|-----------|
| Car                                  | Sensor | No Sensor |
| HB12                                 | 50     | 40        |
| HB15                                 | 50     | 40        |
| HB18                                 | 50     | 40        |


# Trip Line

- To engage pawls on the lock using the manual trip line;
- 1. Over hoist the head board car
  - 2. Gently pull the trip line
  - 3. Ease the halyard **slowly**
  - 4. The main pawls ② x2 will engage

Due to the nature of mechanism for the manual trip line it is important the line is **free to run** if not in use.

# Reefing


- To reef the sail, please follow the same 'On The Lock' procedure.
- 1. Ensure the car is lowered below reef trigger seat
  - 2. Over hoisted the head board car to activate self lock pawl
  - 3. **Slowly ease** onto the lock

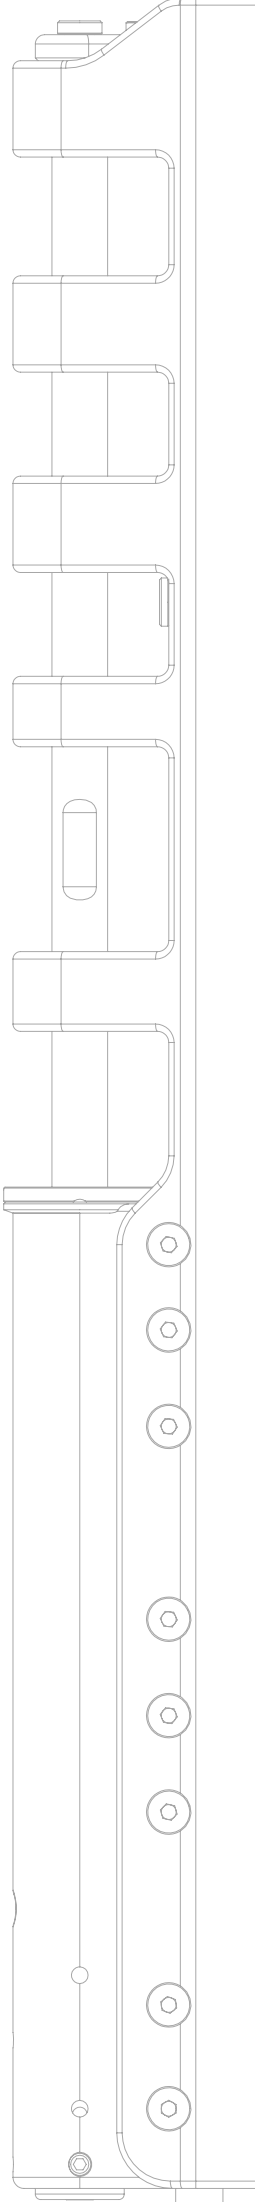

# Sensor Kit Installation

| Step | Instruction                                                                                                                                                 |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Mouse sensor wires from the junction box to the relative reef points and full hoist locations on the mast                                                   |
| 2    | Pass the sensor through the mast and thread onto the back high load track section. <b>Ensure the sensor is 3.9mm</b> recessed from the surface of the track |
| 3    | Secure the sensor in place with backing nut                                                                                                                 |
| 4    | Test the sensor signal to ensure the function of the sensor                                                                                                 |
| 5    | Secure the high load track section to the mast                                                                                                              |

## On The Lock

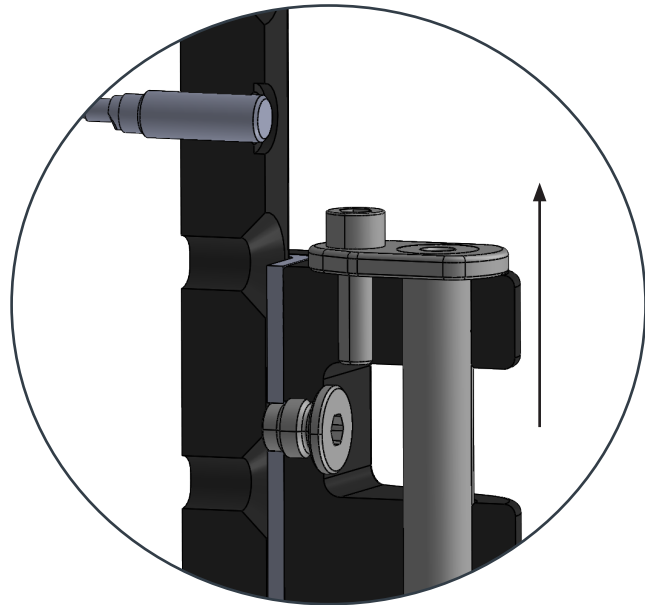

0 1 During Hoist





The sensor will activate at each reefing point during a full hoist manoeuvre. Otherwise the indicator will be off.

0 2 Over Hoist



The sensor will activate to indicate the headboard car is in the over hoist position and can now be **slowly eased** onto lock.

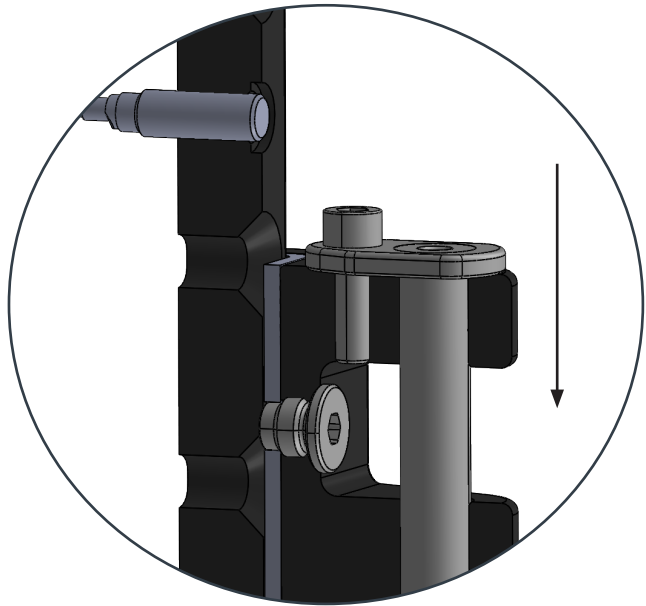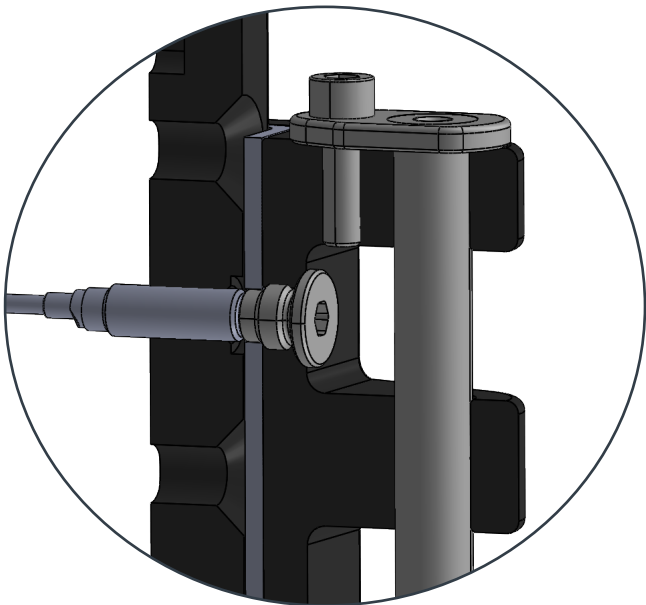


0 3 On the Lock



After the halyard is eased the sensor will be disengaged when the headboard car is on the lock.

## Off The Lock

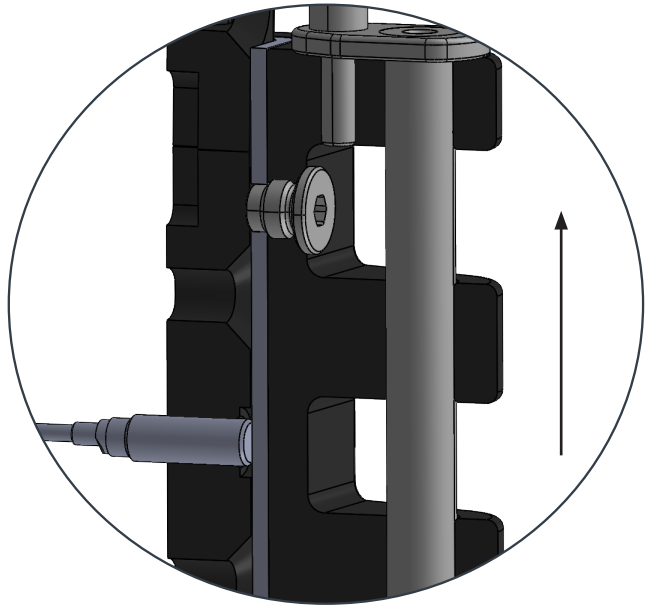


0 1 Over Hoist

From the 'on lock' position, when the car is hoisted, the signal will show an Off, On, Off sequence. The headboard car is now in the unlocked position.

0 2 Halyard Ease

From the 'over hoist' position the signal will repeat an Off, On, Off sequence as the sensor is activated during the dropping of the sail.

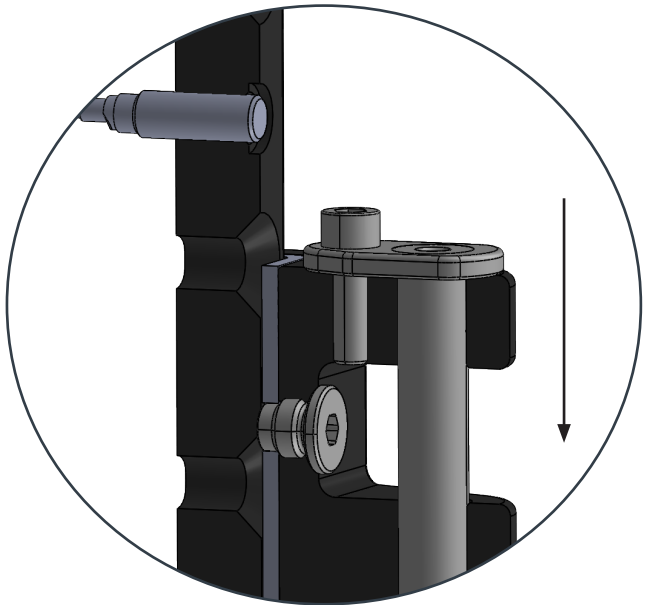

# Inspection Intervals

During each interval please carry out preceding inspection advisories

| Interval                                     | Advisories                                                                                                                               |
|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Inshore Racing<br>Daily Inspection           | Visual inspection over the body for signs of wear and tear                                                                               |
|                                              | Ensure all fasteners are secure of the high load track section, sail plate and the main car                                              |
|                                              | Rinse thoroughly with fresh water                                                                                                        |
|                                              | Inspect top of main car body for cracking                                                                                                |
| Offshore Sailing<br>or 2 Months<br>or 2500nm | Inspect the top hat bushings of the sail plate for signs of wear and tear                                                                |
|                                              | Remove, inspect and clean the main washer                                                                                                |
|                                              | Inspect the main pin for alignment and deformation                                                                                       |
|                                              | Check the sail plate is free to rotate on the main pin                                                                                   |
|                                              | Check for chafe on the manual trip line                                                                                                  |
|                                              | Inspect locking track section fasteners are secure                                                                                       |
|                                              | Remove self lock cassette cover to visually inspect the ball plunger and self lock pawl mechanism. Please do not attempt to disassemble. |
| Annual                                       | Full visual inspection by Rigging Projects Technician                                                                                    |
| 2 Years or<br>35,000nm                       | Return to Rigging Projects HQ for full service                                                                                           |

## Service Guide



Manual Lock

Click  
or  
Scan



Auto Lock


## Important

Rigging Projects equipment is designed for minimal maintenance, but some maintenance is required for optimum and safest possible operation and to comply with the Rigging Projects limited warranty. In general, the most important aspect of maintenance is to keep your equipment clean by frequently flushing with fresh water. In corrosive atmospheres, stainless parts may show discolouration around holes and screws. This is not serious and may be removed with a fine abrasive. Exposure to some caustic solutions can result in discolouration of part and is not covered under the Rigging Projects warranty.

# Trouble Shoot

| Problem                                  | Probable Cause                                                                     | Solution                                                                                                    |
|------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| Car binds on track                       | Slider damaged or missing                                                          | Check or replace slider and dowels                                                                          |
|                                          | Track misaligned                                                                   | Check alignments on track                                                                                   |
|                                          | Track fasteners protruding                                                         | Check all track fasteners are properly secured                                                              |
| Car jams when hoisting                   | Headboard is catching on running rigging e.g. lazy jacks, reef lines and halyard   | Use topping lift to hold boom and pull lazy jacks forward if possible                                       |
| Luff on sail is loose and car is engaged | Check range of Cunningham and luff length                                          | Adjust Cunningham or luff length                                                                            |
| Luff of sail is tight and not engaging   | Incorrect set up of control lines                                                  | Mainsail tack should be eased, or consider floating tack car instead of lashing                             |
| Car is not locking                       | Self lock pawl is seized and requires lubricating                                  | Remove plastic cover, inspect self lock spray internal mechanism with WD40                                  |
|                                          | On self-lock models, the self lock pawl may have become damaged due to a fast drop | Remove plastic cover of self lock cassette and inspect self lock pawl for damage                            |
|                                          | Trip line damaged                                                                  | Check trip line is activating lever and replace if necessary (Should be carried out by qualified personnel) |
|                                          | Trip line under tension                                                            | Ensure the manual trip line slack                                                                           |
|                                          | Self-lock pawl shaft has deformed                                                  | Part needs replacing; please contact Rigging Projects                                                       |
|                                          | The car is not moving past the high load track section                             | Ensure the halyard marks are correct and the car has reached the appropriate height                         |
|                                          | Damage to self lock ramp                                                           | Part needs replacing; please contact Rigging Projects                                                       |
|                                          | Manual trip line is caught and forcing the pawl to engage                          | Go aloft to visually inspect the manual trip line is slack                                                  |
| Car is not unlocking                     | The self lock pawl is no deactivating                                              | Go aloft to visually inspect the self lock pawl unlocking during the over hoist. If not, disengage manually |


Headboard Car

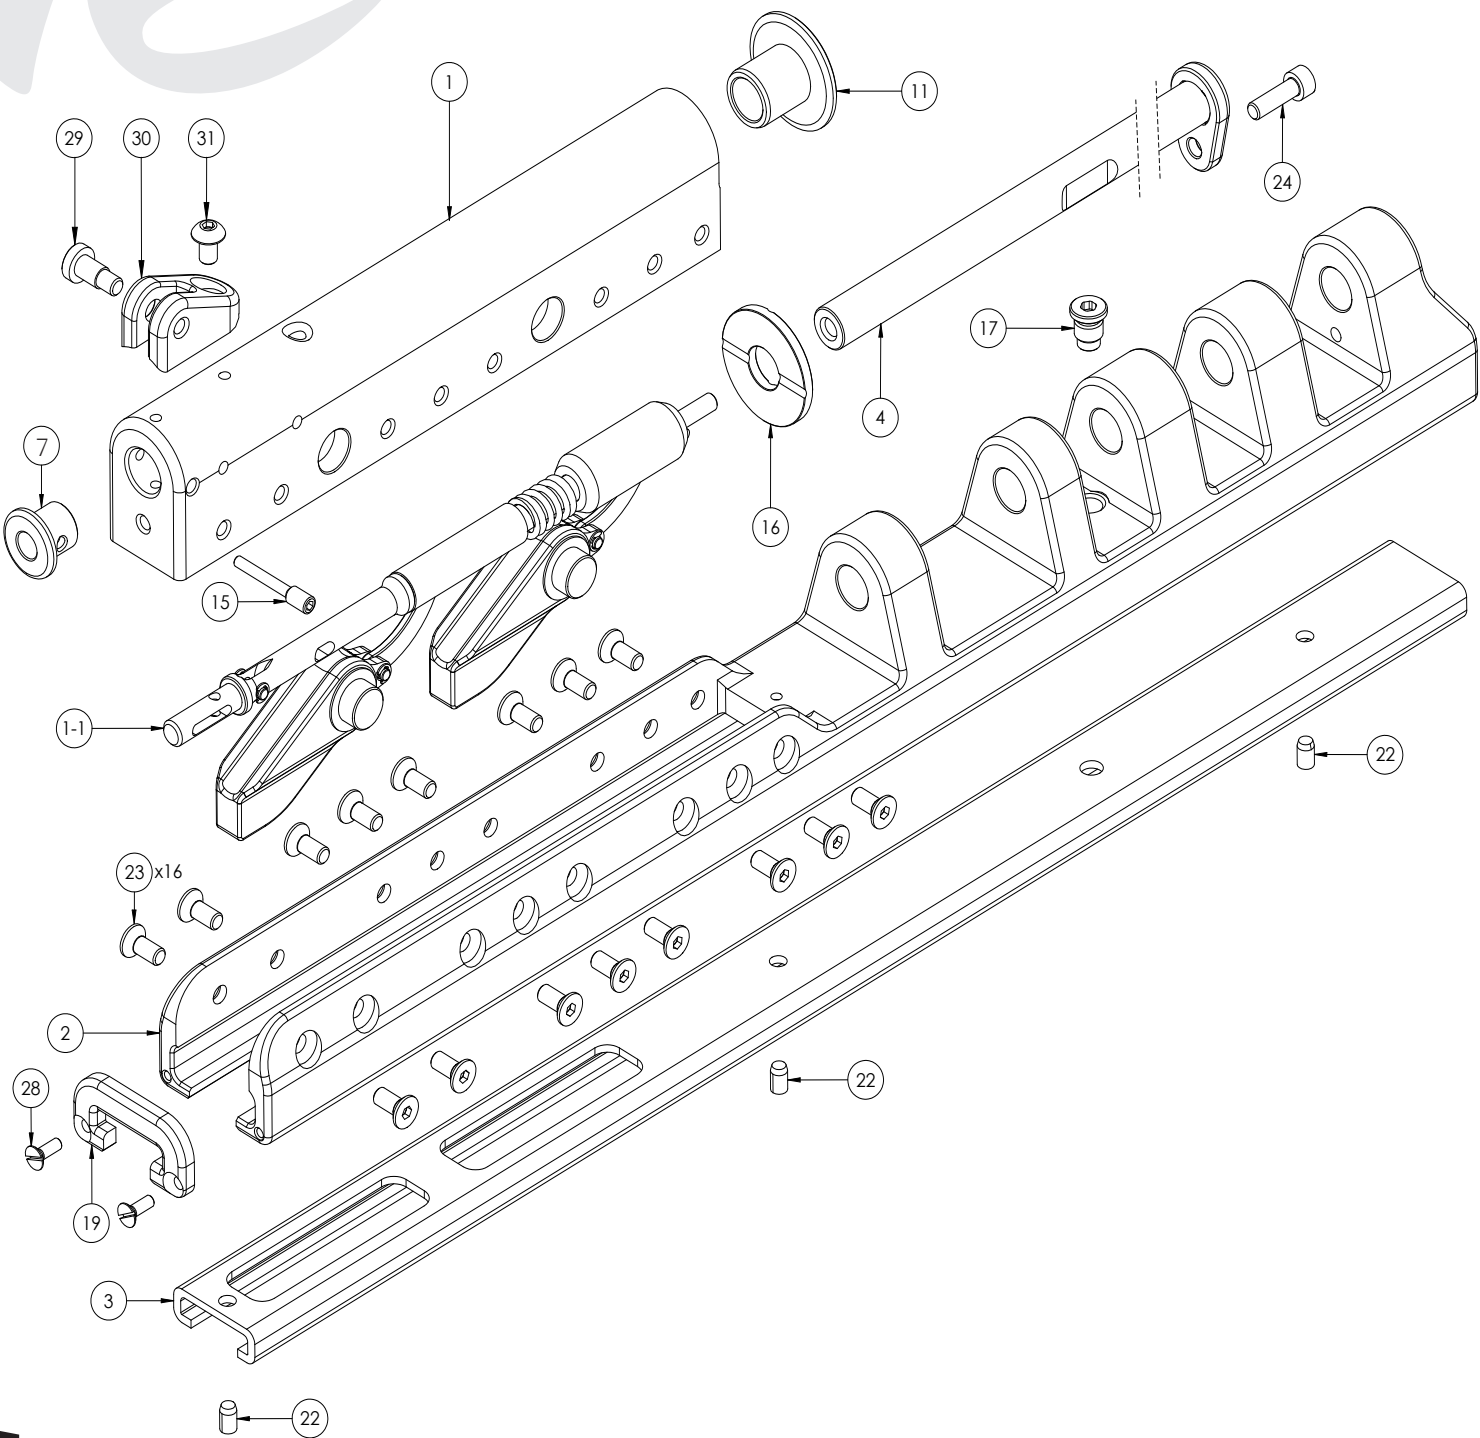

Bill of Materials


| ITEM # | DESCRIPTION                            | QTY |
|--------|----------------------------------------|-----|
| 1      | PAWL HOUSING                           | 1   |
| 1-1    | PAWL ASSEMBLY                          | 1   |
| 2      | MAIN CAR BODY                          | 1   |
| 3      | SLIDER                                 | 1   |
| 4      | MAIN PIN                               | 1   |
| 7      | GUIDE (MANUAL LOCK ONLY)               | 1   |
| 8      | PAWL SHAFT                             | 1   |
| 11     | LARGE TOP HAT                          | 1   |
| 15     | ANTI-ROTATION SCREW (MANUAL LOCK ONLY) | 1   |
| 16     | LARGE MAIN WASHER (SERVICABLE PART)    | 1   |
| 17     | INDUCTIVE SENSOR TARGET                | 1   |
| 19     | RUBBER BUFFER                          | 1   |
| 22     | DOWEL                                  | 3   |
| 23     | SOCKET CSK HEAD SCREW                  | 16  |
| 24     | SOCKET CAP HEAD SCREW                  | 1   |
| 25     | LOW HEAD SOCKET SHOULDER SCREW         | 1   |
| 28     | NYLON SCREW                            | 2   |
| 29     | LOW HEAD SOCKET SHOULDER SCREW         |     |
| 30     | TRIP LINE BRACKET (AUTO LOCK ONLY)     |     |
| 31     | SOCKET BUTTON HEAD SCREW               |     |

Self Locking Cassette

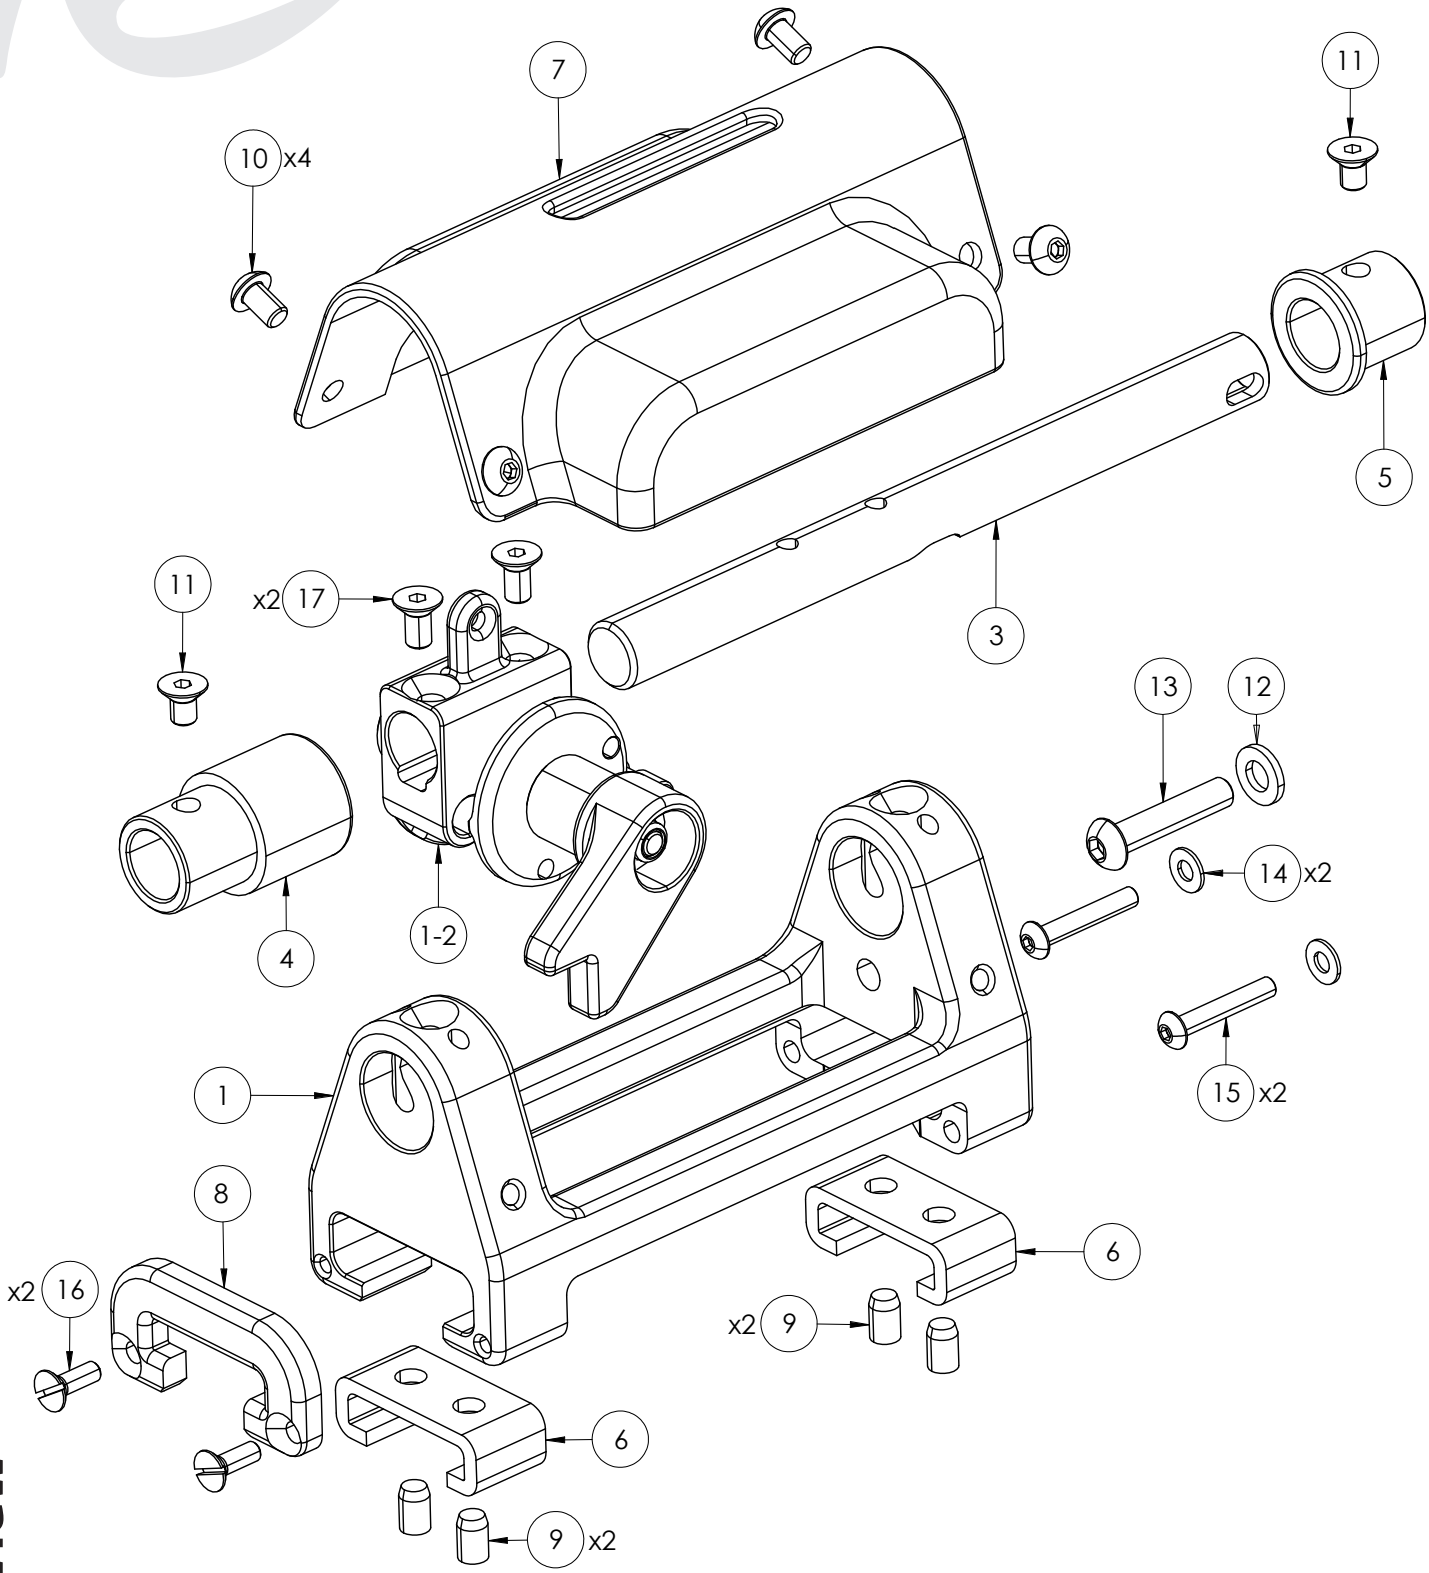

Bill of Materials


| ITEM No | DESCRIPTION              | QTY |
|---------|--------------------------|-----|
| 1       | HOUSING                  | 1   |
| 1-2     | PAWL ASSEMBLY            | 1   |
| 3       | SHAFT                    | 1   |
| 4       | LOWER BUSH               | 1   |
| 5       | UPPER BUSH               | 1   |
| 6       | UPPER SLIDER             | 2   |
| 7       | COVER                    | 1   |
| 8       | RUBBER BUFFER            | 1   |
| 9       | DOWEL PIN                | 4   |
| 10      | SOCKET BUTTON HEAD SCREW | 4   |
| 11      | SOCKET CSK HEAD SCREW    | 2   |
| 12      | WASHER                   | 1   |
| 13      | SOCKET BUTTON HEAD SCREW | 1   |
| 14      | WASHER                   | 2   |
| 15      | SOCKET BUTTON HEAD SCREW | 2   |
| 16      | SLOTTED CSK HEAD SCREW   | 2   |
| 17      | SOCKET CSK HEAD SCREW    | 2   |

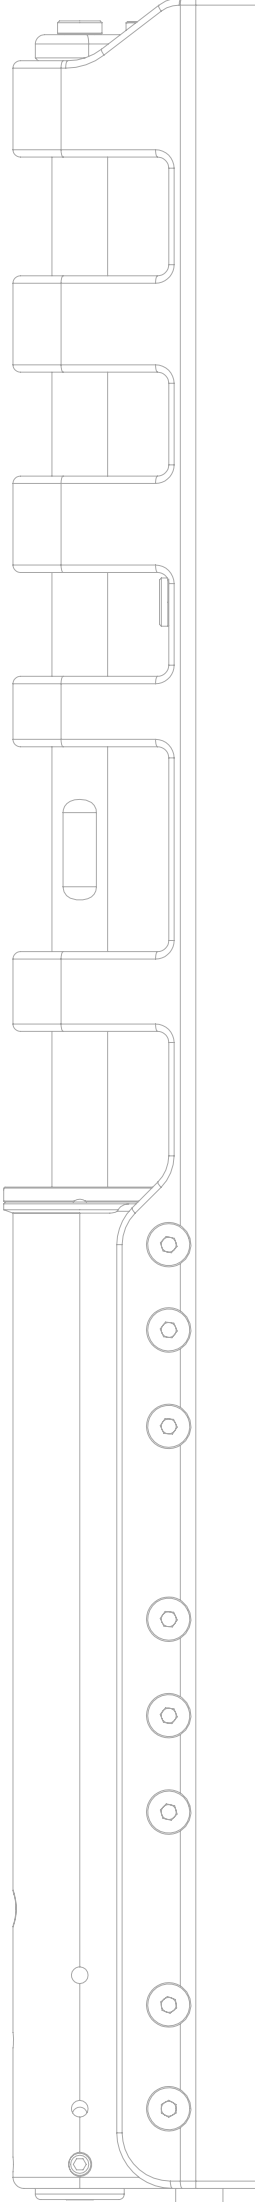


## Customer Support

Info@riggingprojects.com


+44 23 8045 6358

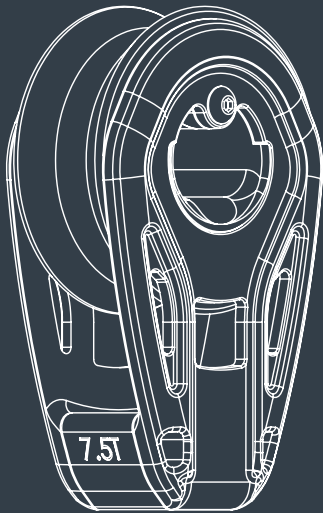

X- Glide Range

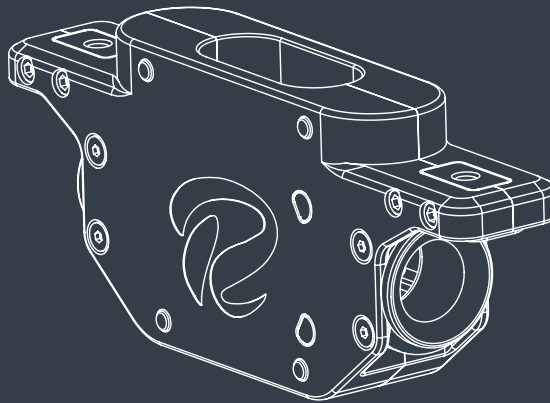

Internal Lock Range

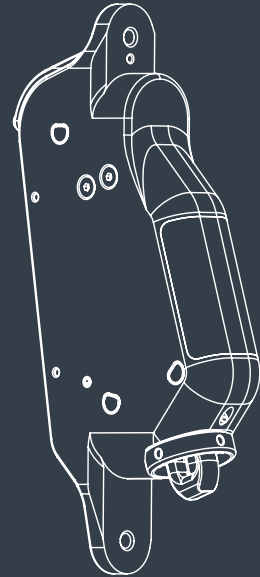

Fwd Lock Range

Newport RI, USA

Southampton, UK

Zaandam, Netherlands

Palma de Majorca, Spain

**AHEAD OF THE CURVE**

-  Project Management
-  Sail Handling
-  Hardware
-  Textile Solutions
-  Service
-  Custom