 


HOMEPOP

a Kinfine brand

Style number: K8736

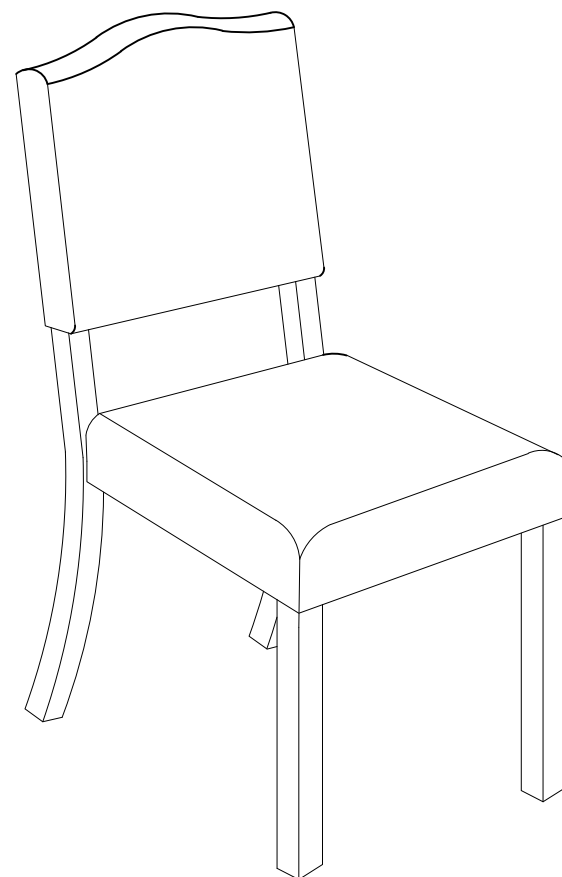

>>Assembly Instruction

Congratulations on your latest HomePop purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you.

All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time.

Good luck -- though we're confident you won't need it.

Before you begin

1. Check for damaged or missing parts. Please submit part request at <https://homepop.com/pages/parts> if needed.
2. Use the carton as a working surface to prevent product damage during assembly.
3. Gather all tools prior to assembly.

Table of contents




Introduction	2
Hardware	4
Parts list	5
Assembly	6-9

QUESTIONS? Please visit our website www.homepop.com for more information or submit warranty claim at www.homepop.com/warranty.

Hardware


(A) x 4

 5/16" x 80mm
round hex screw




(B) x 4

 5/16" x 50mm
round hex screw



(C) x 2

 5/16" x 40mm
round hex screw




(D) x 10

Ø8mm lock washer



(E) x 10

 Ø 19mm flat washer

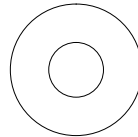


(F) x 1

5mm Ball end
Hex wrench




Part list

- | | |
|----------------------|---|
| ① BACKREST | 1 |
| ② SEAT | 1 |
| ③ FRONT LEG (L OR R) | 2 |

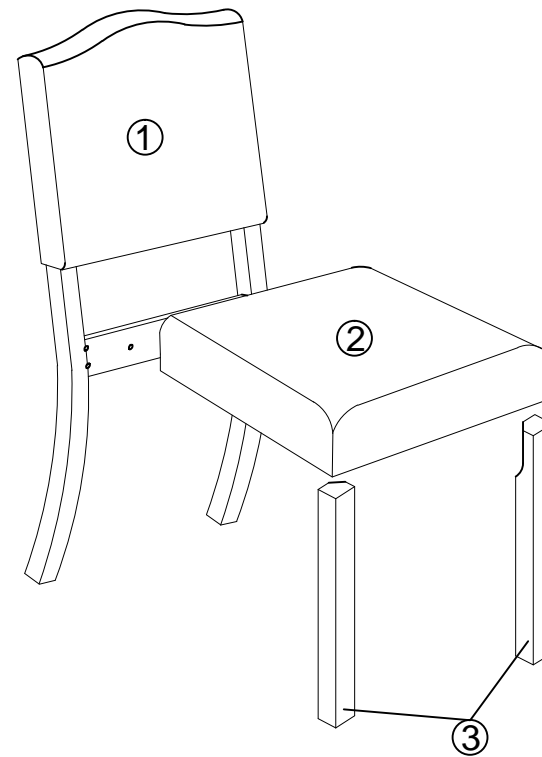 


STEP 1

 1

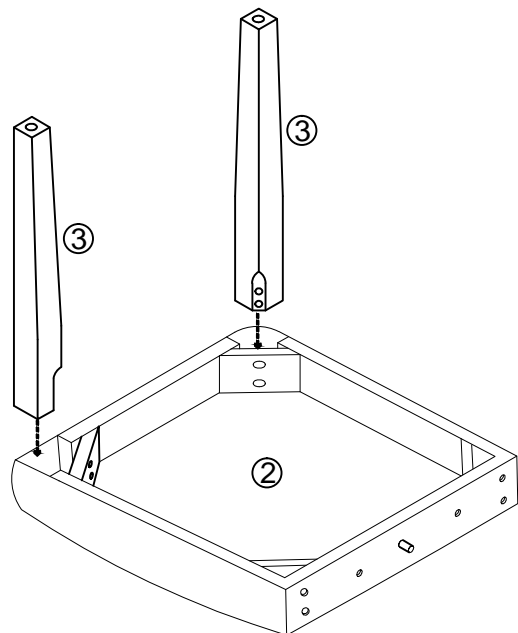


2

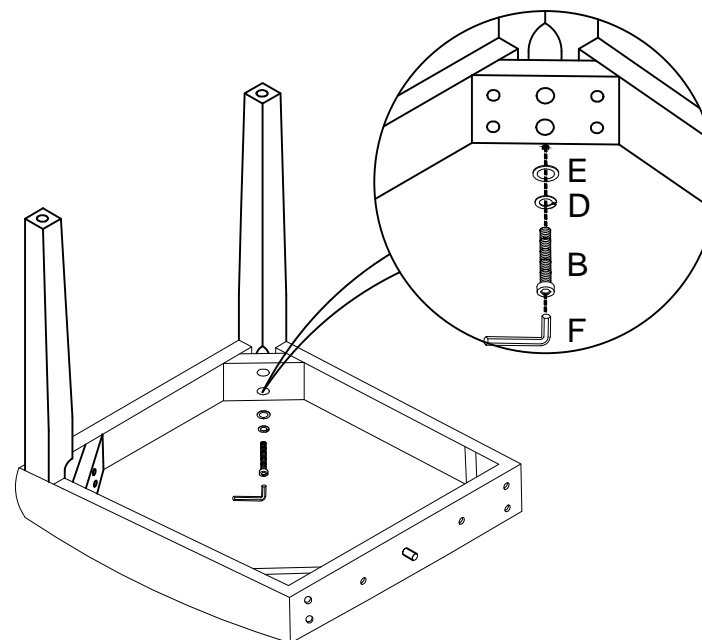 


(B) x 4

 5/16" x 50mm
round hex screw




(D) x 4

 Ø8mm lock washer



(E) x 4

 Ø 19mm flat washer

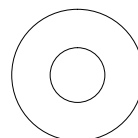

(F) x 1

 
5mm Ball end
Hex wrench



Please do not assemble with power tools


STEP 2

1

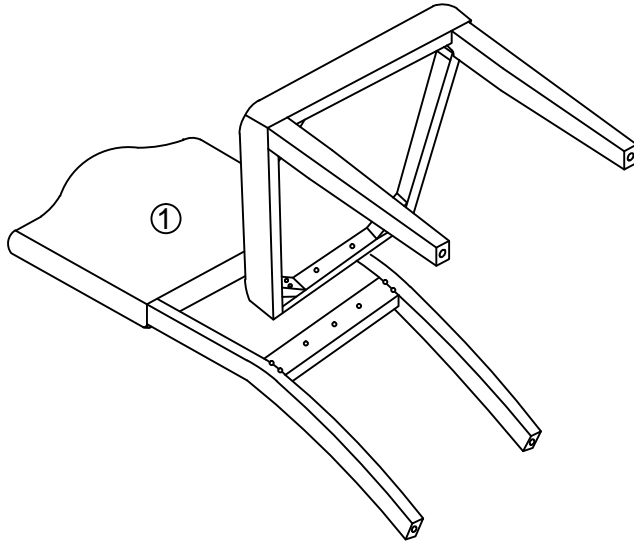


2

 Do not tighten these two bolts until the next step.

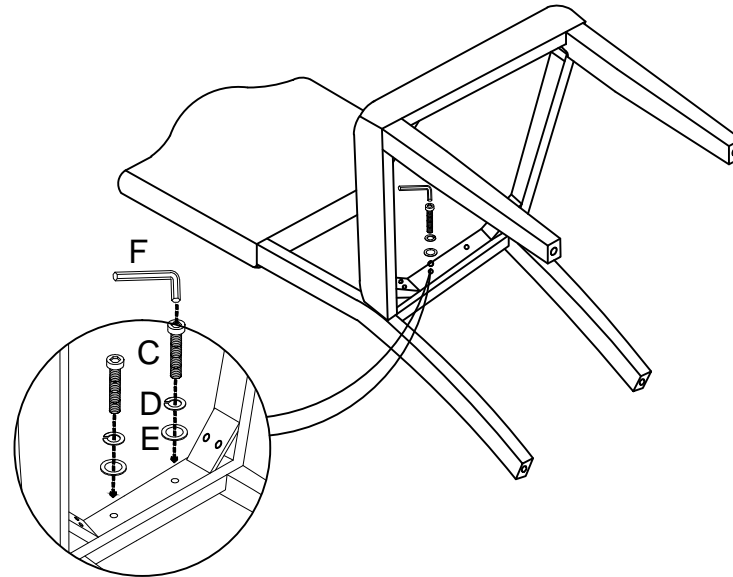

(C) x 2

 5/16" x 40mm
round hex screw




(D) x 2

Ø8mm lock washer



(E) x 2

 Ø 19mm flat washer

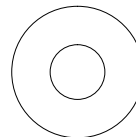

(F) x 1

 
5mm Ball end
Hex wrench



Please do not assemble with power tools


STEP 3

1 Now you may tighten all 6 bolts.

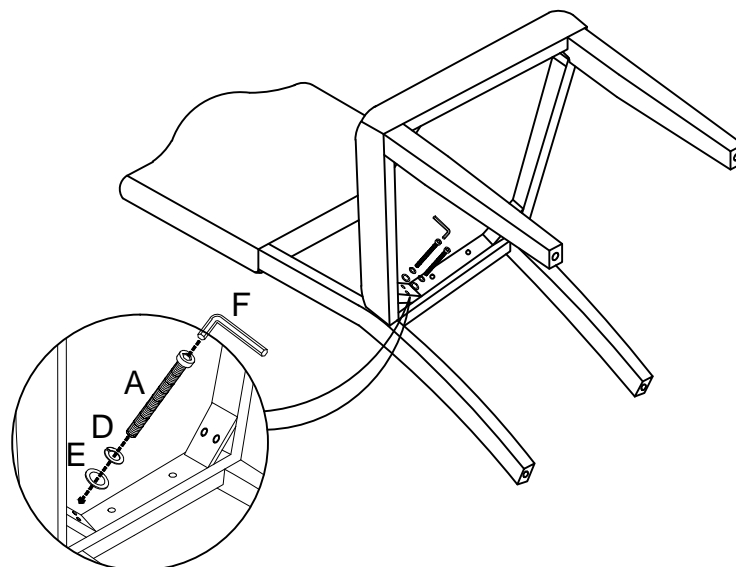

(A) x 4

 5/16" x 80mm
round hex screw




(D) x 4

Ø8mm lock washer



(E) x 4

 Ø 19mm flat washer

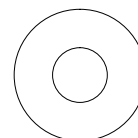

(F) x 1

5mm Ball end
Hex wrench



Please do not assemble with power tools

STEP 4

A friendly reminder from us:

Please keep the Allen wrench.



After a period of time, there may be a chance the KD furniture may become loose, please use an Allen wrench to tighten the loose bolts.

