

 
MONTERING OG BRUK

av ActivSoundbar 3


ActivPanel 5, 6 7 pg 9 - s. 1

Tillegg ActivPanel 9 - s. 5


Bruk - s. 7

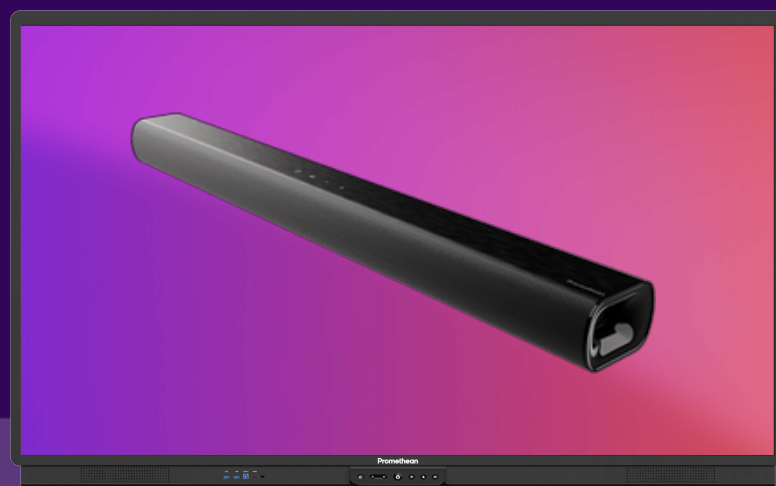


INNHOOLD I ESKEN

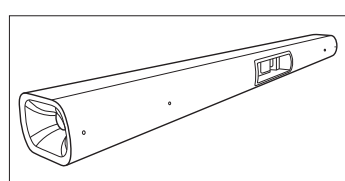 


x1

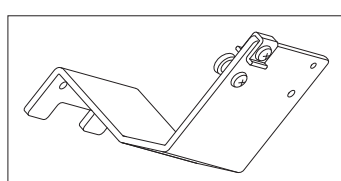 


x1

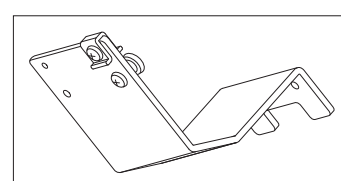 


x1

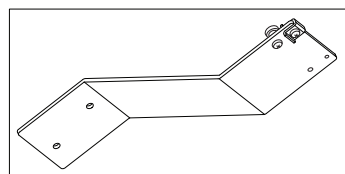 


x1

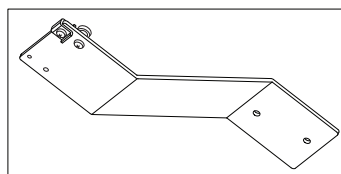 


x1

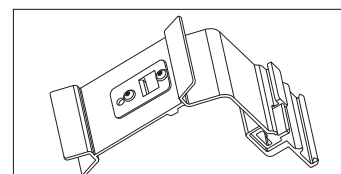 


x2

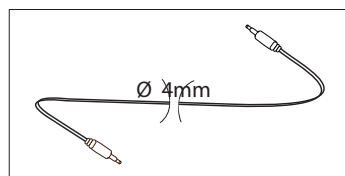 


x1

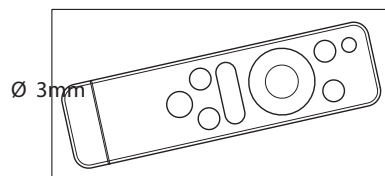 


x1

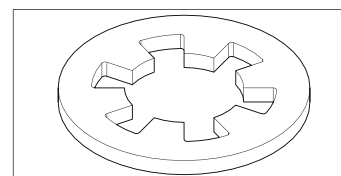 


x4

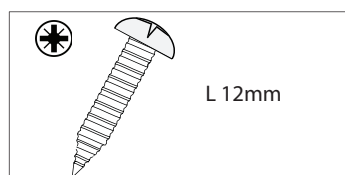 


x4

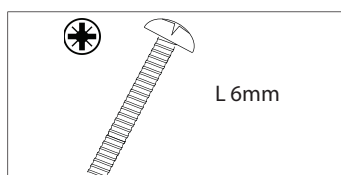 


x4

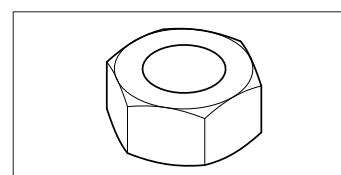 


x4

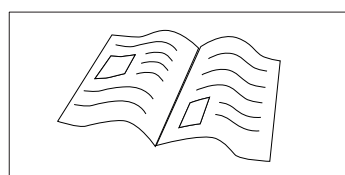 

x1

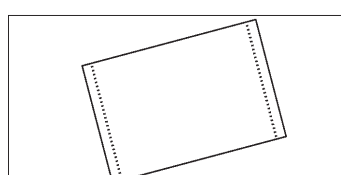 

x1

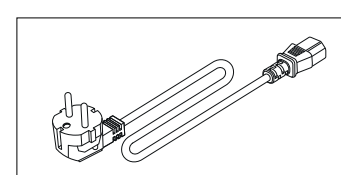 


x1

TP-3139


TP-3148

MONTERING PÅ ACTIVPANEL 5, 6, 7, 9


 
1

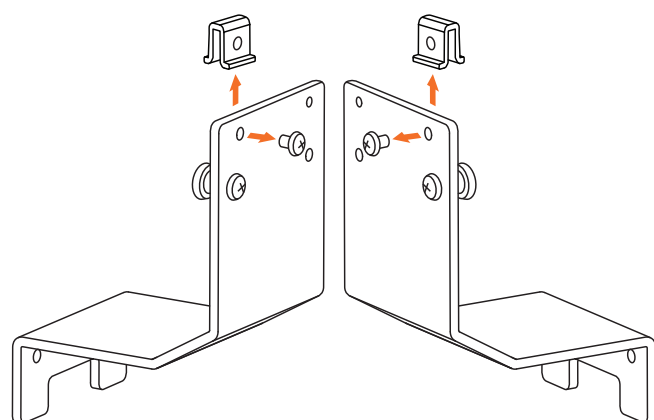



2

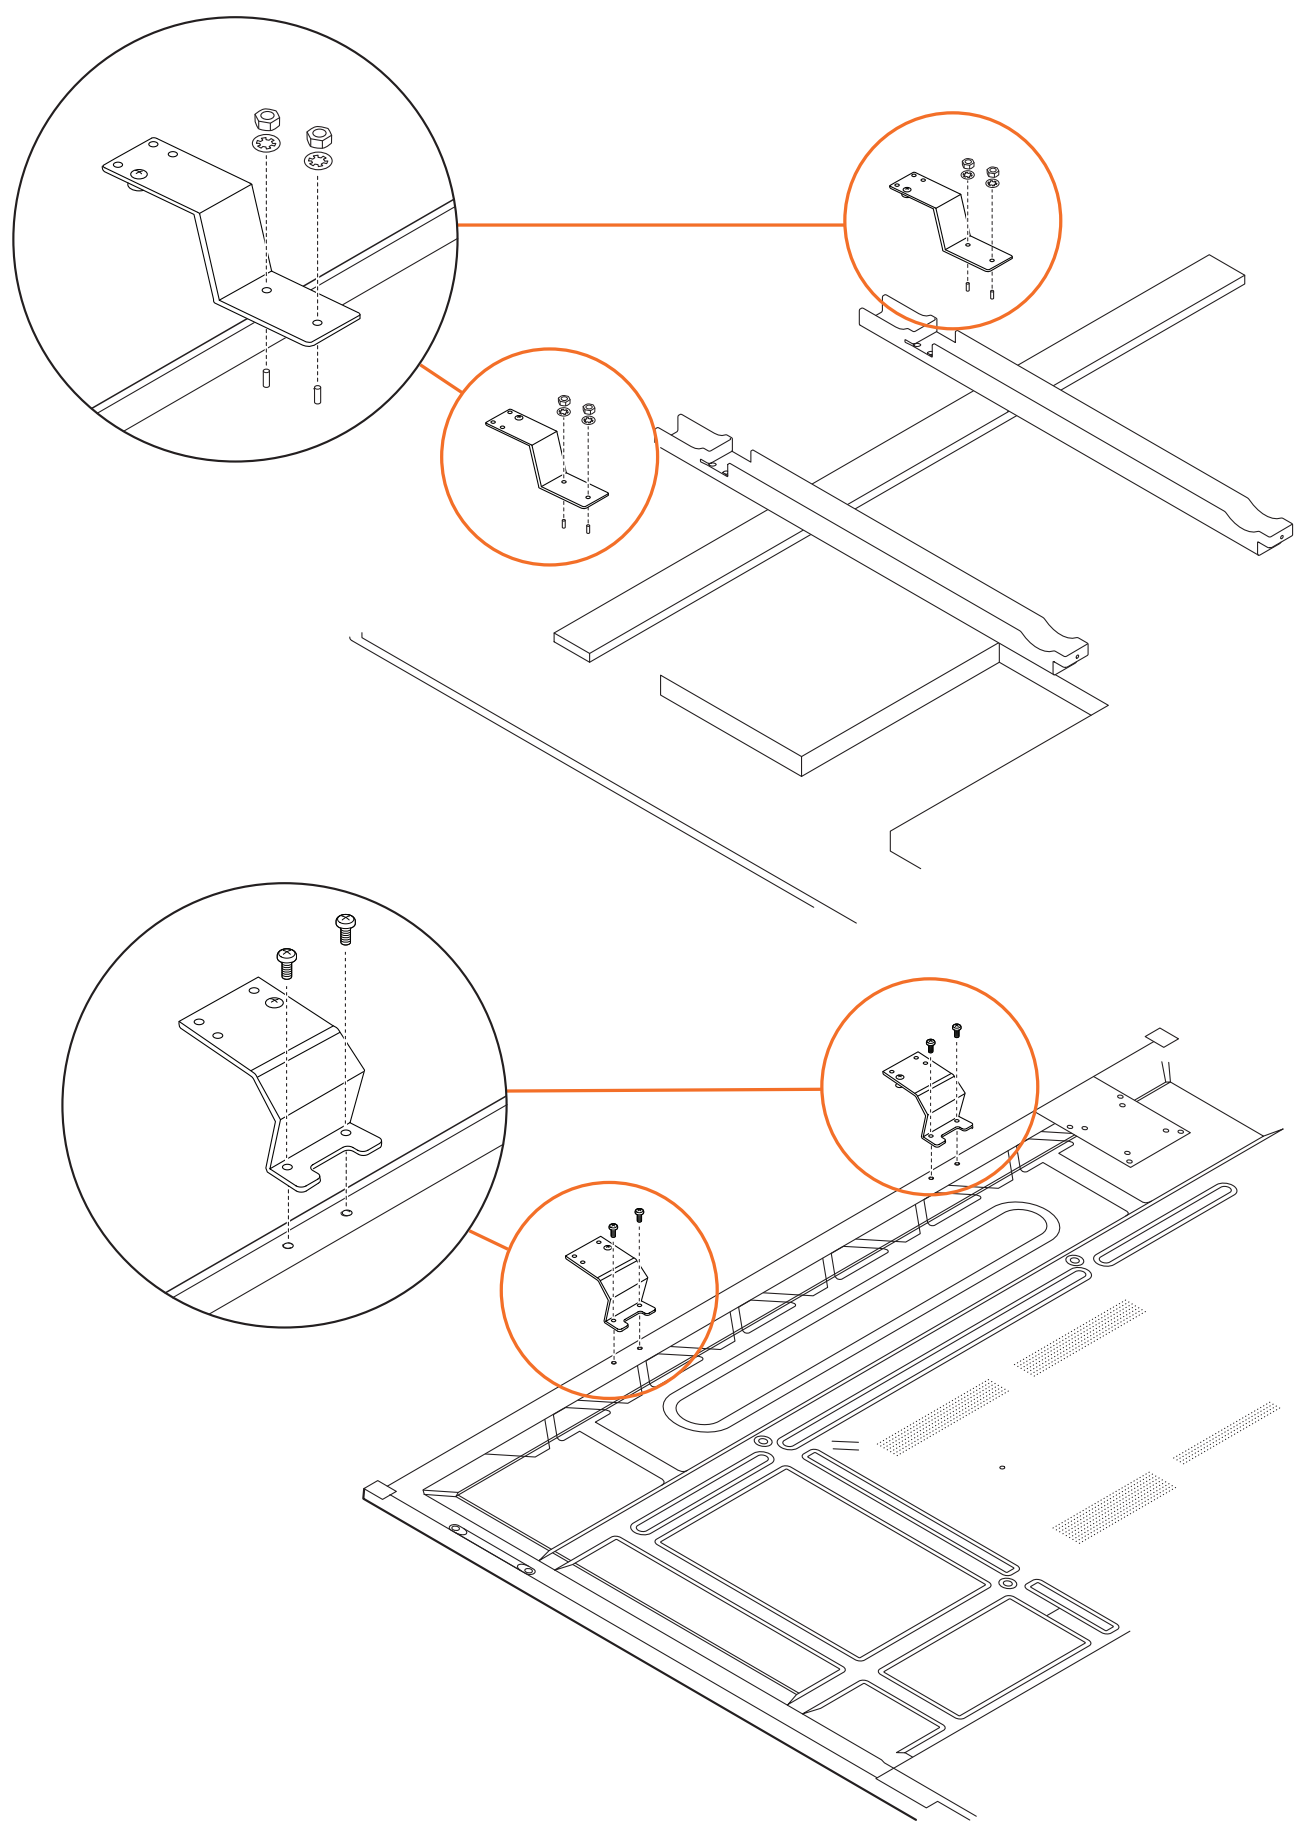 

3

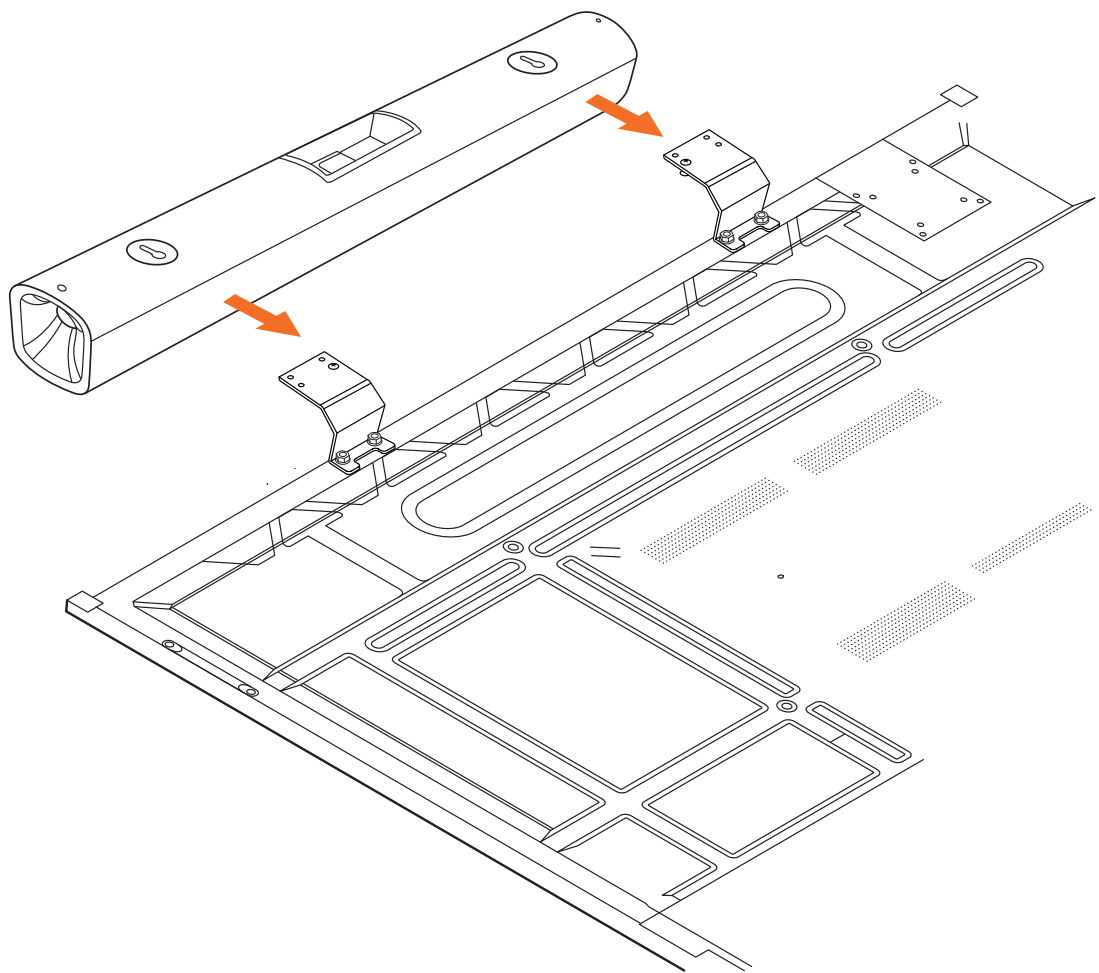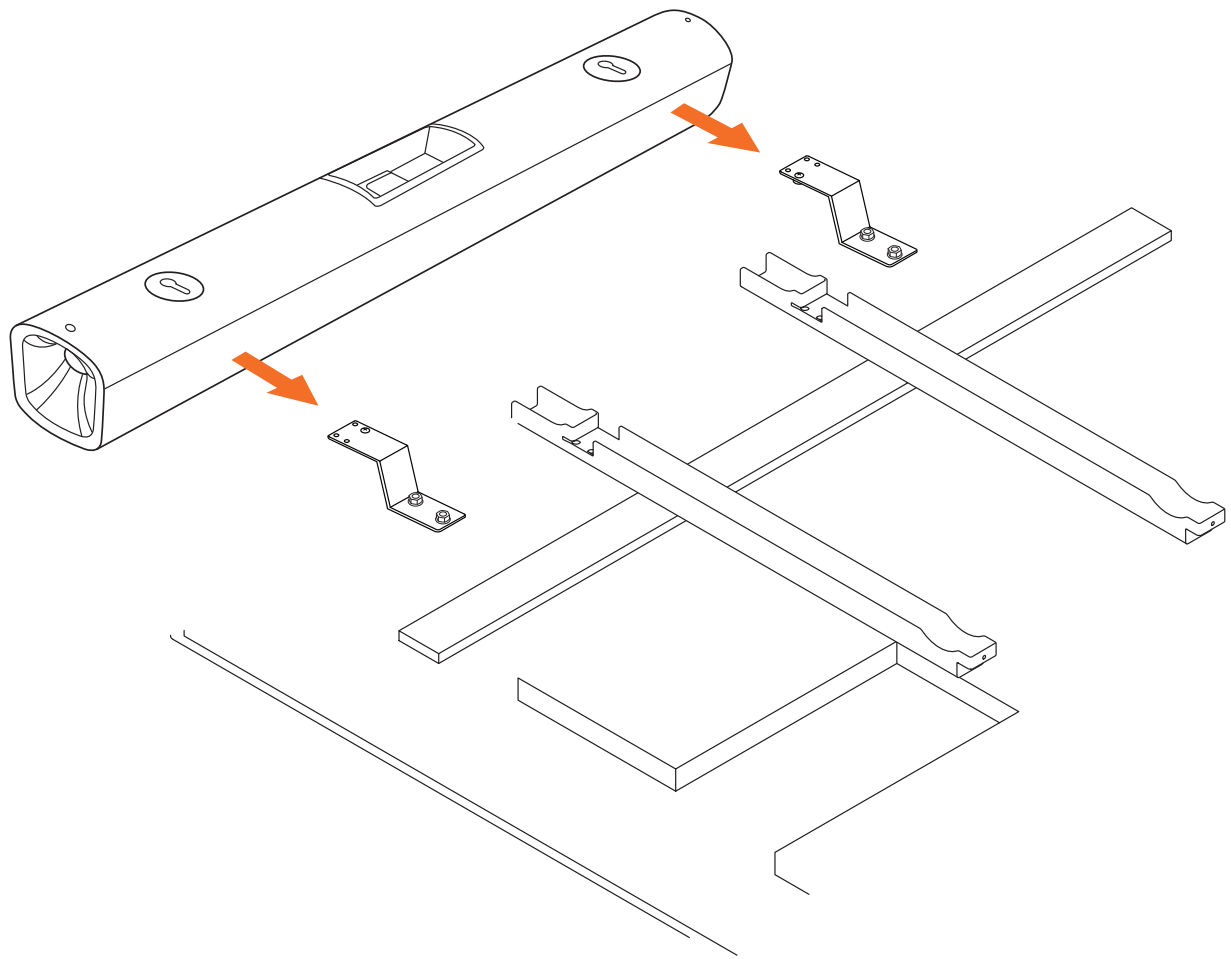  


4

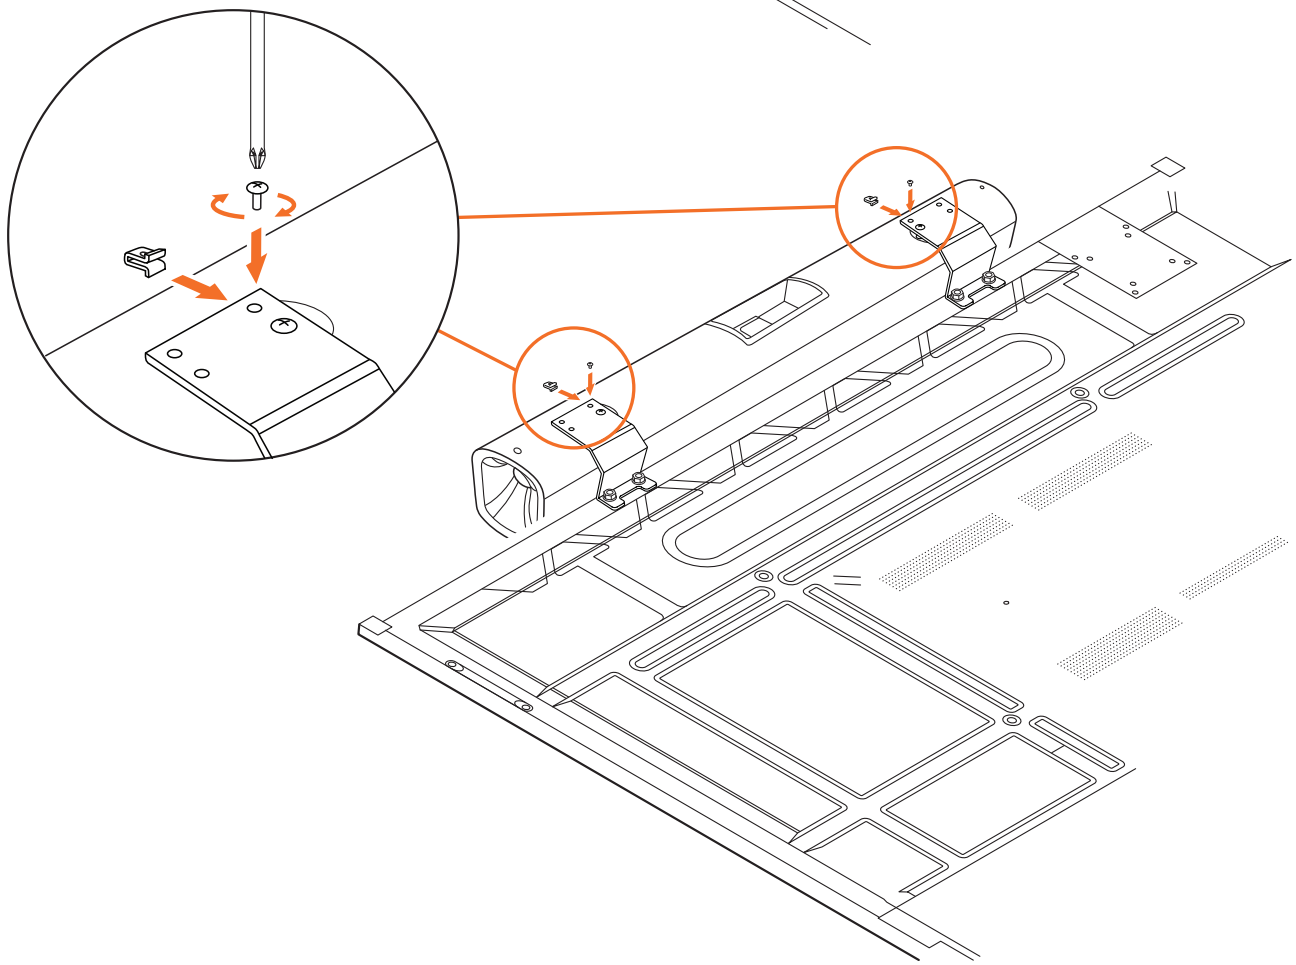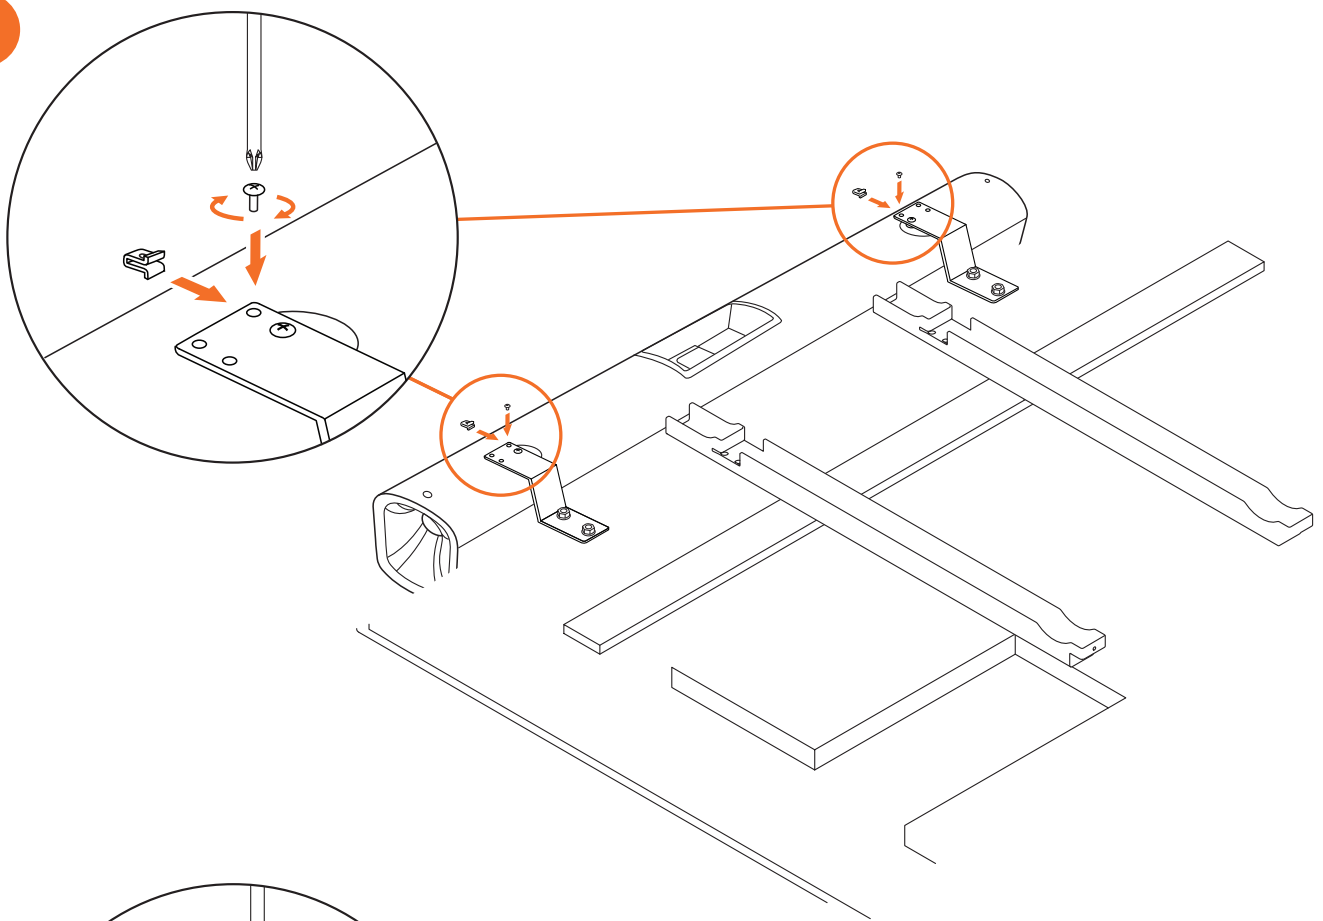  


TILLEGG FOR ACTIVPANEL 9

 
1

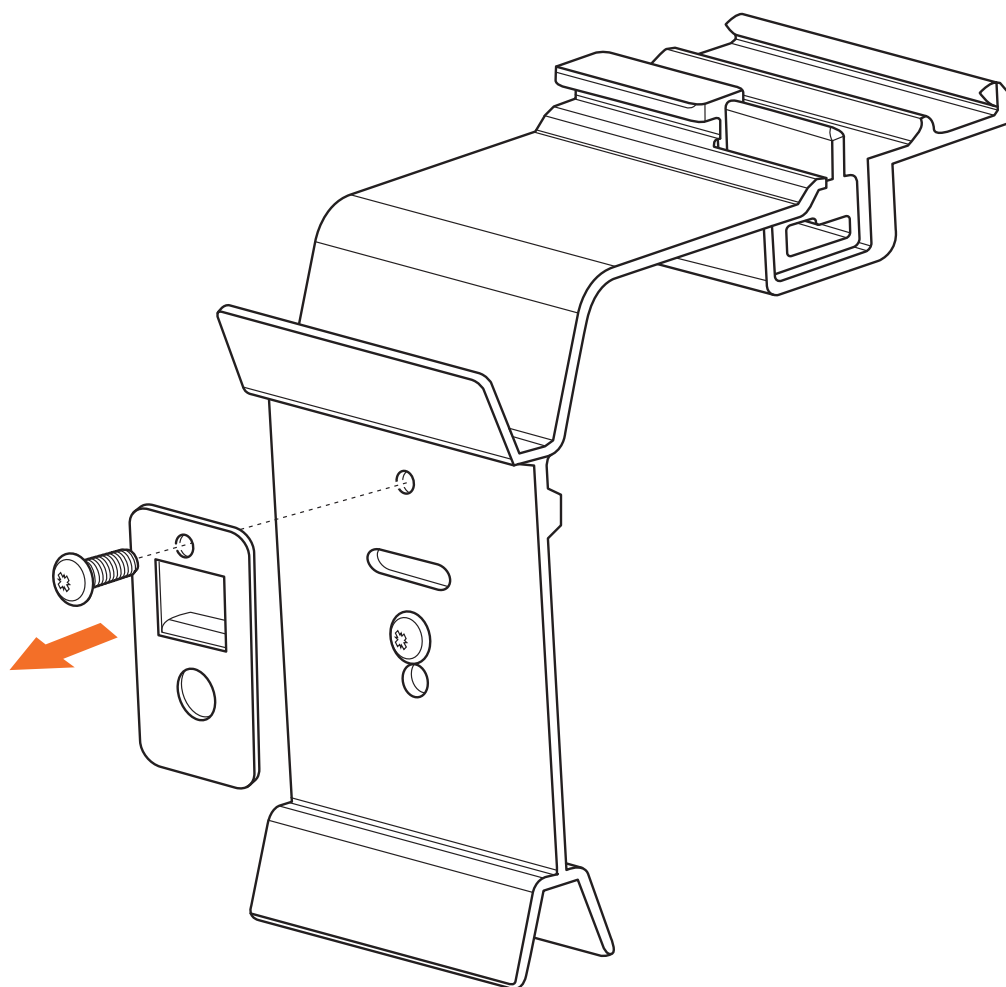


2

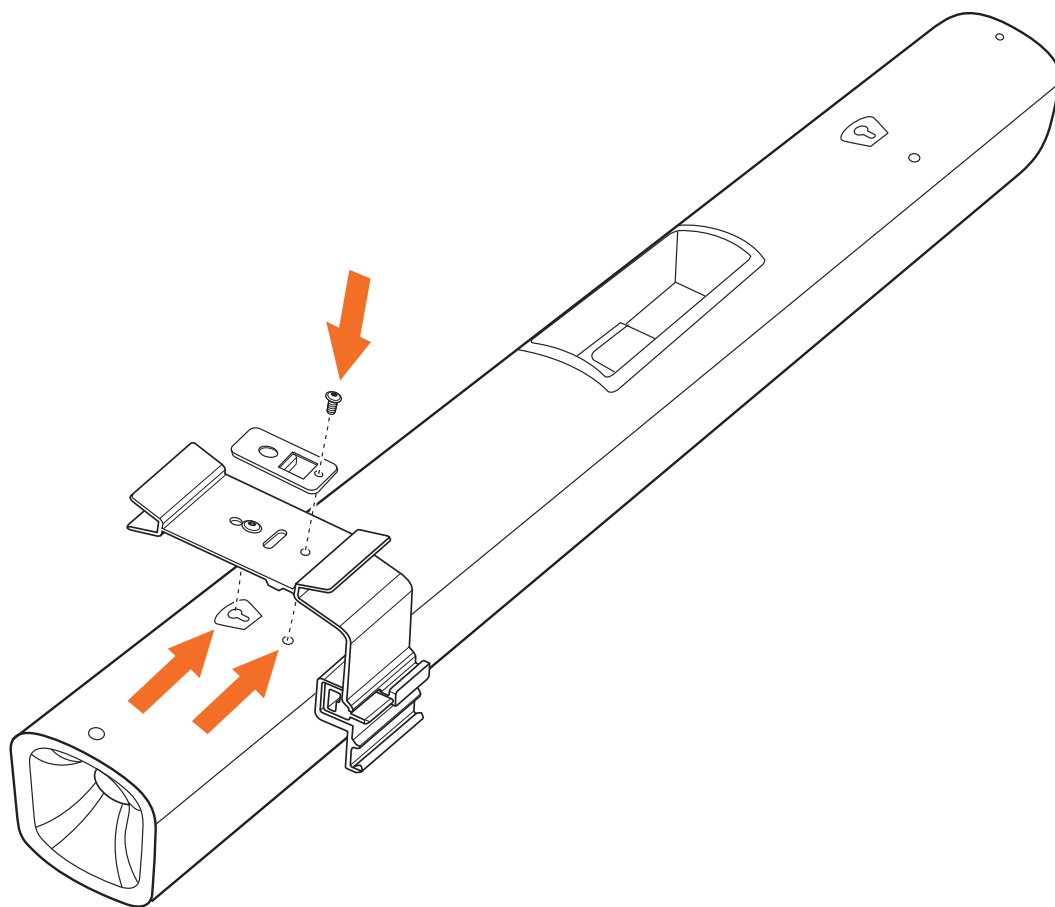 


3

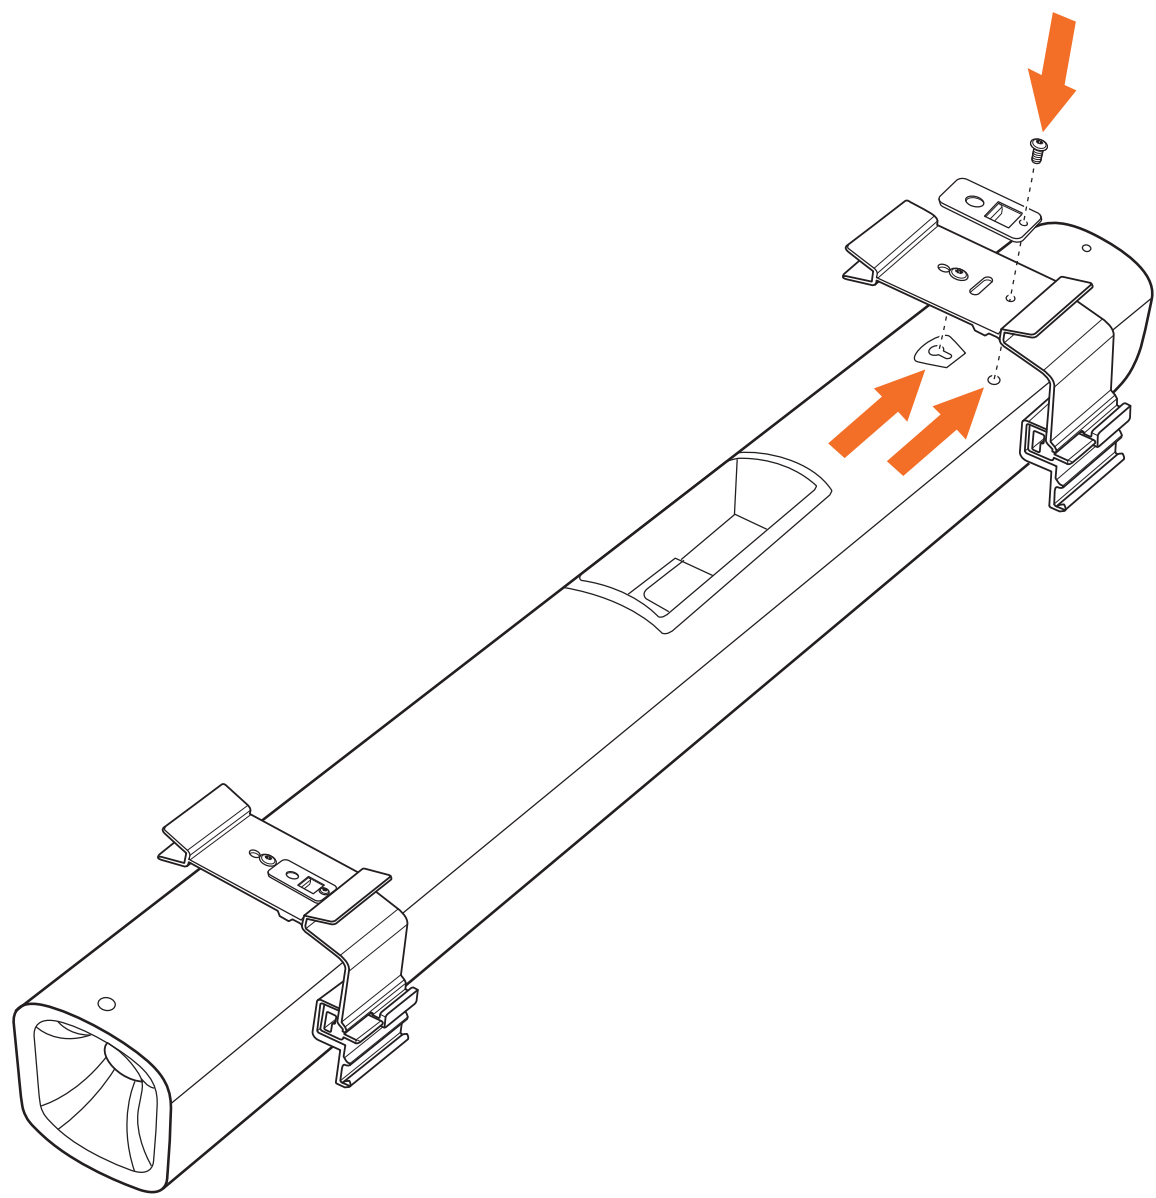 


4

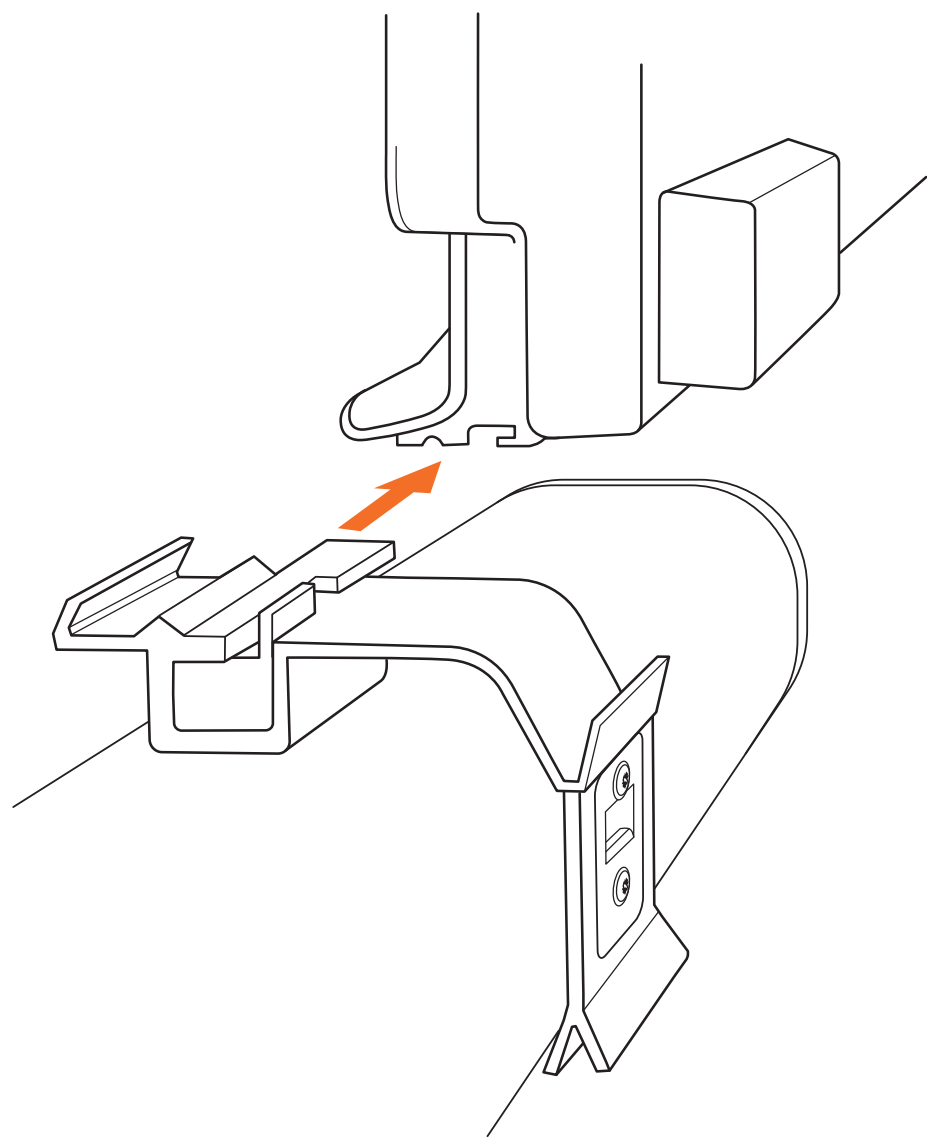 




5

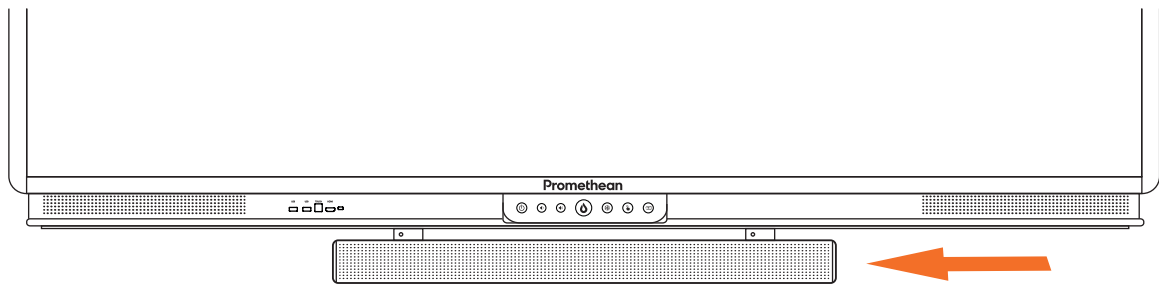 


6

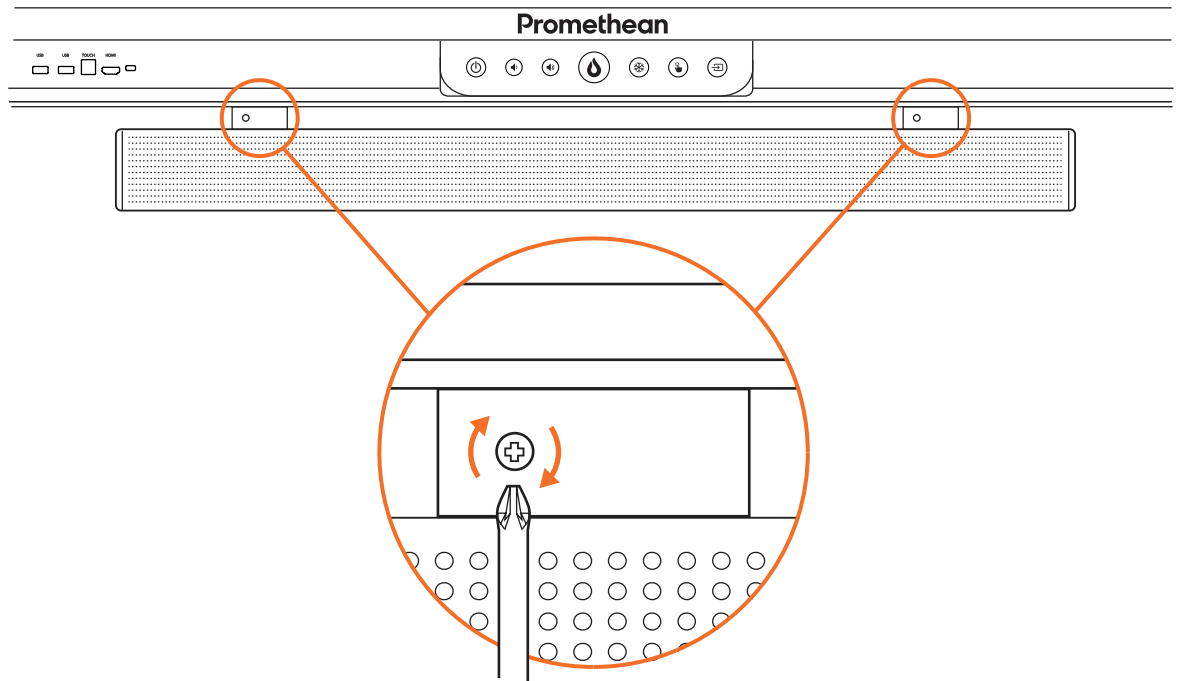 


1

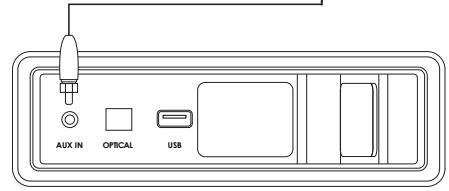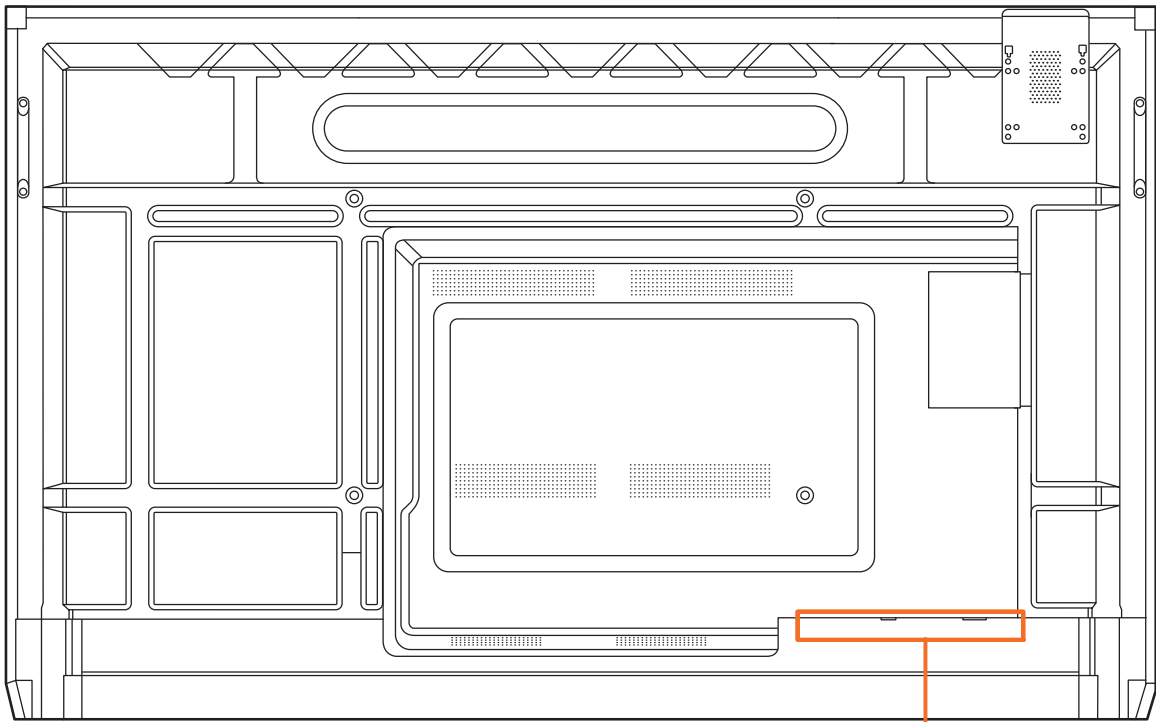   


2

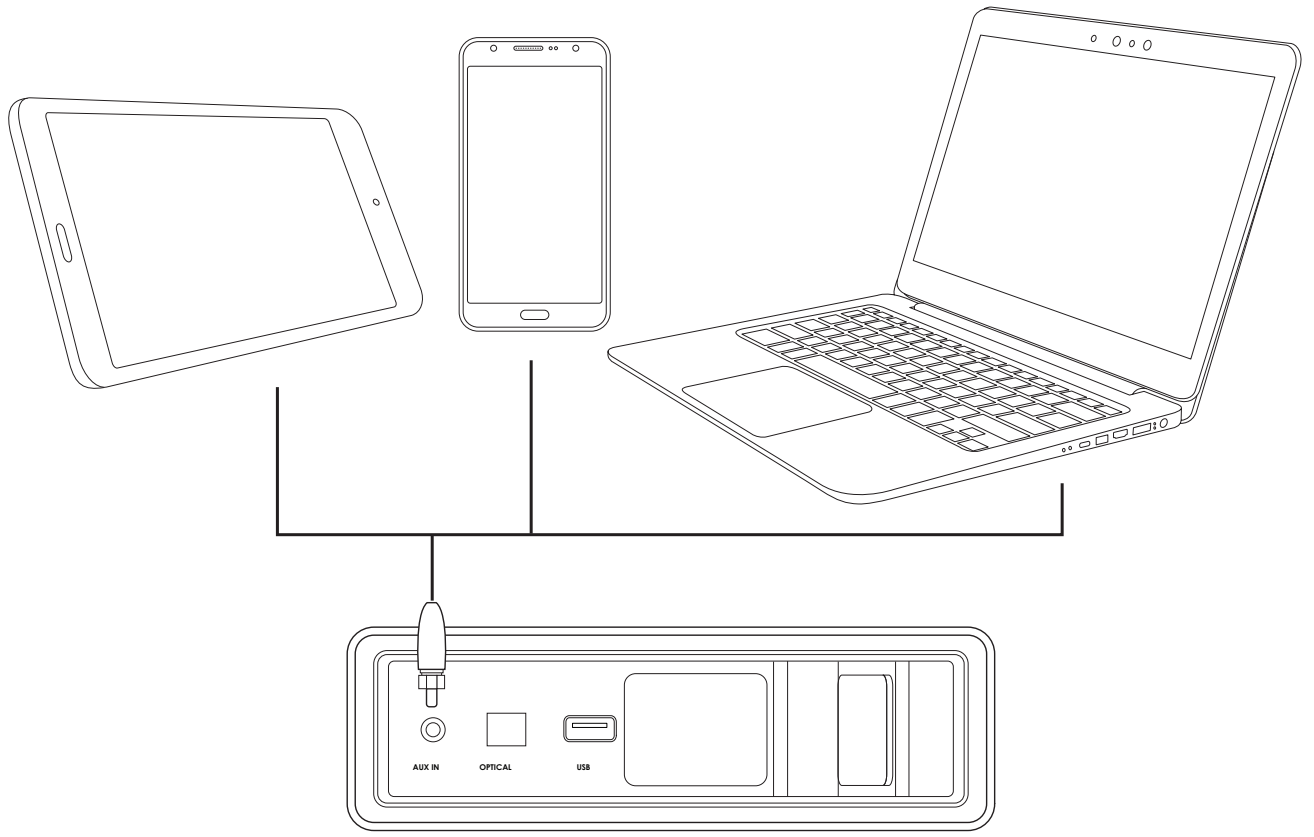 

3

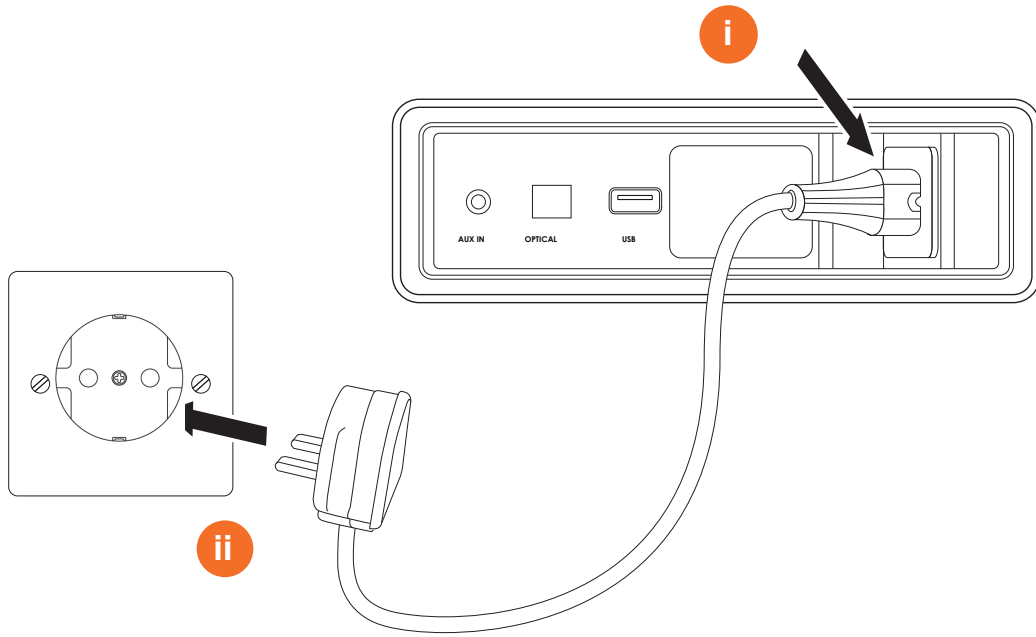 


4

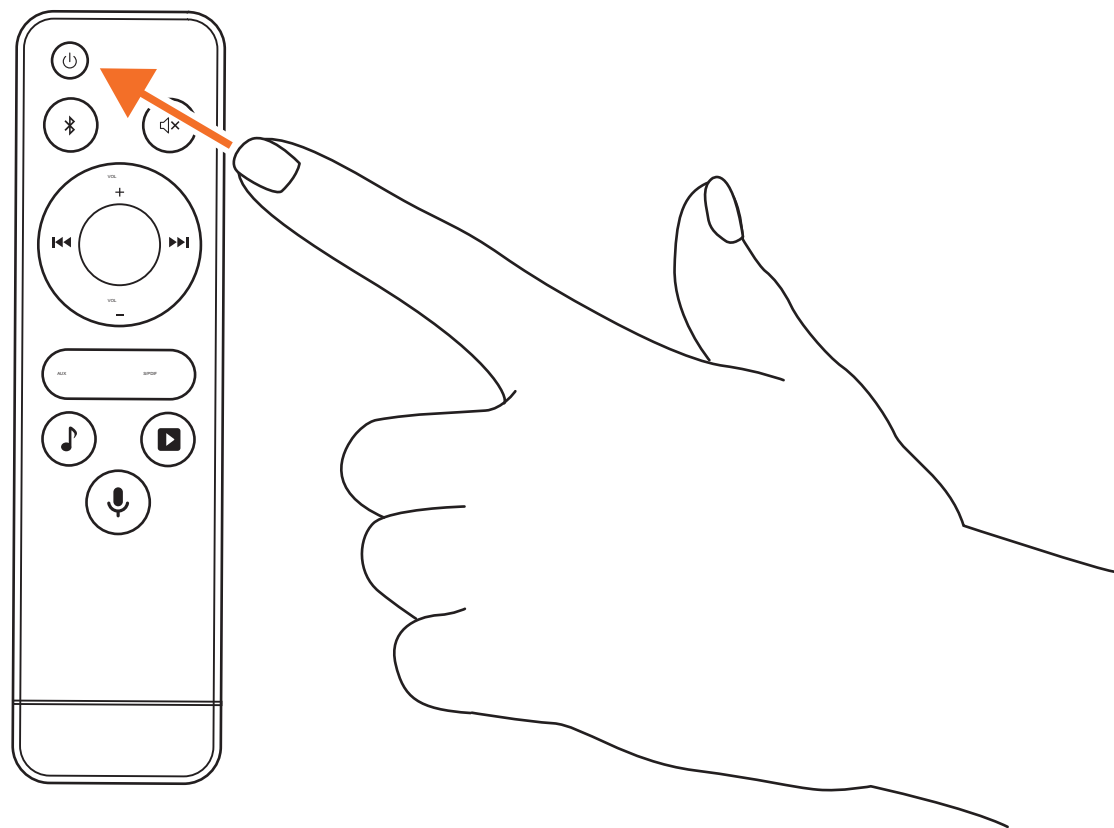 




1

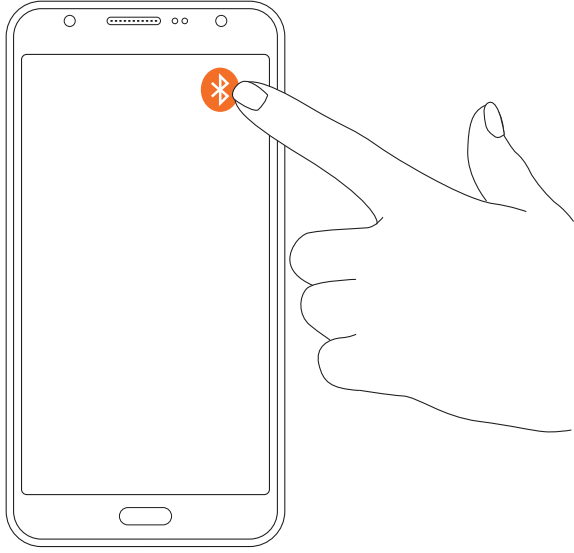 

2

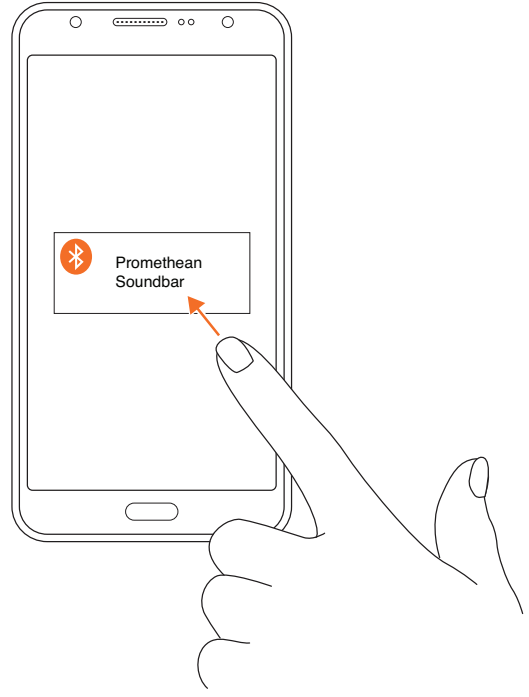 

3

