

INNGANGER PÅ AP10 ESSENTIAL OG PREMIUM





AP10 Premium - s 2


AP10 ESSENTIAL

Front

Side / bak

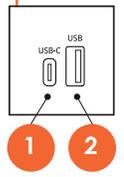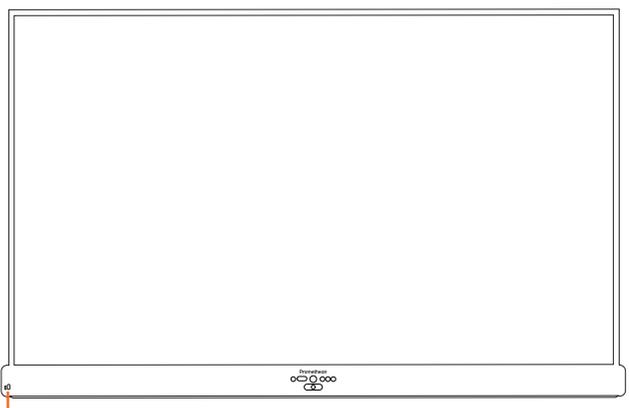



1	USB-C	2	USB
---	-------	---	-----

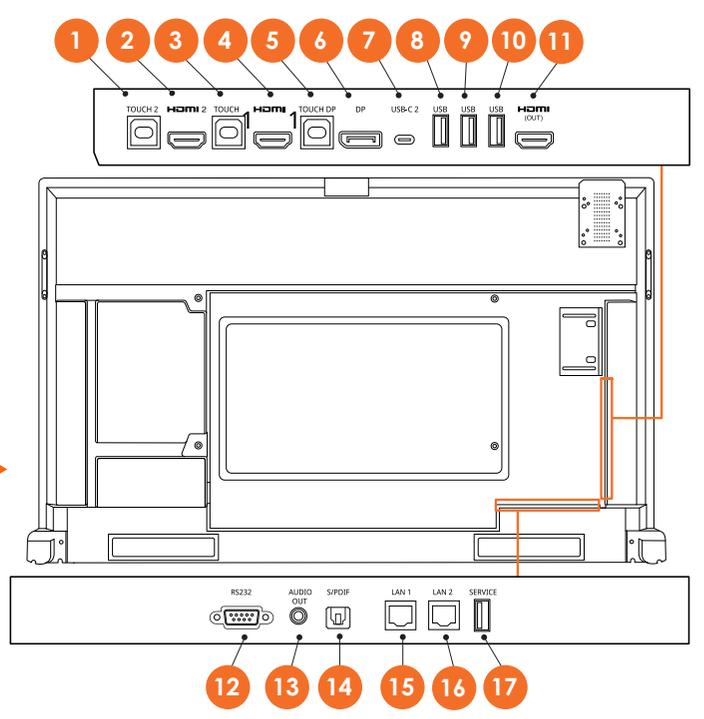

1	TOUCH 2	2	HDMI 2
3	TOUCH 1	4	HDMI 1
5	TOUCH DP	6	DP
7	USB-C 2	8	USB
9	USB	10	USB
11	HDMI UT	12	RS232
13	AUDIO UT	14	S/PDIF
15	LAN 1	16	LAN 2
17	SERVICE		


AP10 PREMIUM

 Front

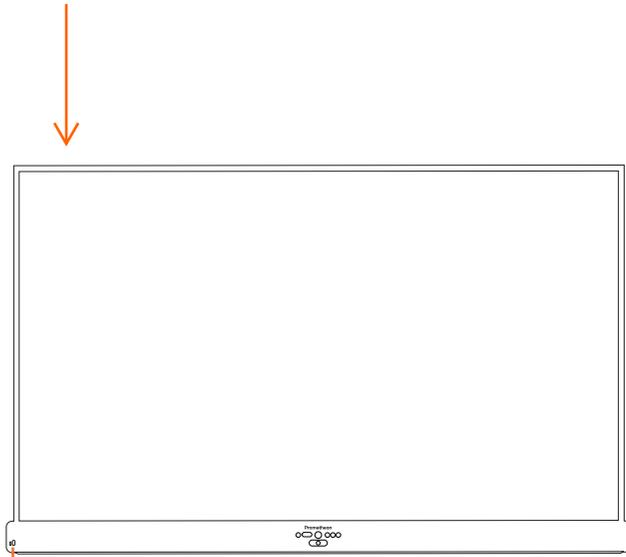

- | | | | |
|---|-------|---|-----|
| 1 | USB-C | 2 | USB |
|---|-------|---|-----|

Side / bak

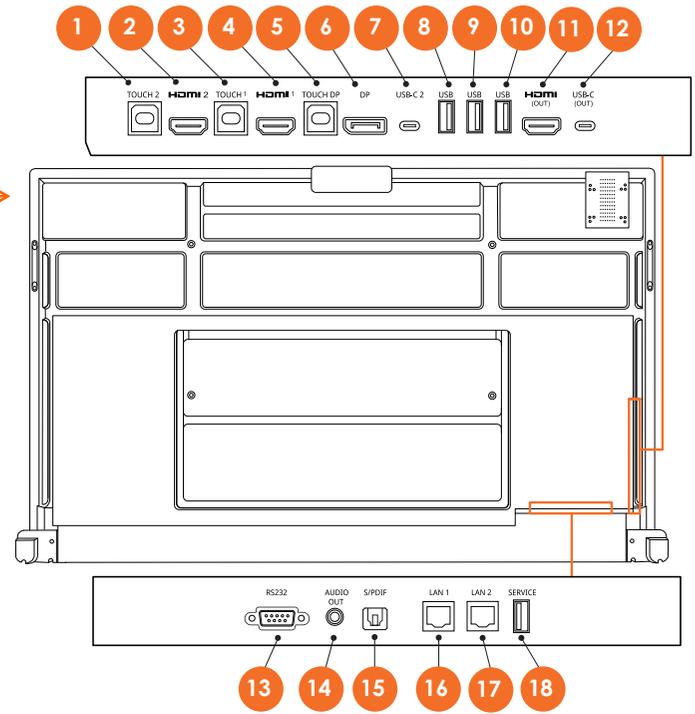

1	TOUCH 2	2	HDMI 2
3	TOUCH 1	4	HDMI 1
5	TOUCH DP	6	DP
7	USB-C 2	8	USB
9	USB	10	USB
11	HDMI UT	12	USB-C UT
13	RS232	14	AUDIO UT
15	S/PDIF	16	LAN 1
17	LAN 2	18	SERVICE