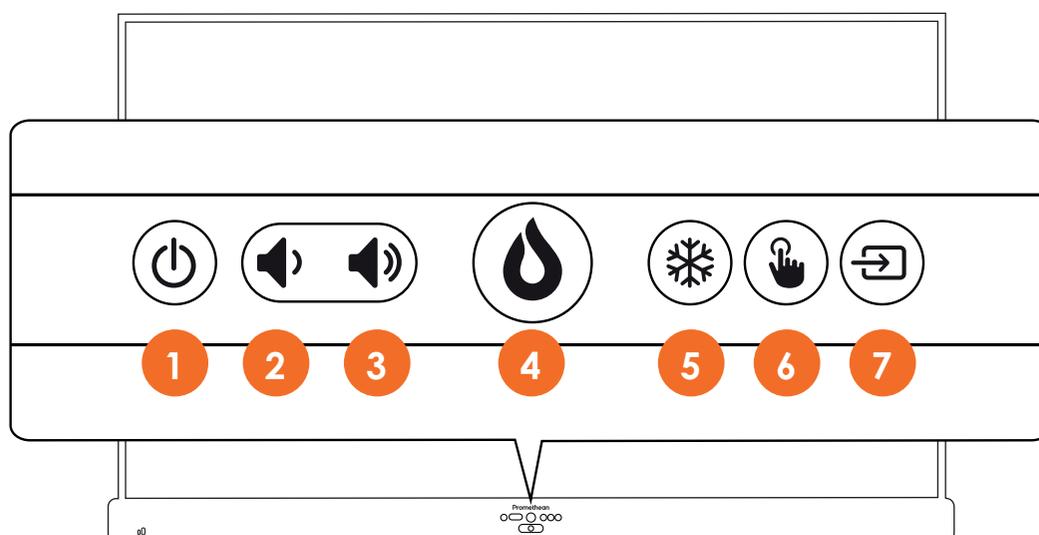


MENYER

PÅ AP10 ESSENTIAL OG PREMIUM



1	Skjerm på / av	2	Senk volumet
3	Øk volumet	4	Åpner ActivSuite på tilkoblet datamaskin (hvis installert)
5	Frys / avfrys skjermen	6	Slå av / på touch
7	Kildevalg		

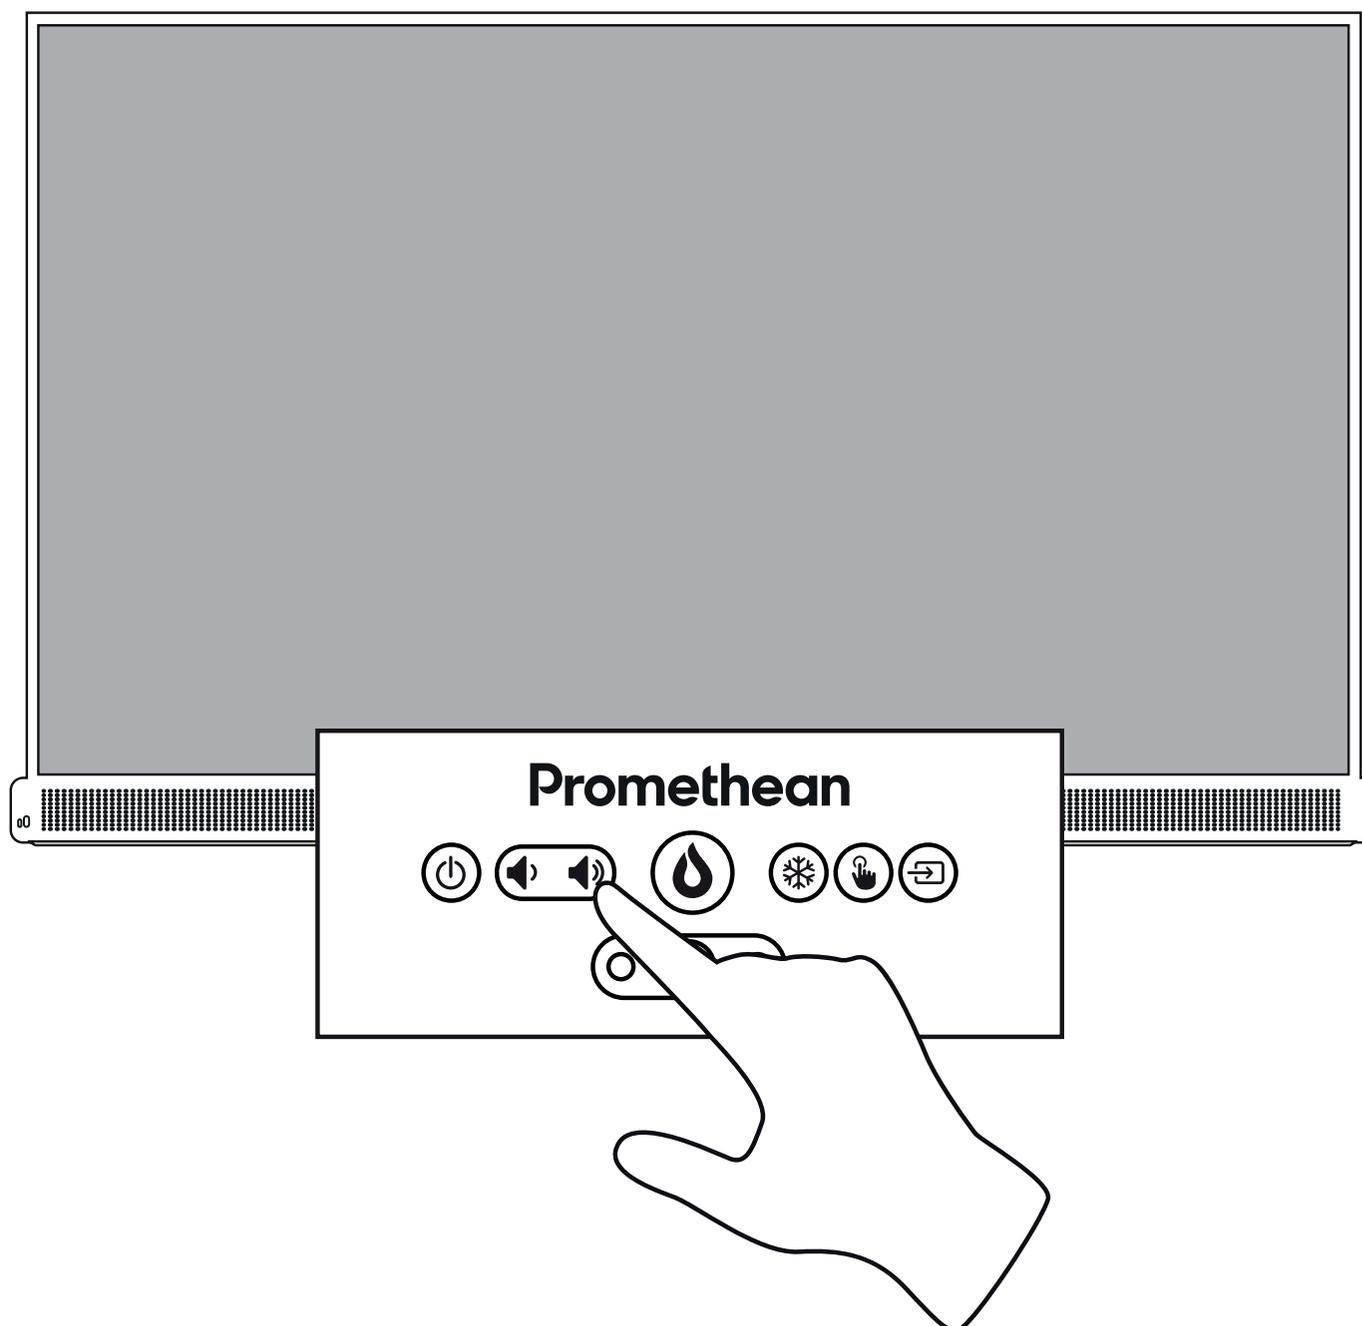
LYS



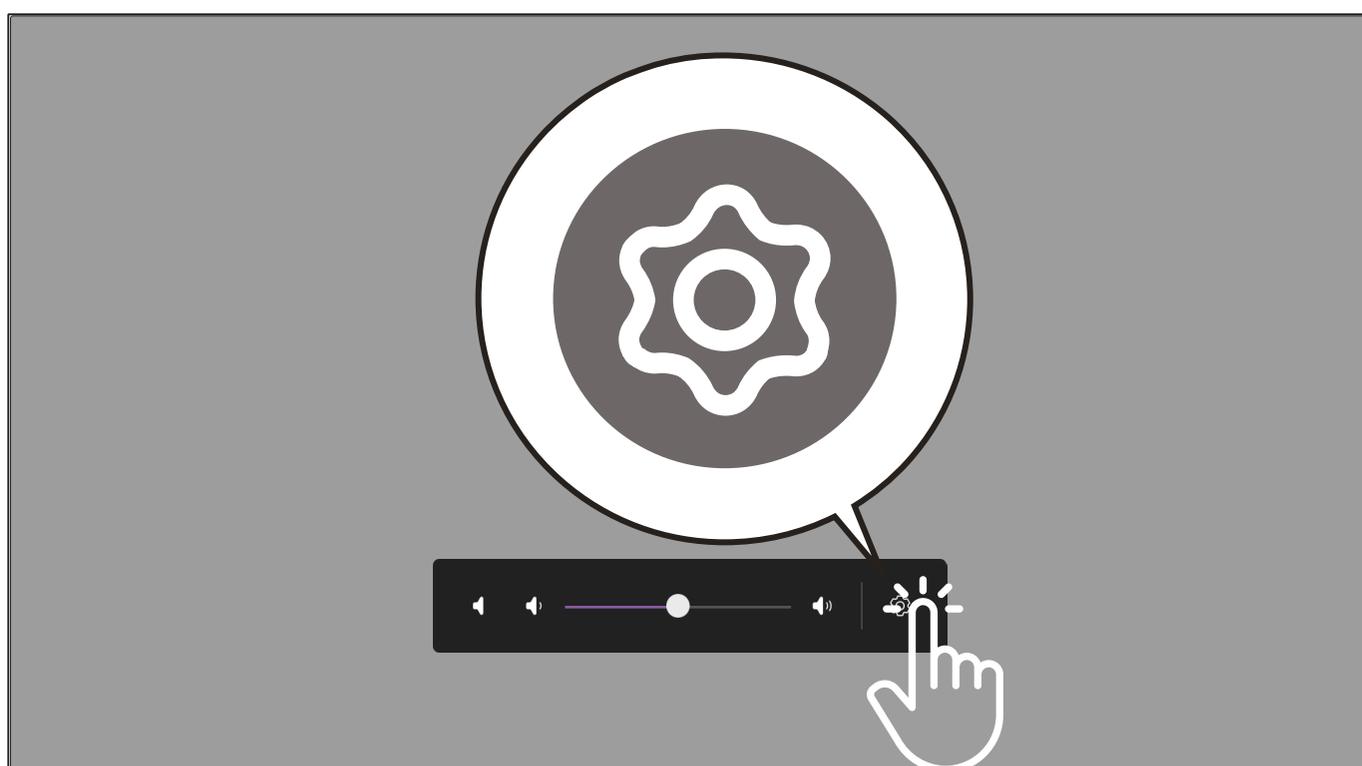
	Skjerm på	Standby	Avslått
På-knapp	○	●	●
Menyknapp	○	○	-

INNSTILLINGER

1



2



Settings

- Display
- Audio
- Pen
- Input
- Power
- System

Brightness

Contrast

Sharpness

Automatic brightness

High dynamic range (HDR)

Blue light reduction

Backlight Eco >

[Reset to defaults](#)

Settings

- Display
- Audio
- Pen
- Input
- Power
- System

AQ preset Theater >

Volume

Balance

Treble

Mid

Camera auto-framing >

[Reset to defaults](#)

Settings

- Display
- Audio
- Pen
- Input
- Power
- System

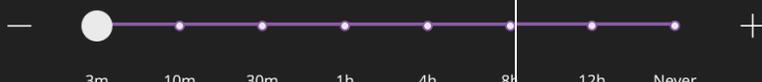
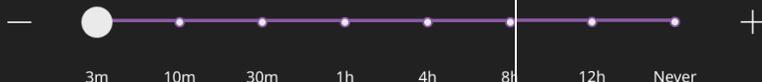
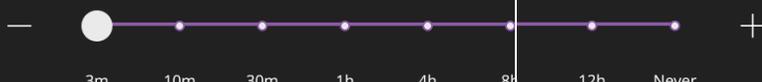
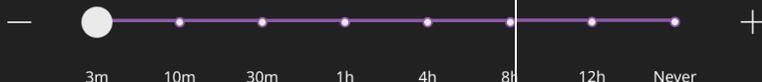
Pen writing pressure

Eraser >

Settings

- Display: Default boot source OPS >
- Audio: Auto source select
- Pen: Wake on source detection
Automatically turn on the panel from sleep when a computer is plugged in.
- Input** 
- Power: HDMI CEC
- System: HDMI version 1.4 >
- System: USB-C refresh rate 60Hz >

Settings

- Display: Standby timer
- Audio: 
- Pen: 
- Input** 
- Power: 
- System: 
- System: Timers set to Never or panels running in excess of 20 hours may diminish the panel lifespan.
- System: Wake on LAN
- System: Proximity sensor
- System: Proximity settings >

Settings

- Display: Language English >
- Audio: Model name #####
- Pen: Serial number #####
- Input: Firmware version #####
- Power: MCU version #####
- System** 
- System: Bezel version #####
- System: Network >
- System: Update >
- System: Factory reset >