

 
## Quick Start Guide LINEARdrive 720D

(LIN720D2)




# Connecting and configuring LINEARdrive 720D








B Removing the strain reliefs

 

C Mounting the LINEARdrive

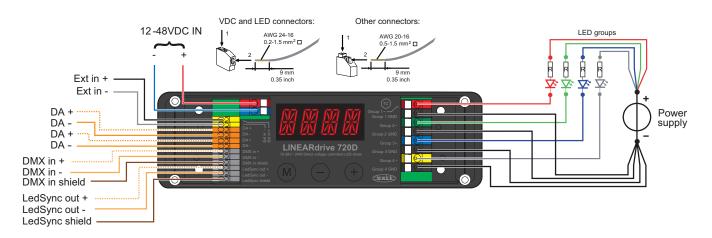

D Making the wire connections



E Fastening the strain reliefs



F Configuring the LINEARdrive




G Replacing the cover




CAUTION: The device may only be connected and installed by a qualified electrician. All applicable regulations, legislation and building codes must be observed. Incorrect installation of the device can cause irreparable damage to the device and the connected LEDs.

## **Manual configuration**
 
## 1. Select mode of operation



## 2. Set LED groups

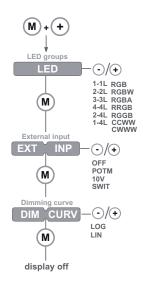


#### 3. Standalone Standalone Networked operation operation operation or or - DMX or DALI -- Colour\*-- Show -M (M) (M) (M) ⊙/⊕ ⊙/⊕ HUE $\odot/\odot$ Addres 0 1535 00...20 1...512 (M) (M) (M) $\odot/\odot$ $\odot/\odot$ NETW RES ⊙/⊕ M (M 8 BT 16 BT 0...255 -99...99 (M)(M) (M) $\bigcirc$ / $\bigcirc$ ⊙/⊕ ⊙/⊕ 0...255 YES NO X BAL 0...255 (M) (M) (M) (M)display off display off ⊙/⊕ display off AUTO MANU (M) $\odot/\odot$ OFF VID COLR (M)WHIT display off

## Other features

### Visual test run


 
## Locking the configuration



## Reset to factory defaults

