
Figure

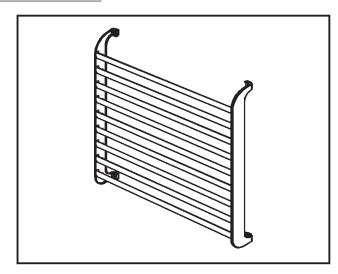

olicable Models

- MUZ-LN25VG **■ MUY-TP35VF**
- MUZ-LN25VGHZ ■ MUY-TP50VF

Descriptions

- **MUZ-LN35VG** ■ MUZ-FH25VE
- MUZ-LN35VGHZ
- MUZ-FT25VGHZ MUZ-FH35VE
- MUZ-FH35VEHZ MXZ-2F33VF3 **■ MUZ-AP20VG**
- MUZ-AP25VG(H) ■ MUZ-SF25VE
- MUZ-AP35VG(H) ■ MUZ-SF25VEH
- MUZ-AP42VG(H) ■ MUZ-SF35VE
- **■** MUZ-EF25VG ■ MUZ-SF35VEH ■ MUZ-SF42VE ■ MUZ-EF25VGH
- MUZ-EF35VG
- MUZ-EF35VGH
- MUZ-EF42VG
- MUZ-BT50VG
- **■** MUZ-HR42VF
- MUZ-HR50VF
- MUZ-DW50VF

The air outlet guide changes the direction of air from


the outdoor unit and prevents short cycling.

- MXZ-2D33VA
 - MXZ-2D42VA2
 - MXZ-2D53VA2
- MUZ-FH25VEHZ MXZ-2D53VAH2
 - MXZ-2DM40VA

 - MXZ-2F42VF3
 - MXZ-2F53VF3
 - MXZ-2F53VFH3
 - MXZ-2HA40VF
 - MXZ-2HA50VF

Dimensions

Unit: mm

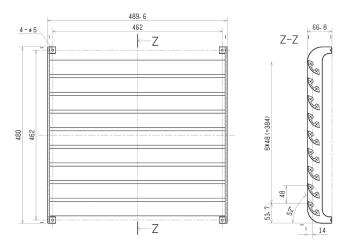

■ MUFZ-KW35VGHZ ■ SUZ-M25VA

- SUZ-M35VA
- SUZ-KA25VA6

■ MUZ-SF42VEH

■ MUZ-HJ50VA ■ MUFZ-KW25VGHZ

■ SUZ-KA35VA6

Specifications

Exterior	Color (Munsell)	Ivory (3.0Y 7.8/1.1)
	Surface treatment	Polyestel powder coating
	Material	Electro-galvanized steel sheet
Weight		1.6 kg

Components


① Air outlet guide ×1	② Screw M5 x 10 x 4
	666

How to Use / How to Instal

1. Preparations

For 800(W) x 550(H) x 285(D) outdoor units


- Remove the front panel from the outdoor unit.
- Drill Ø4.0 mm screw holes in the front panel at the 4 locations shown below.
- The length of the drill bit should be about 10 mm as shown in the figure below. If the drill bit is too long, it may damage the parts inside the outdoor unit.

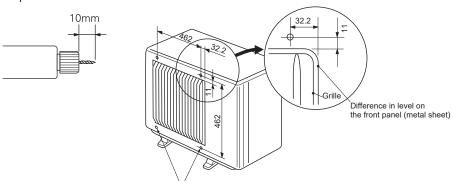

Drill the lower holes through the front panel and the base.

For 684(W) x 540(H) x 255(D) outdoor units

- Remove the front panel from the outdoor unit.
- Drill Ø4.0 mm screw holes in the front panel at the 4 locations shown below.
- The length of the drill bit should be about 10 mm as shown in the figure below. If the drill bit is too long, it may damage the parts inside the outdoor unit.

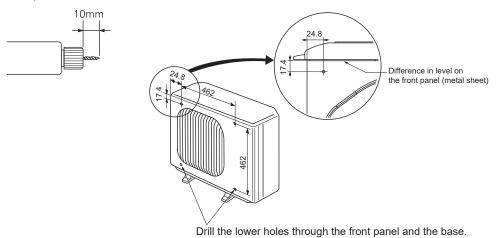

2. Attaching the air outlet guide

- Attach the air outlet guide to the outdoor unit with the 4 screws provided with the air outlet guide.
- The air outlet guide is allowed to be installed in any of the following directions so that air blows upwards, to the left, or to the right.
- * Do not install the air outlet guide in the downward direction, or it may cause short cycling.

Note: Tighten the screws securely.

A chattering sound could be produced due to vibration if the screws are loose.

