



*Danfoss*


## INSTRUCTIONS

Gland seal for RA-C valve




013R9292

1)

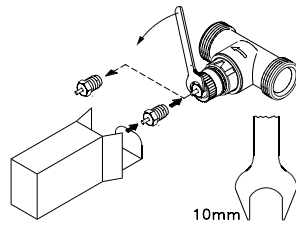

 2)



013R9292



- Ⓓ Kan udskiftes under drift. Husk tæthedskontrol.
- ⒼⒸ Can be replaced during operation. Don't forget leak inspection.
- Ⓓ Während des Betriebs auswechselbar. Dichtigkeitskontrolle nicht vergessen.
- Ⓕ Le remplacement peut se faire en cours de marche. Penser au contrôle d'étanchéité.
- Ⓔ Kan bytas under drift. OBS - tåthetskontroll.
- ⒹⒻ Kan tijdens bedrijf vervangen worden. Vergeet niet op dichtheid te controleren.
- ⒻⒼ Voidaan vaigtaa käytön aikana. Muista tiiviyskoe.

DKCD

01-2000 VI.36.A1.6J

