



FDUSP6

FlexCore™ Fiber Spool 6-pack
Color Coordinated Kit
shown implemented on FlexCore™ system

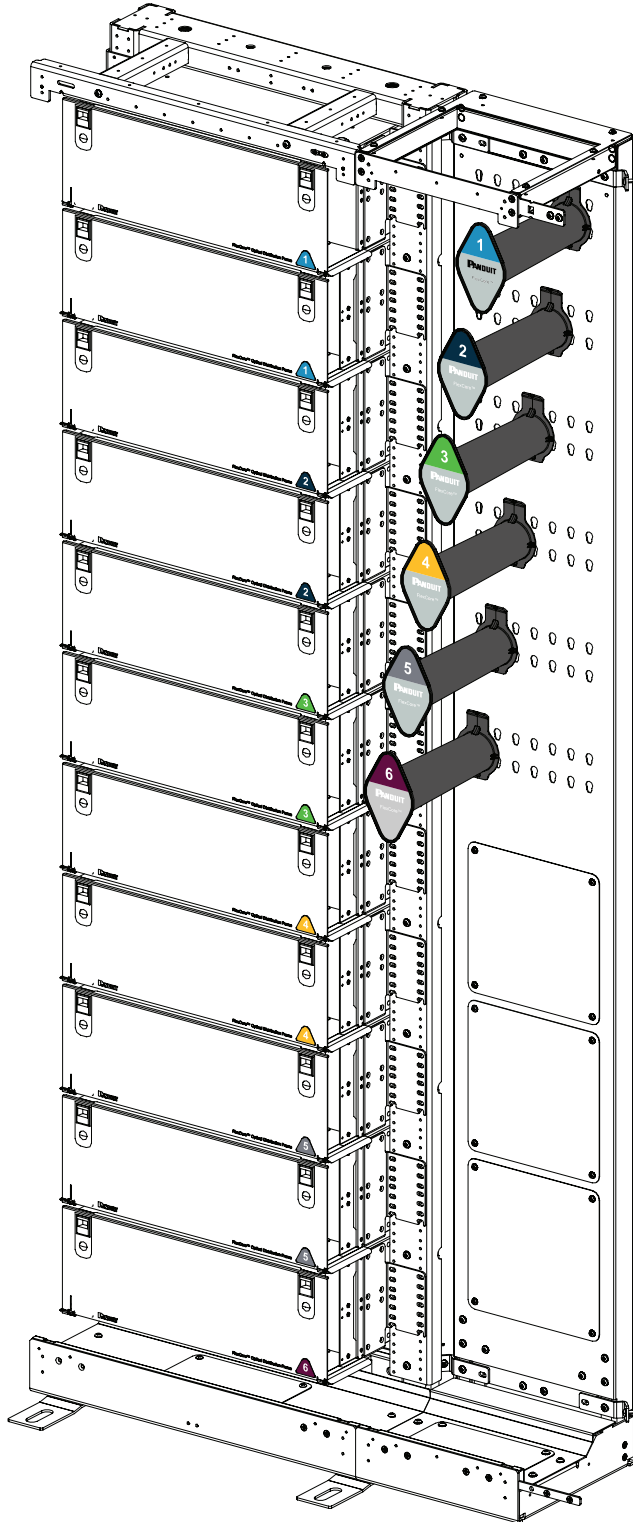


Components included

Fiber Spools
Qty: 6
(1 of each color 1 thru 6)


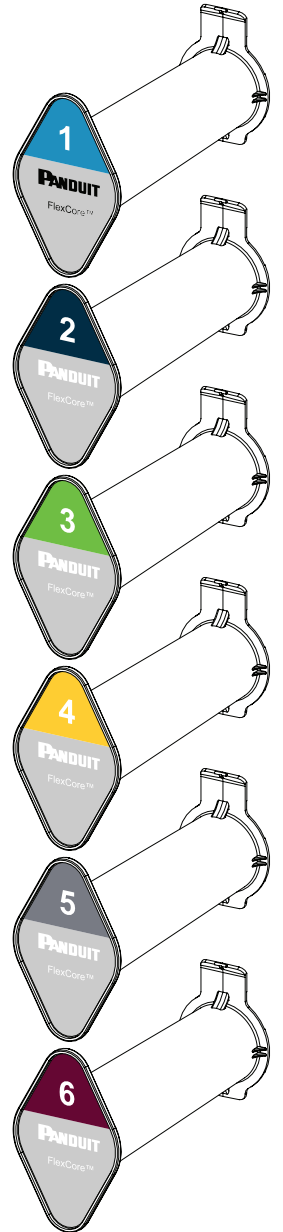


Enclosure Door Labels
Qty: 1 sheet

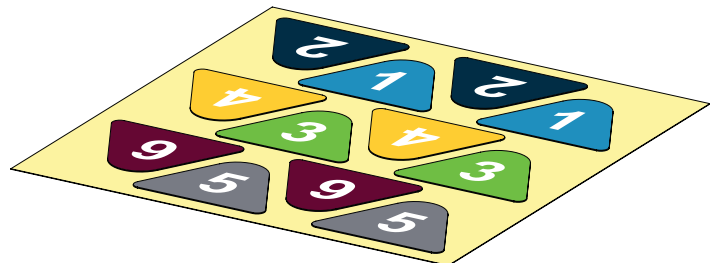


Fiber Spool Installation & Removal


- Install buttons on the back of the Fiber Spool into the keyholes in the FlexCore™ Vertical Cable Manager
- Push Fiber Spool downward until a clicking sound is heard and Fiber Spool is completely engaged
- **Removal** - Use one hand to pull top tab of the Fiber Spool out while simultaneously pushing spool upward

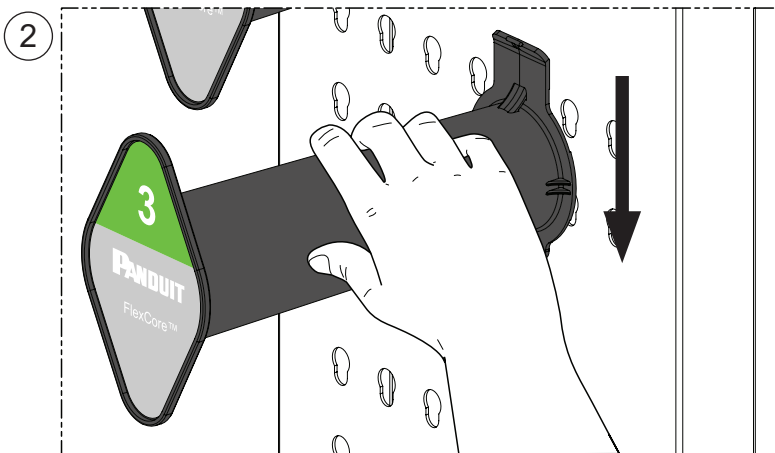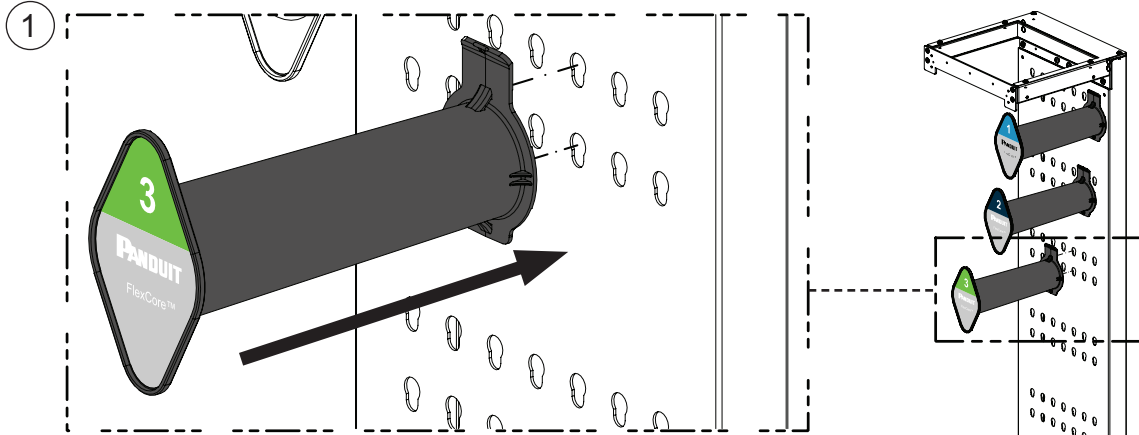

Rear View of Fiber Spool Install

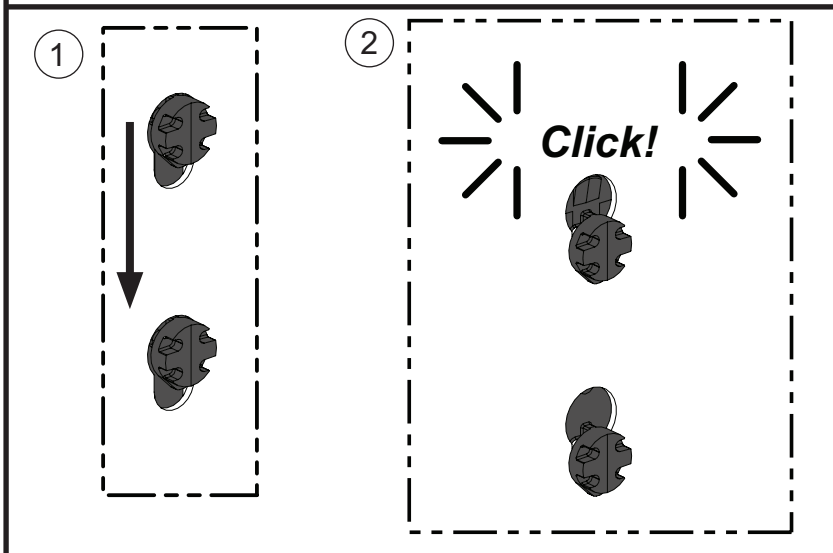

Fiber Spool Removal

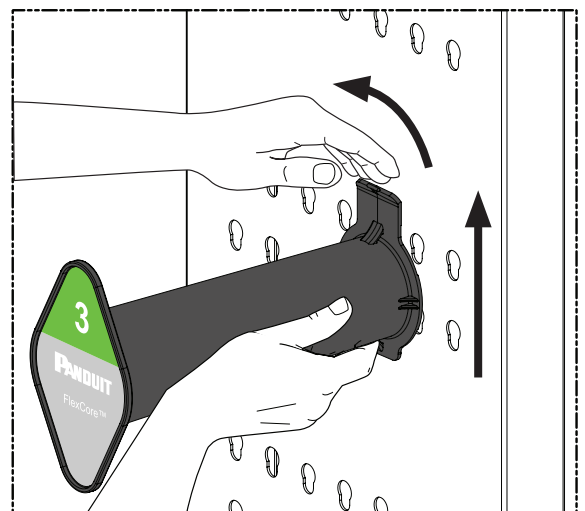


Affixing the Enclosure Door labels

- Enclosure Door Labels have 2 labels for each Fiber Spool. Each Fiber Spool can manage cables for 2 enclosures
- A set of tick marks is located on both the right & left side of the Enclosure Door to aid in proper placement of the Labels
- The Enclosure Door Labels should be applied to the same side that the Fiber Spools will reside
- See FS204 FlexCore™ Front-Access Patchcord routing guide for further information & configurations




Enclosure Door Labels
2 Labels per Fiber Spool


Right-Hand Fiber Spool Install

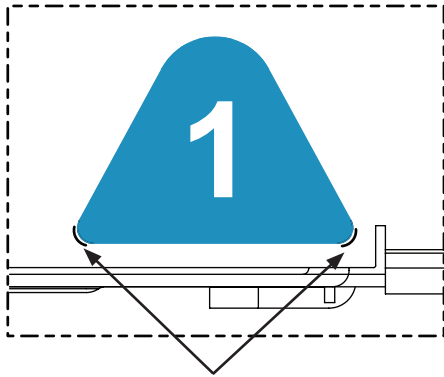

Use tick-marks, located on each side of the Enclosure Doors, to align the Enclosure Door Labels

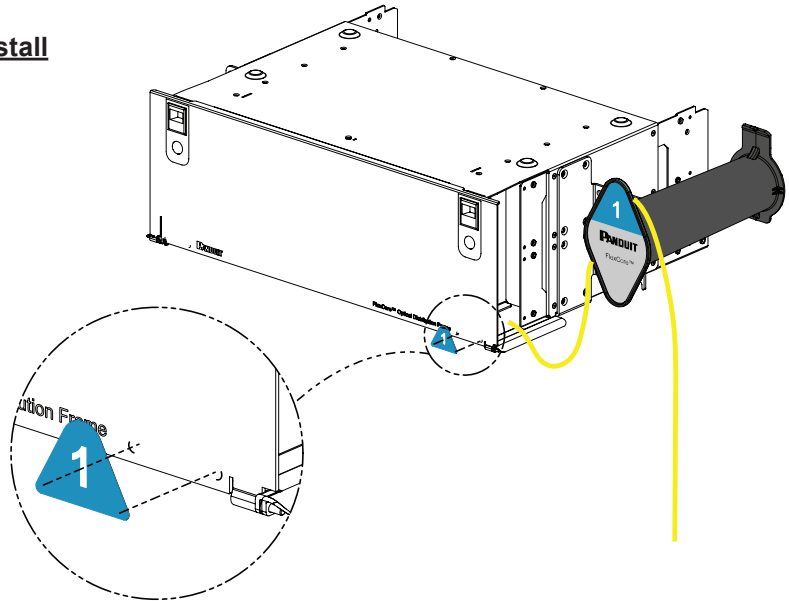

Left-Hand Fiber Spool Install

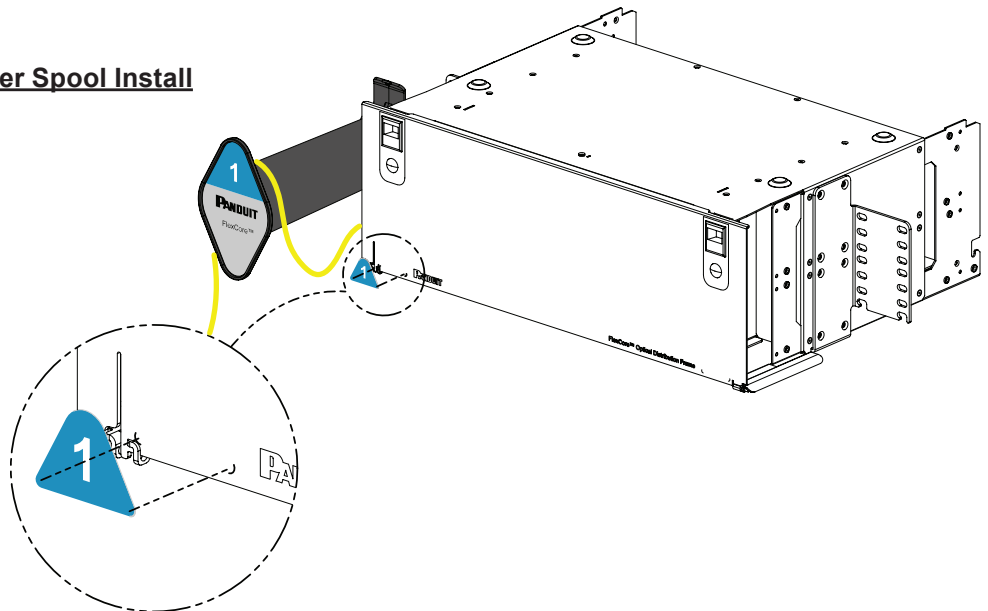

FS204

FlexCore™ Front-Access Patchcord Routing Guide Installation Instructions

*See for more detailed information on cable routing & different configuration options

For Technical Support: www.panduit.com/resources/install_maintain.asp

FlexCore™ System Installation Instructions

Installation Instruction Number	Panduit Part Number	Description
FS187	FOBKF**(Y/A)M1	Fiber Breakout Kit, Flat Ribbon Furcation Tube
FS190	FDF45**	FlexCore™ Optical Distribution Frame
FS191	FDVCM1545**	FlexCore™ 150mm Vertical Cable Manager
FS192	FDVCM3045**	FlexCore™ 300mm Vertical Cable Manager
FS193	FDF45**X**	FlexCore™ Single Hinge Front Doors
FS194	FDFEP45**	FlexCore™ End Panels
FS198	FDUSP	FlexCore™ Fiber Spool
FS199	FDUSP6	FlexCore™ Fiber Spool 6-pack Color Coordinated Kit
FS200	FDS**-24-***	FlexCore™ Fusion Splice Cassette - Cable to LC Adapter
FS201	FDSN-24	FlexCore™ Fusion Splice Cassette - Cable to Cable
FS203	FDFUE4**	FlexCore™ 4RU Universal Enclosure
FS204	N/A	FlexCore™ Front Access Optical Distribution Frame Patchcord Routing Guide
FS205	FDFRC45**	FlexCore™ Frame Rear Panel
FS206	N/A	FlexCore™ Front Access Ingress/Egress Cabling Guide

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT
www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654