

DUIT CT-902RCH / CT-901RCH

PA27898A02 Rev. 01 5-2019

REMOTE CONTROL HANDLE FOR THE CT-902HP & CT-901HP HYDRAULIC PUMPS INSTALLATION INSTRUCTIONS

© Panduit Corp. 2019

Hook-Up for CT-902HP Pump:


- 1. Unplug the Hydraulic Pump power cord from the electrical receptacle.
- 2. Remove the upper cover (Blue=120V; Yellow=220V) from the CT-902HP Hydraulic Pump by removing the four (4) socket head cap screws and washers. Set the upper cover and fasteners aside.
- 3. Disconnect any current controller from the hydraulic pump by disconnecting the controller cable wires from the hydraulic pump. The controller cable is easily disconnected by unplugging the bullet-type disconnects. Make a note of the cable wires connections (color-coding) in the event that the controller would be re-installed.
- 4. Connect the CT-902RCH Remote Control Handle to the Hydraulic Pump by connecting the remote control handle cable, following the wiring diagram below. Replace cover.

120 V Units: (shown in illustration)

- Step 1: Connect the **Black** on Remote Control Handle to the **Blue** on Pump.
- Step 2: Connect the **Green** on Remote Control Handle to **Yellow** on Pump.
- Step 3: Connect the <u>White</u> on Remote Control Handle to **Black** on Pump.

220 V Units: (not shown)


- Step 1: Connect the **Black** on Remote Control Handle to the **Black** on Pump.
- Step 2: Connect the **Green** on Remote Control Handle to <u>White</u> on Pump.
- Step 3: Connect the <u>White</u> on Remote Control Handle to Red on Pump.

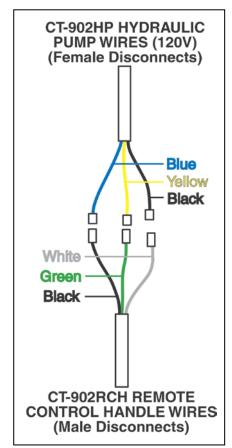

See Page 2 for CT-901HP Hook-Up

Hook-Up for CT-901HP Pump:

- 1. Unplug the Hydraulic Pump power cord from the electrical receptacle.
- 2. Remove the upper (orange) cover from the CT-901HP Hydraulic Pump by removing the four (4) socket head cap screws and washers. Set the upper cover and fasteners aside.
- 3. Disconnect any current controller from the hydraulic pump by disconnecting the controller cable wires from the hydraulic pump. The controller cable is easily disconnected by unplugging the bullet-type disconnects. Make a note of the cable wires connections (color-coding) in the event that the controller would be re-installed.
- 4. Connect the CT-901RCH Remote Control Handle to the Hydraulic Pump by connecting the remote control handle cable, following the wiring diagram below. Replace cover.
- Step 1: Connect the **Black** on Remote Control Handle to the **Black** on Pump.
- Step 2: Connect the **Green** on Remote Control Handle to Red on Pump.
- Step 3: Connect the <u>White</u> on Remote Control Handle to White on Pump.

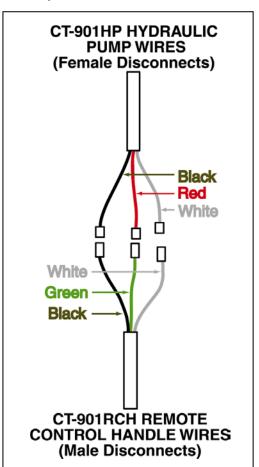

Email: techsupport@panduit.com

EU Website: www.panduit.com/emea

EU Email: emeatoolservicecenter @panduit.com



www.panduit.com

Technical Support Tel: 1-800-777-3300

Panduit Europe • EMEA Service Center Almelo, Netherlands Tel: +31 546 580 452 • Fax: +31 546 580 441