
 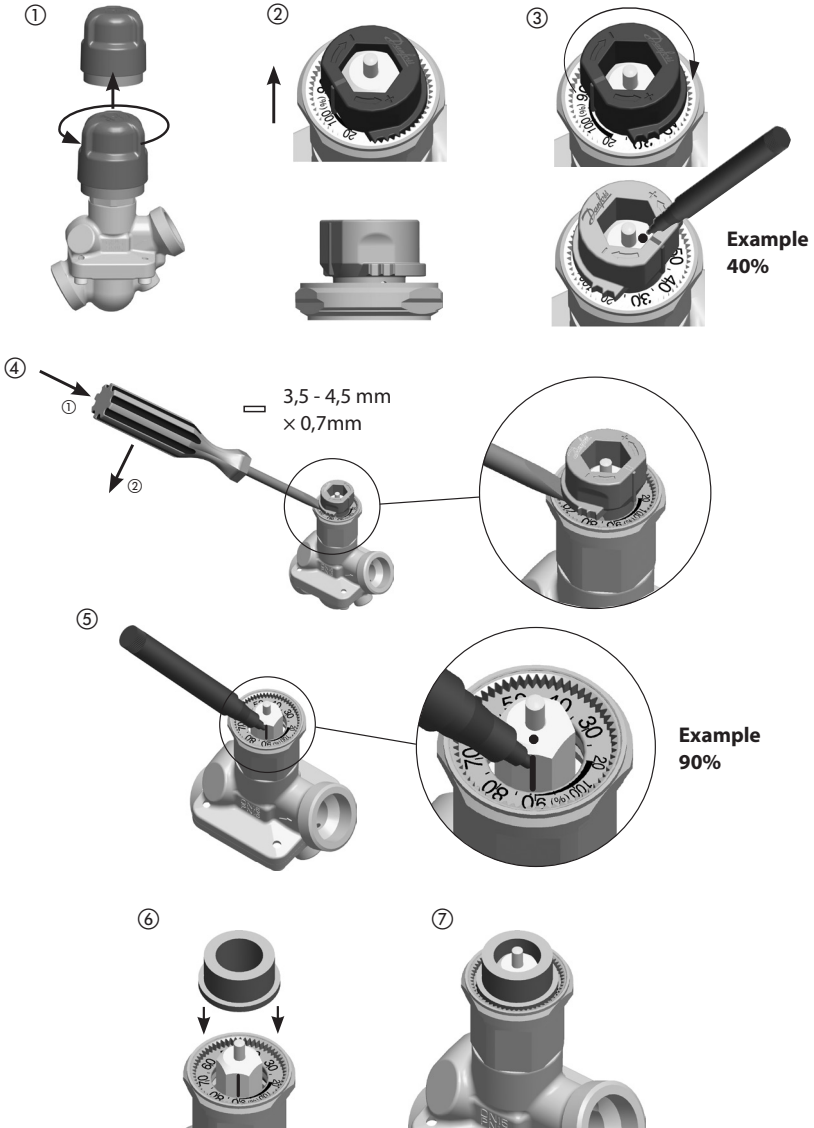


Installation Guide

Locking ring AB-QM (DN10-32)



Installation Guide Locking ring AB-QM (DN10-32)

Presetting the valve when locking ring is mounted

