

Accessoires pour BVLE / BVPE / BVL / BVP / BVLE FN / BVLE FS

TA



REPÈRE	TA
1	CAP509192
2	CAP509292
3	CAP509392
4	CAP509492
5	CAP509592
6	CAP509692
7	CAP509792
8	CAP509892
9	CAP509992

JL / JP



REPÈRE	JP*	JL*
1	CAP555170	CAP550170
2	CAP555270	CAP550270
3	CAP555370	CAP550370
4	CAP555470	CAP550470
5	CAP555570	CAP550570
6		CAP550670
7		CAP550770
8		CAP550870
9		CAP550970

*JP pour version Polyamide

*JL pour version métallique

RMF



REPÈRE	RMF
1	CAP565160
2	CAP565260
3	CAP565360
4	CAP565460
5	CAP565560
6	CAP565660
7	CAP565760

RMC



REPÈRE	RMC
1	CAP565150
2	CAP565250
3	CAP565350
4	CAP565450
5	CAP565550
6	CAP565650
7	CAP565750

RM



REPÈRE	RM
1	CAP565140
2	CAP565240
3	CAP565340
4	CAP565440
5	CAP565540
6	CAP565640
7	CAP565740

Clé compas



REPÈRE	CLEF COMPAS	CLEF À ERGOT
1 à 3		CAP593010
4 à 5	CAP593050	CAP593020
6 à 7		CAP593030

Clé à ergot

