









 
 
 
 

 
PViQ™ Port LED Identification




QUICK REFERENCE

| LED | Status | Meaning | LED | Status | Meaning |
|--|--------------------------------|---|---|---------------------------------|---|
|  | off | Normal Operating State |  | Flashing Red | Move, Add, or Change (MAC) is pending on this port. Waiting for remove. |
|  | Solid Red <i>(One Port)</i> | Secure Mode Violation |  | Flashing Green | Move, Add, or Change (MAC) is pending on this port. Waiting for insert. |
|  | Solid Amber | Panel is in Learn Mode, with a single ended connection on this port |  | Flashing Green/Red | Trace is active on this port. If a patch cord is connected, the far end port will also flash. |
|  | Solid Green | Connection successfully "learned." |  | Solid Red <i>(ALL Ports)</i> | Panel is in Maintenance Mode |

PVIQ™ IU LED Identification

QUICK REFERENCE

| IU Display | MODE | Meaning | IU Display | MODE | Meaning |
|--|--------|--|--|-----------------|---|
|  | SECURE | Normal operating state |  | MAC | Notifies users when change orders are pending |
|  | LEARN | Commit the current patch field to the database (9-wire cross connect) |  | MAC | MAC in progress – single sided connection |
|  | TRACE | Directs users to the near and far end of patch field for end-to-end connectivity |  | Firmware Update | A firmware update of the PM is in progress |

| MODE | Meaning | Full Panel Display |
|-----------------|--|---|
| MAINTENANCE | Perform system resets |  |
| LOCATION | Identify where a specific panel resides |  |
| FIRMWARE UPDATE | An update of the panel firmware is in progress |  |