



—  
INSTALLATION INSTRUCTION

# Fuse bases


## OFAZ00\_

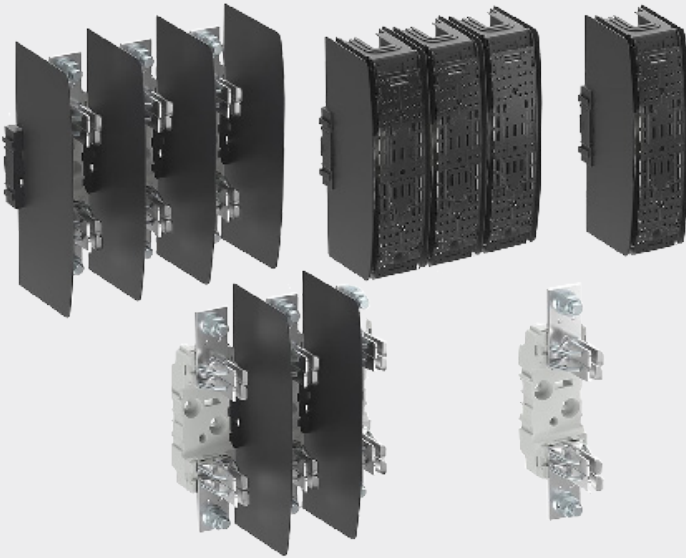

# Installation

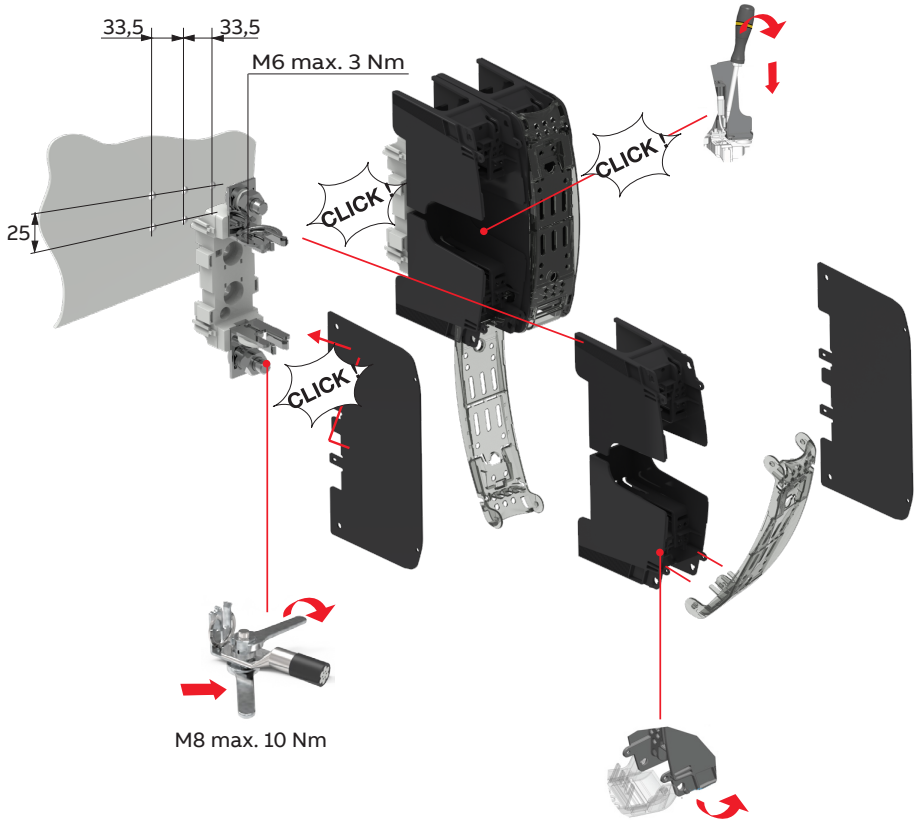


# Dimension drawings

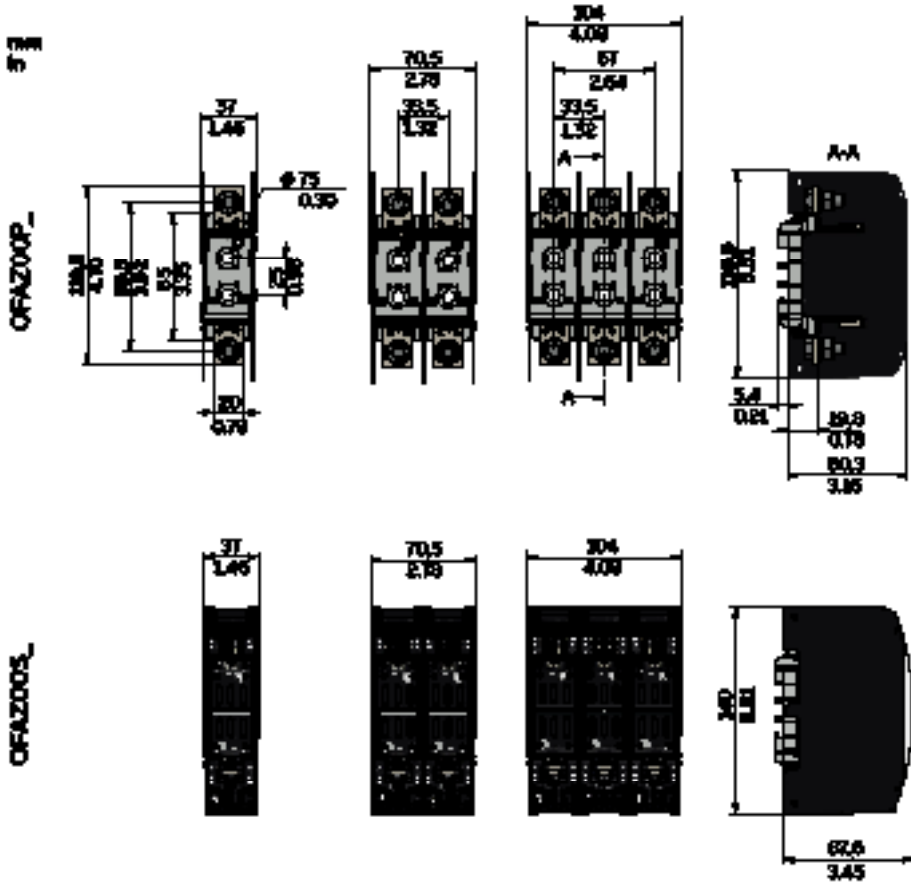




?

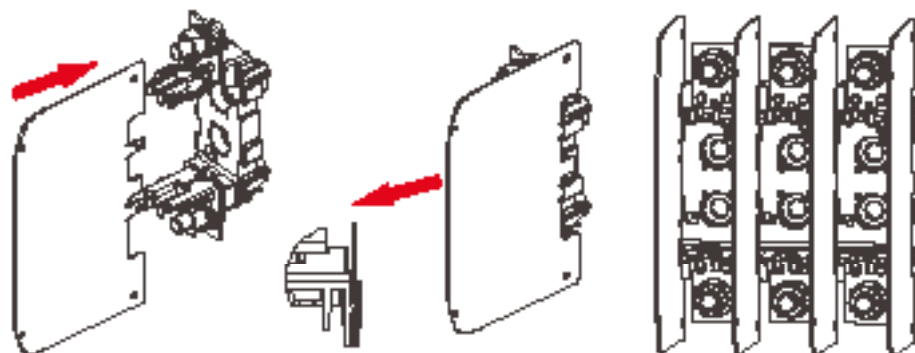




?

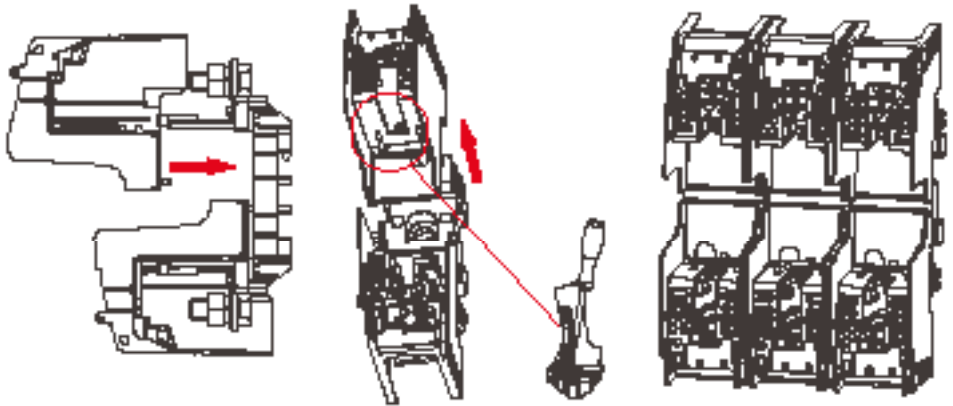



?

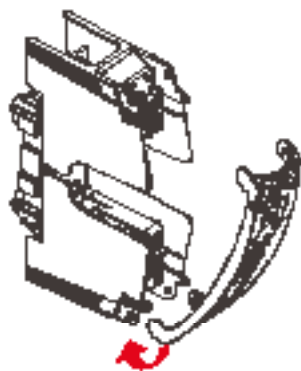





---

## Contact us

### **ABB Oy**

P.O. Box 622  
FI-65101 Vaasa  
Finland

**[abb.com/lowvoltage](http://abb.com/lowvoltage)**