

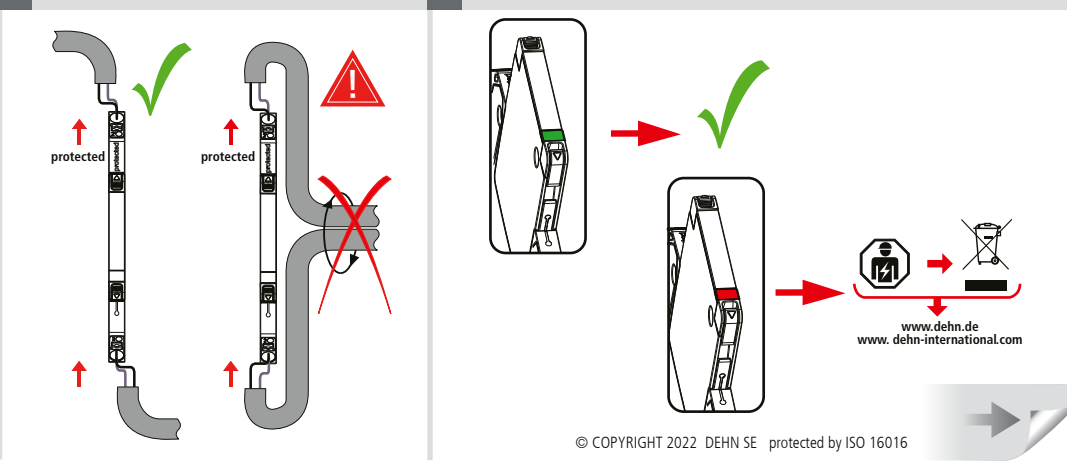
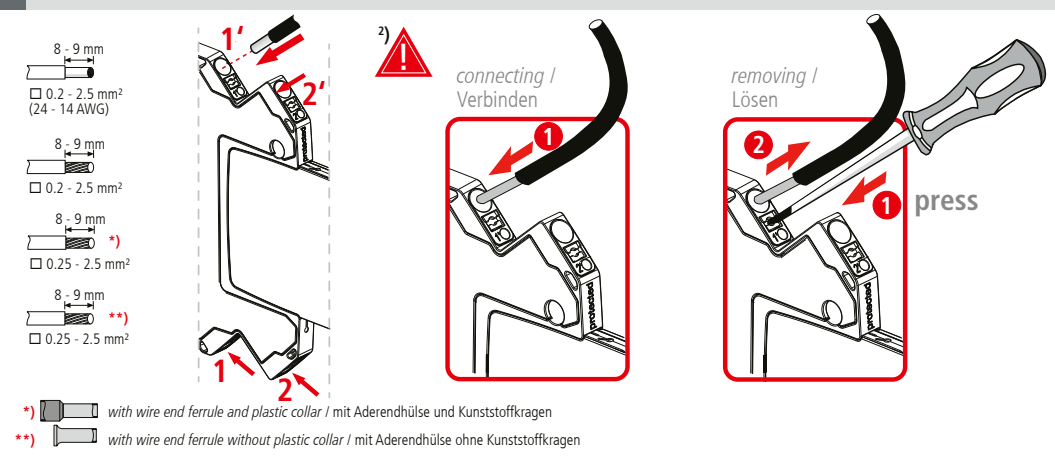
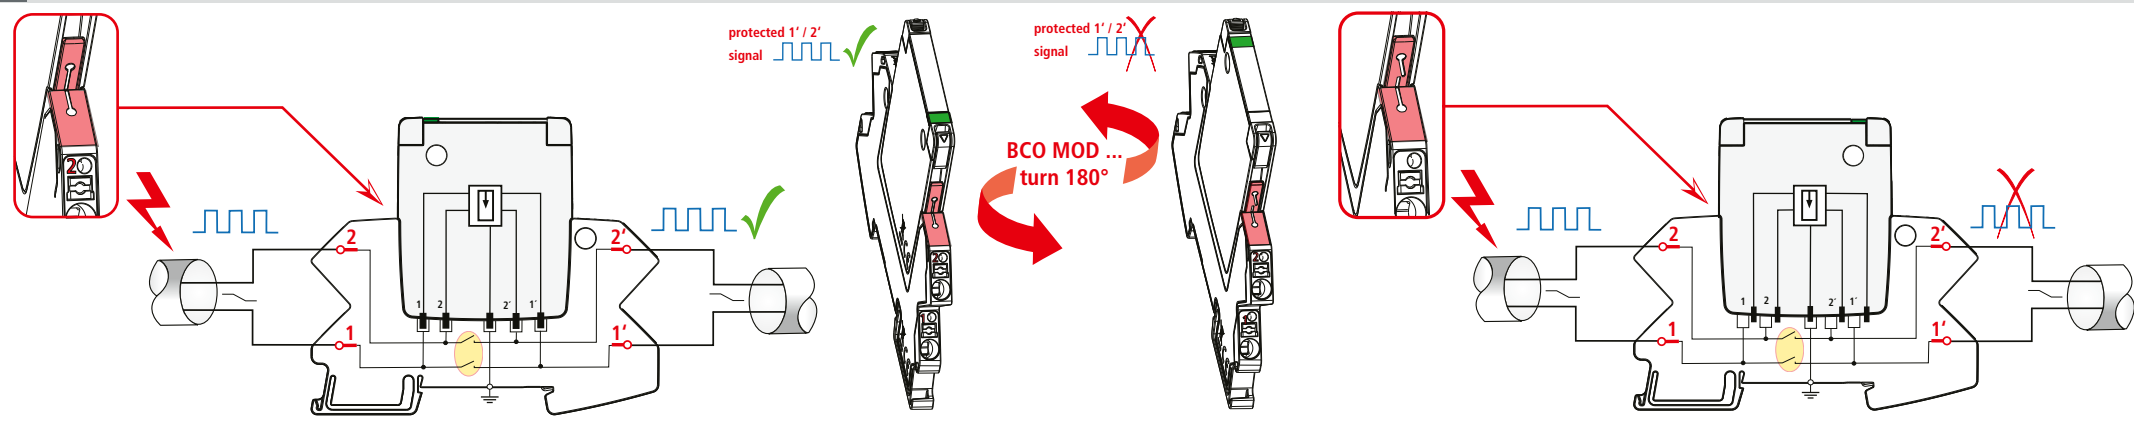


BLITZDUCTORconnect BCO ML2...


- DE Einbauanleitung
- GB Installation instructions
- IT Istruzioni di montaggio
- FR Instructions de montage
- NL Montagehandleiding
- ES Instrucciones de montaje
- PT Instruções de montagem
- DK Monteringsvejledning
- SE Monteringsanvisning
- FI Asennusohje
- GR Οδηγίες συναρμολόγησης
- PL Instrukcja montażu
- CZ Montážní návod
- TR Kurulum Talimatları
- RU Инструкция по монтажу
- CN 安装说明
- HU Szerelési útmutató
- JP 設置説明書

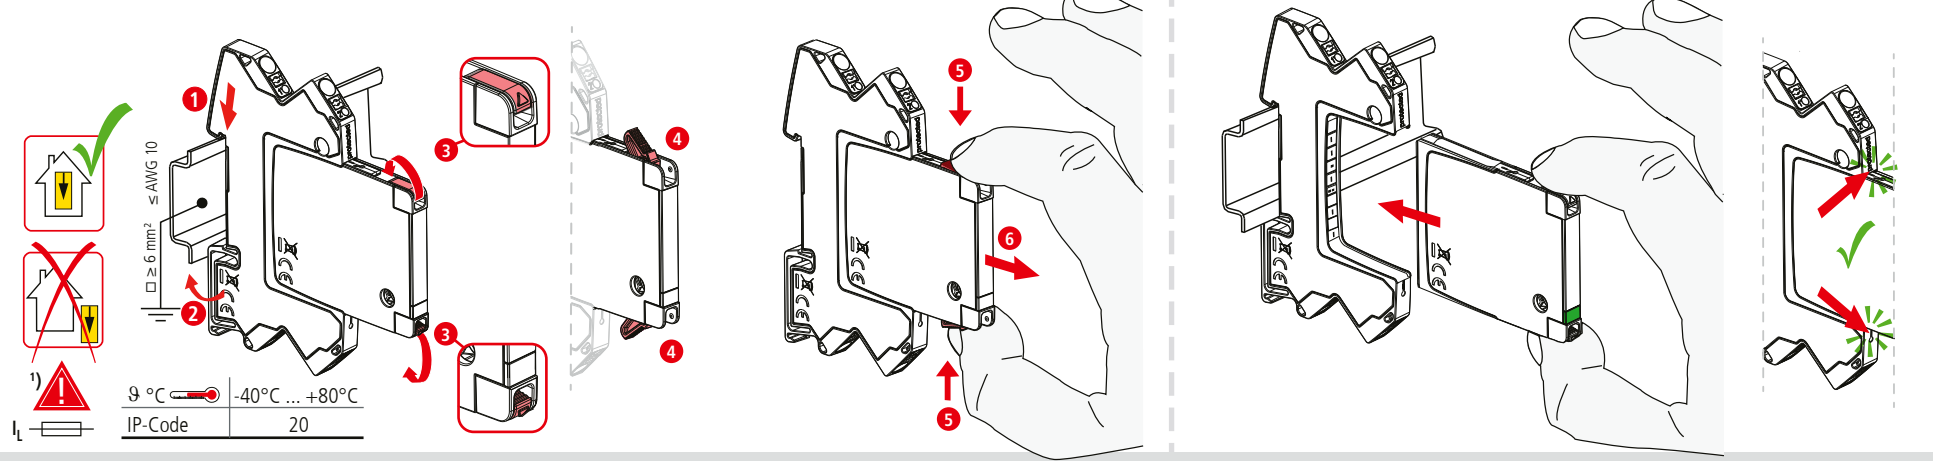


BLITZDUCTORconnect BCO ML2 ...

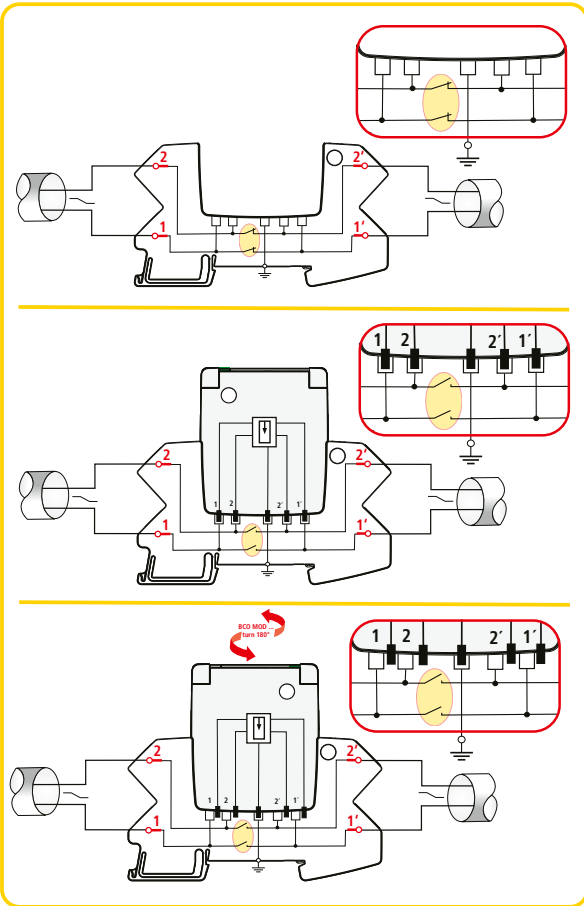


BCO M2 E 927 318

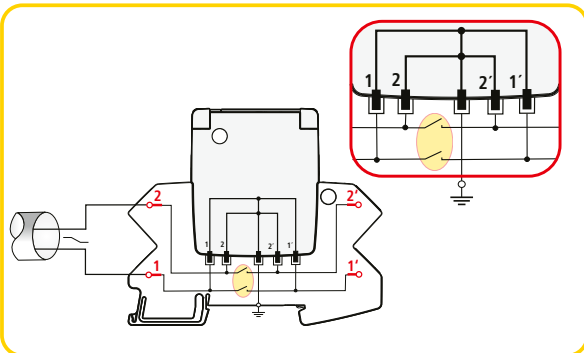


BCO ML2 BD XXX 927 2XX / 927 0XX

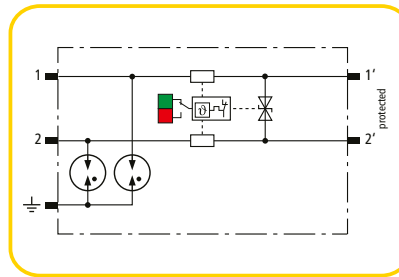


BCO ML2 BD HF XXX 927 2XX / 927 0XX

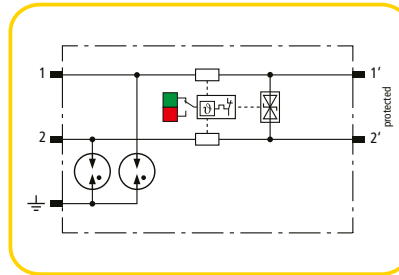


BCO ML2 MVG 230 927 290 / 927 090

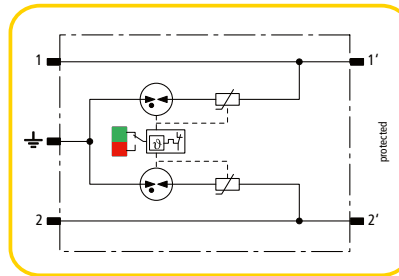


BCO ML2 BPD 24 927 214 / 927 014

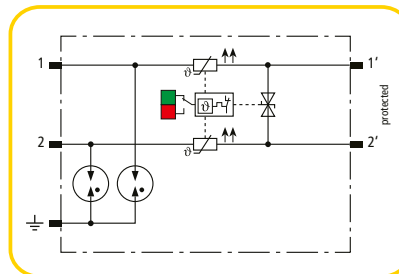

BCO ML2 BE XXX 927 2XX / 927 0XX

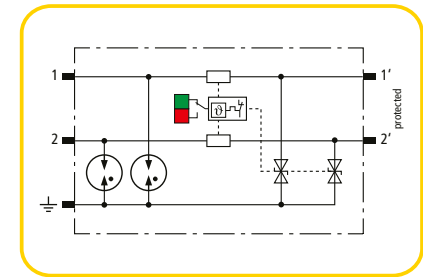

BCO ML2 BE HF XXX 927 2XX / 927 0XX

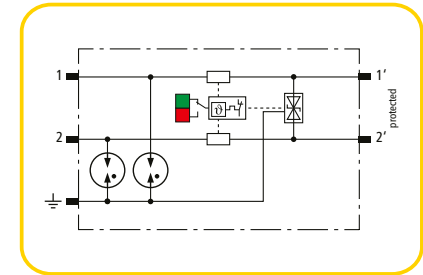

BCO ML2 B 180 927 210 / 927 010

