



Installation guide
Solenoid valve
Type EV222B

032R9275


032R9275

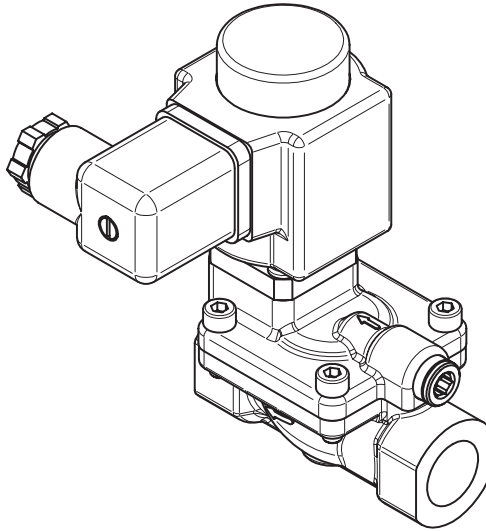


1

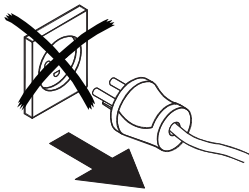


2

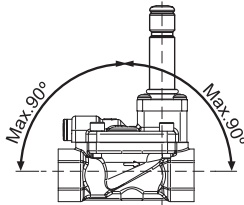


3

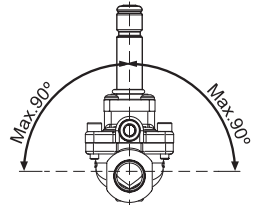

4

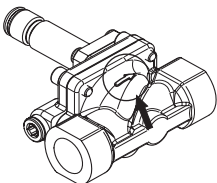

5

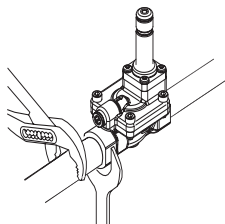

6

