





- for use with SR drivers
- one sensor can support Max 4 drivers. DALI line needs to be interrupted after max 4 drivers
- use the supplied T2T connector to electrically separate group of 1 sensor + 4 drivers with another group along the line



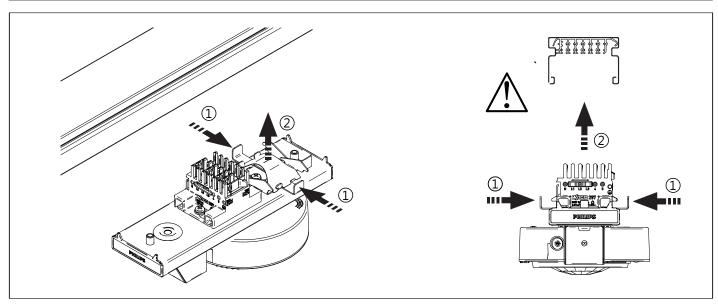

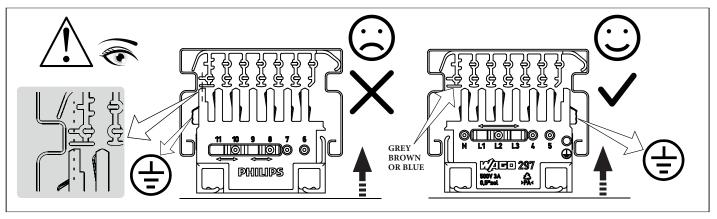

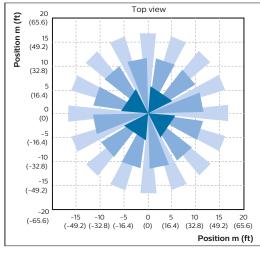


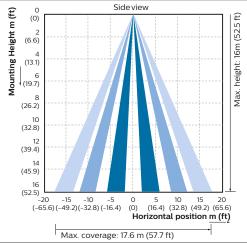


PIR occupancy sensing

Notes


The white areas are blind spots and the detection is based on the motion of the subject. An idle subject may not continue to trigger occupancy detection once the hold time expires. As PIR based sensing works on temperature difference between the subject and the ground level, the occupancy detection could vary due to clothing and size of the subject.

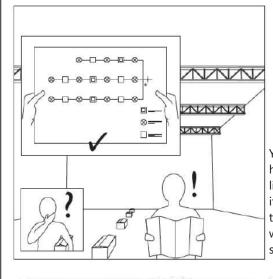


You must have a lighting plan, if you install the warehouse system.

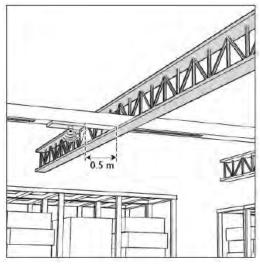

Do not install the warehouse system control unit close to steel or concrete constructions.

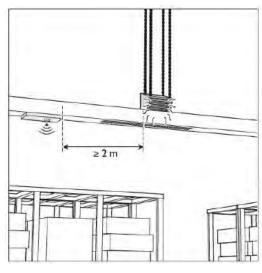

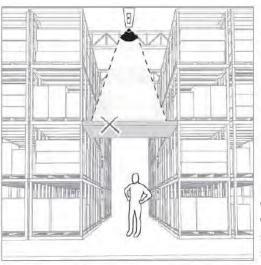

Do not block the view of the warehouse system sensor.