




T20 E / T21 E / T21 EF / T20 I / T21 I / T21 IF

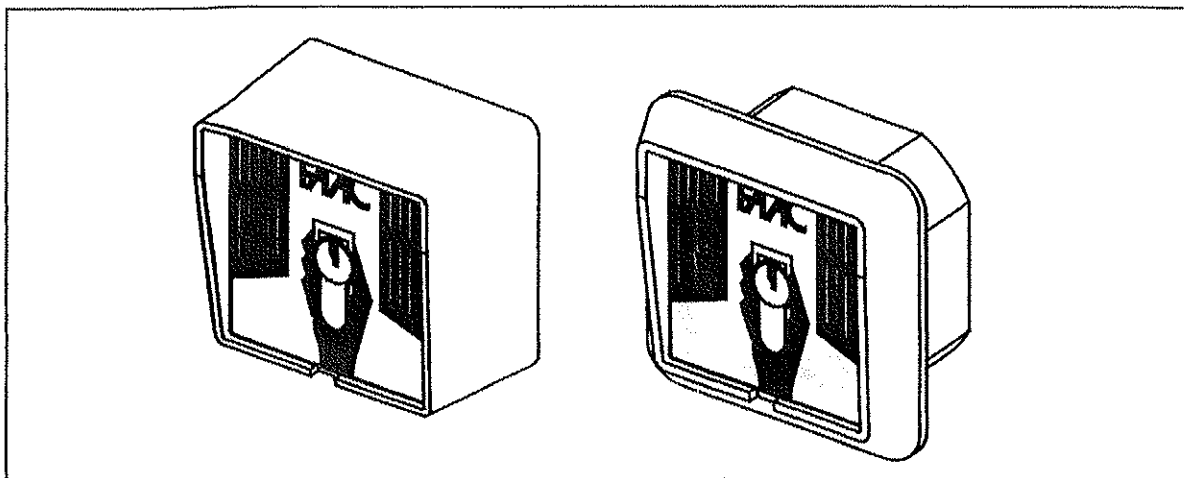


T20 E/T21 E

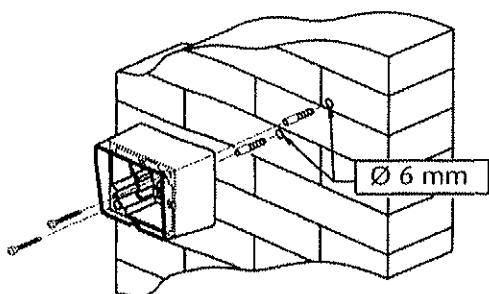


T20 E/T21 E

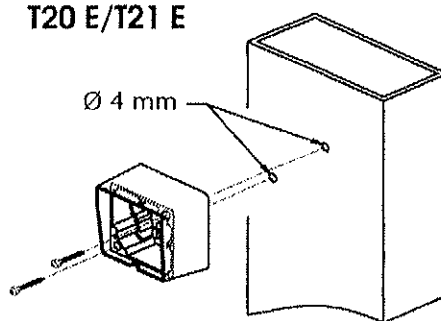


T21 EF

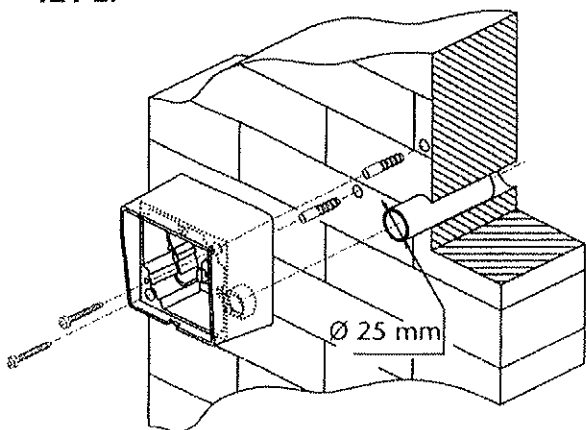


T20 I/T21 I

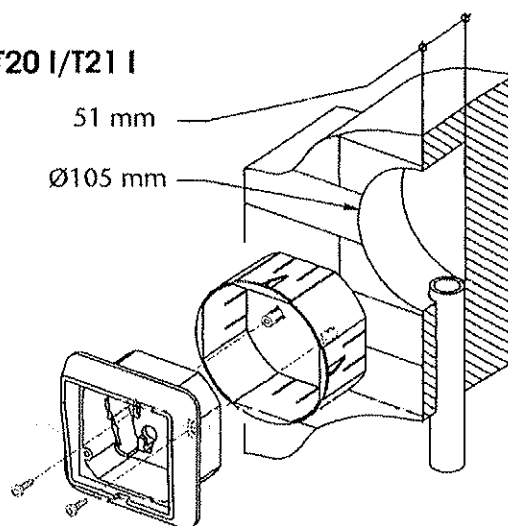

T21 IF

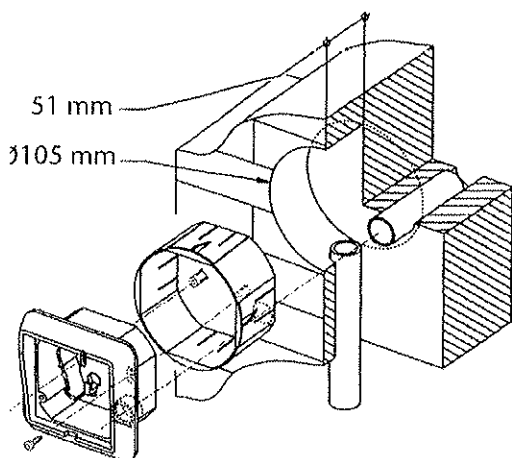

FAAC

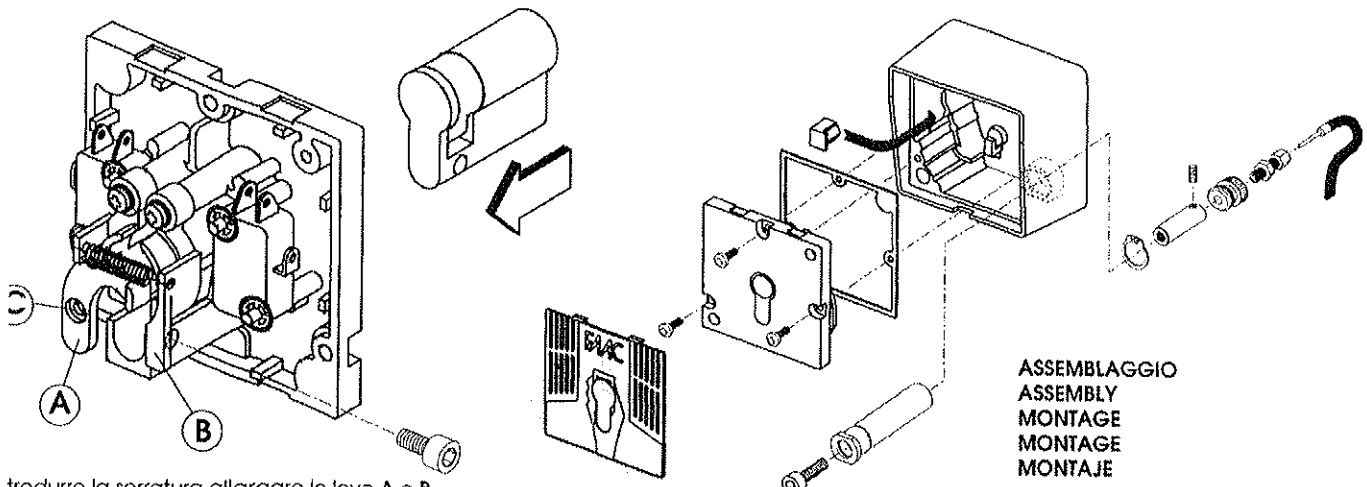

Introdurre la serratura allargare le leve A e B.
 Mod. T20 Inserir la vite C.
 Introduce the lock on the support by pulling levers A and B apart.
 T20 models insert the screw C.
 Introduire la serrure, écarter les leviers A et B.
 Modèles T20. Introduire la vis C.
 Schlüssel Einführung Hebel A, B ausweiten.
 Mod. T20 Schraube C einsetzen.
 Introducir la cerradura, separar las palanquitas A y B.
 Modelos T20 introducir el tornillo C.

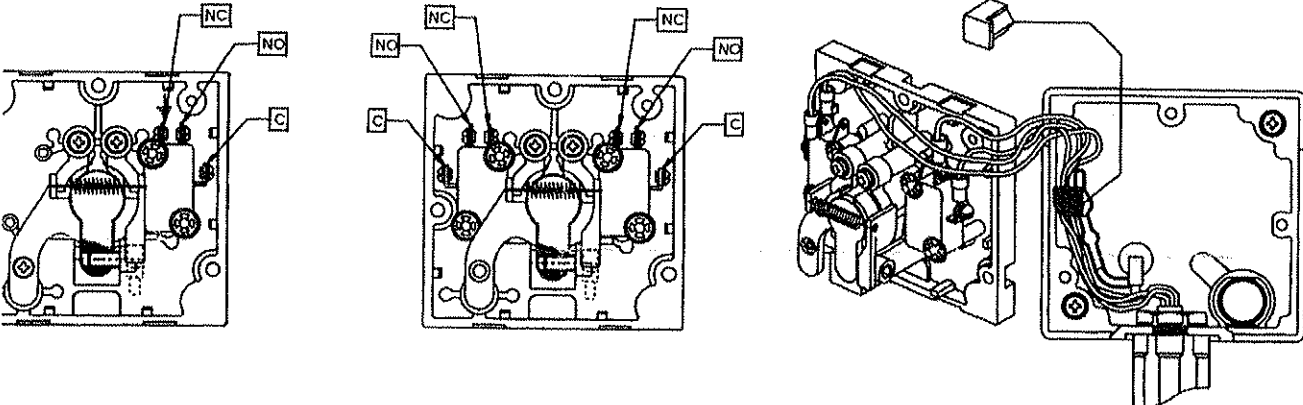


TABELLE COLLEGAMENTI SUI MORSETTI DELLE APPARECCHIATURE ELETTRONICHE FAAC
TERMINAL CONNECTION TABLES FOR FAAC ELECTRONIC CONTROL UNITS
TABLEAUX DES BRANCHEMENTS AUX BORNES DES PLATINES ELECTRONIQUES FAAC
TABELLE DER KLEMMENANSCHLÜSSE VON FAAC-STEUERUNGEN
TABLAS DE CONEXION A LOS BORNES DE LOS EQUIPOS ELECTRONICOS FAAC

SERIE T20

CONT. MICRO	401 MPS	402 MPS	440 MPS	444 MPS	590 MP	624 MPS	746 SD1	746 MPS	844 MP	826 MPS
N.O.	2	1	1	1	A/O	1	6	2	2	2
COM.	1	3	7	7	B/W	5	3	1	1	1

SERIE T21

CONT. MICRO	200 BT	200 MPS	401 MPS	402 MPS	440 MPS	444 MPS	624 MPS	746 MPS	844 MP	826 MPS
N.O.	OPEN	1	2	1	1	1	1	2	2	2
COM.	COM.	4	1	3	7	7	5	1	1	1
N.C.										
N.O.	CLOSE									
COM.	COM.	4	1	3	7	7	5	1	1	1
N.C.		3	4	4	4	4	3	3	4	4

ATTENZIONE: UTILIZZARE I PULSANTI A CHIAVE SERIE T 20/T 21 SOLO PER COMANDI IN BASSA TENSIONE
WARNING: USE T20/T21 KEYSWITCHES FOR LOW VOLTAGE IMPULSES ONLY
ATTENTION: N'UTILISER LES CONTACTEURS A CLÉ SERIES T20/T21 QUE POUR ENVOYER DES IMPULSIONS BASSE TENSION
ACHTUNG: DIE SCHLÜSSELSCHALTER T20/T21 SIND NUR FÜR KLEINSPANNUNGSBEFEHLE EINZUSETZEN
ATENCION: UTILIZAR LOS PULSADORES CON LLAVE SERIES T20/T21 SOLO PARA IMPULSOS EN BAJA TENSION