


### Vertical Blanking Panels (*Upper Panel Installation*)

- Install Flap Seals on top edges of Upper Blanking Panels
- Install Left-side and Right-side Upper Blanking Panels to the backside of the front adjustable Equipment Rails.

### NOTES


- Some views in this document may vary slightly from your actual cabinet configuration.
- Rear equipment rails have been removed from some views to add clarity

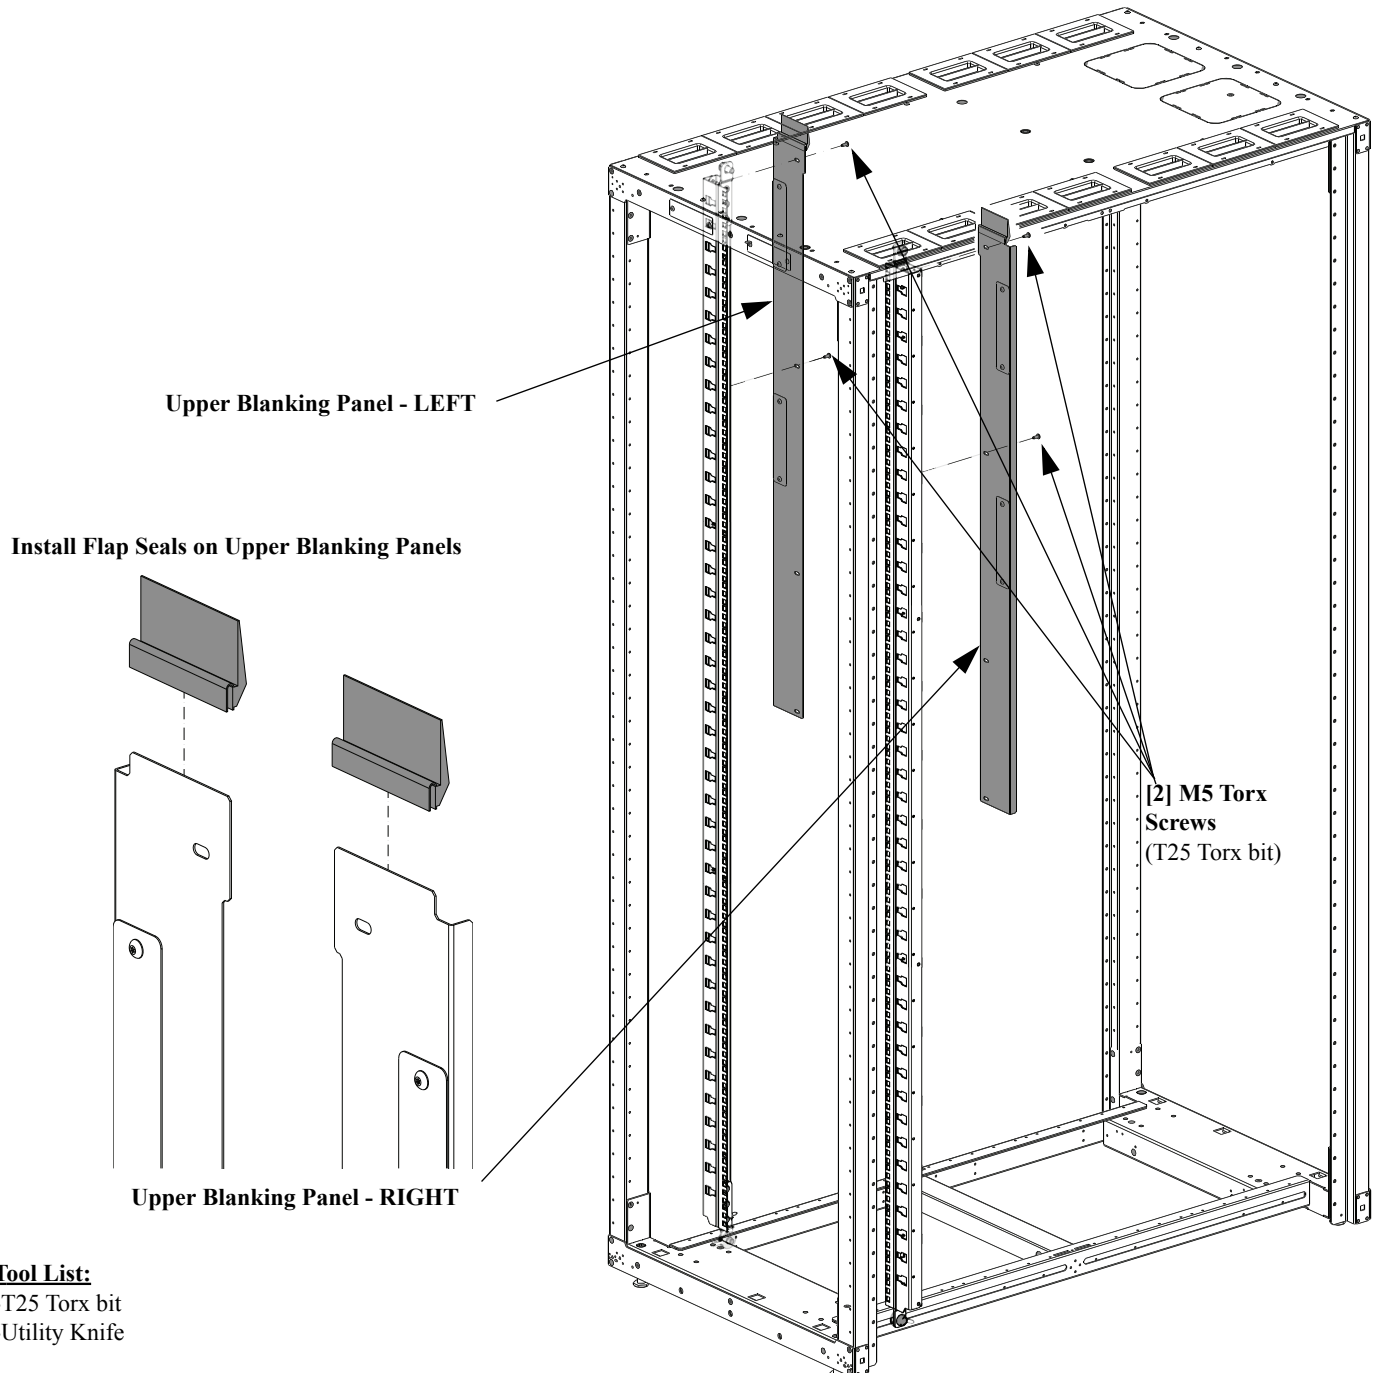

### Vertical Blanking Panels (*Lower Panel Installation*)

- Install Left-side and Right-side Lower Blanking Panels
- Ensure that Lower Panels overlap Upper Panels

Lower Blanking Panel - LEFT

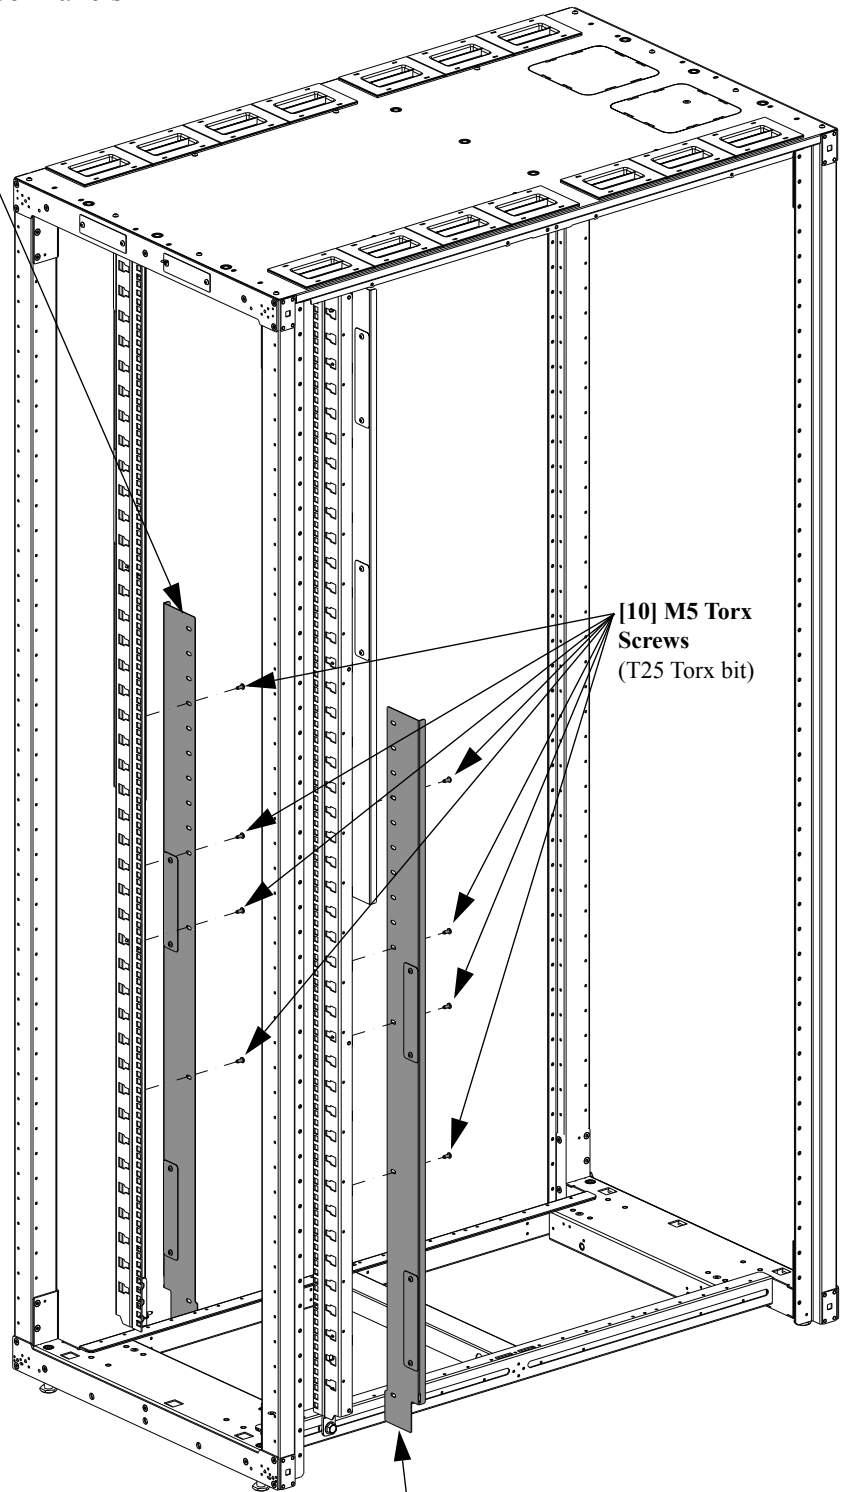


[10] M5 Torx  
Screws  
(T25 Torx bit)

Lower Blanking Panel - RIGHT


### Horizontal Blanking Panels (*Flap Seal and Screw Installation*)

- Install [2] Flap Seal sections onto edges of Top and Bottom Horizontal Blanking Panels
- Insert [3] M5 Torx Screws into each Horizontal Blanking Panel

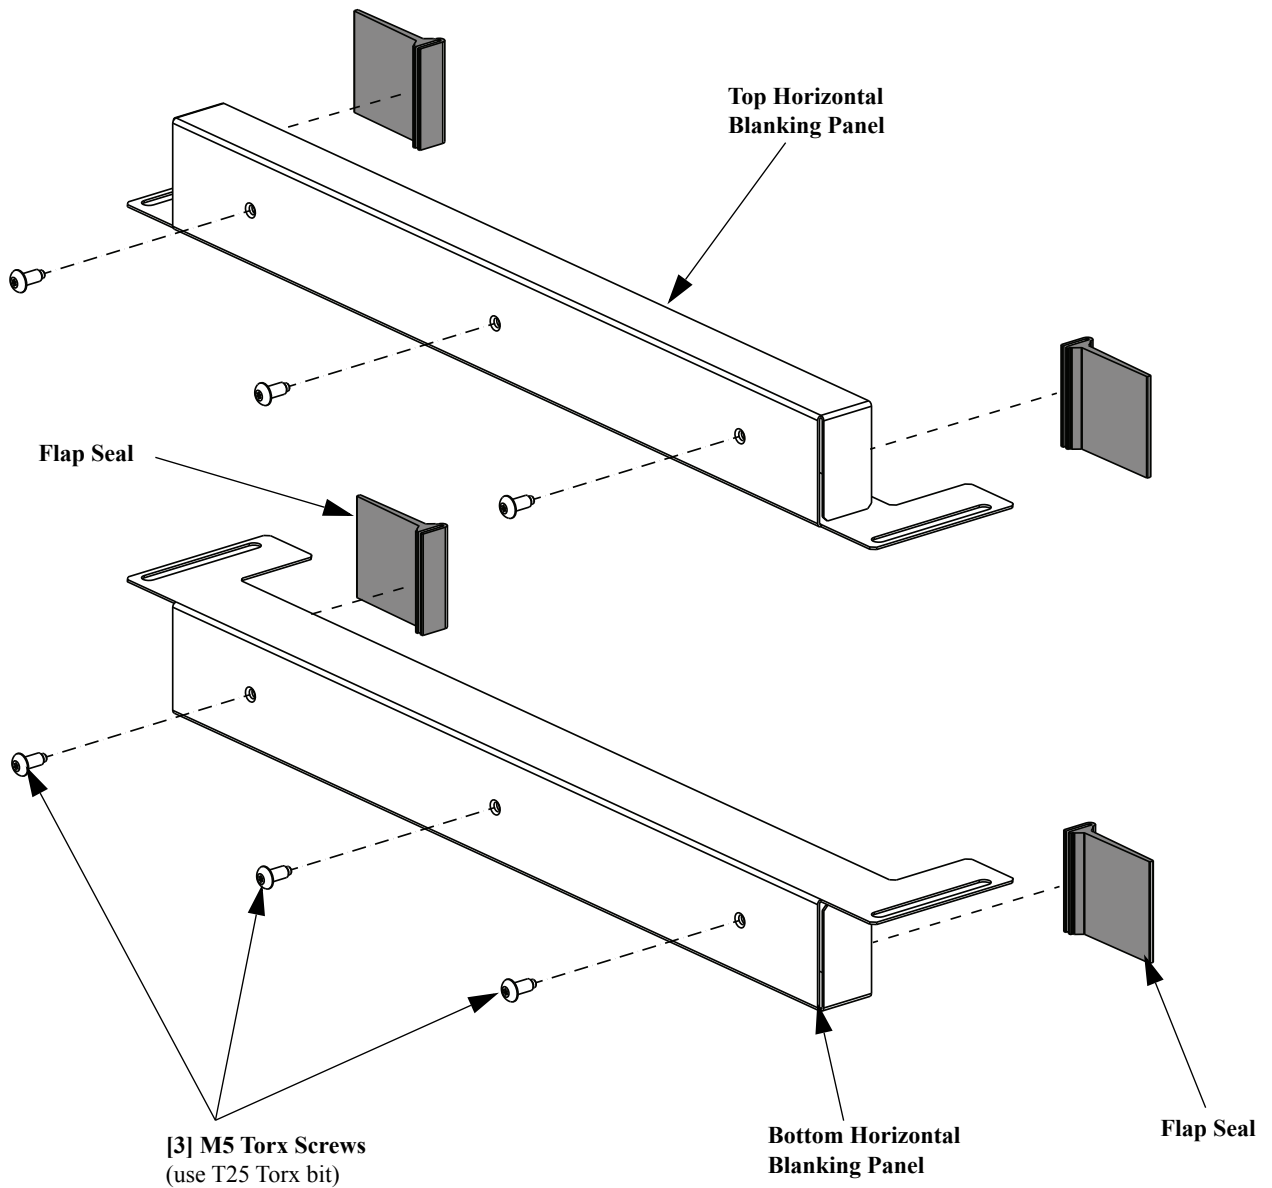


## Vertical Blanking Panels (*Top Seals*)

- Align front face of Horizontal Blanking Panel with Equipment Rails and install to the top front to back beams using [2] M5 torx screws.
- Attach D-shaped Rubber Seal to Horizontal Blanking Panel
- Ensure that Flap Seals are positioned tight against top of cabinet.

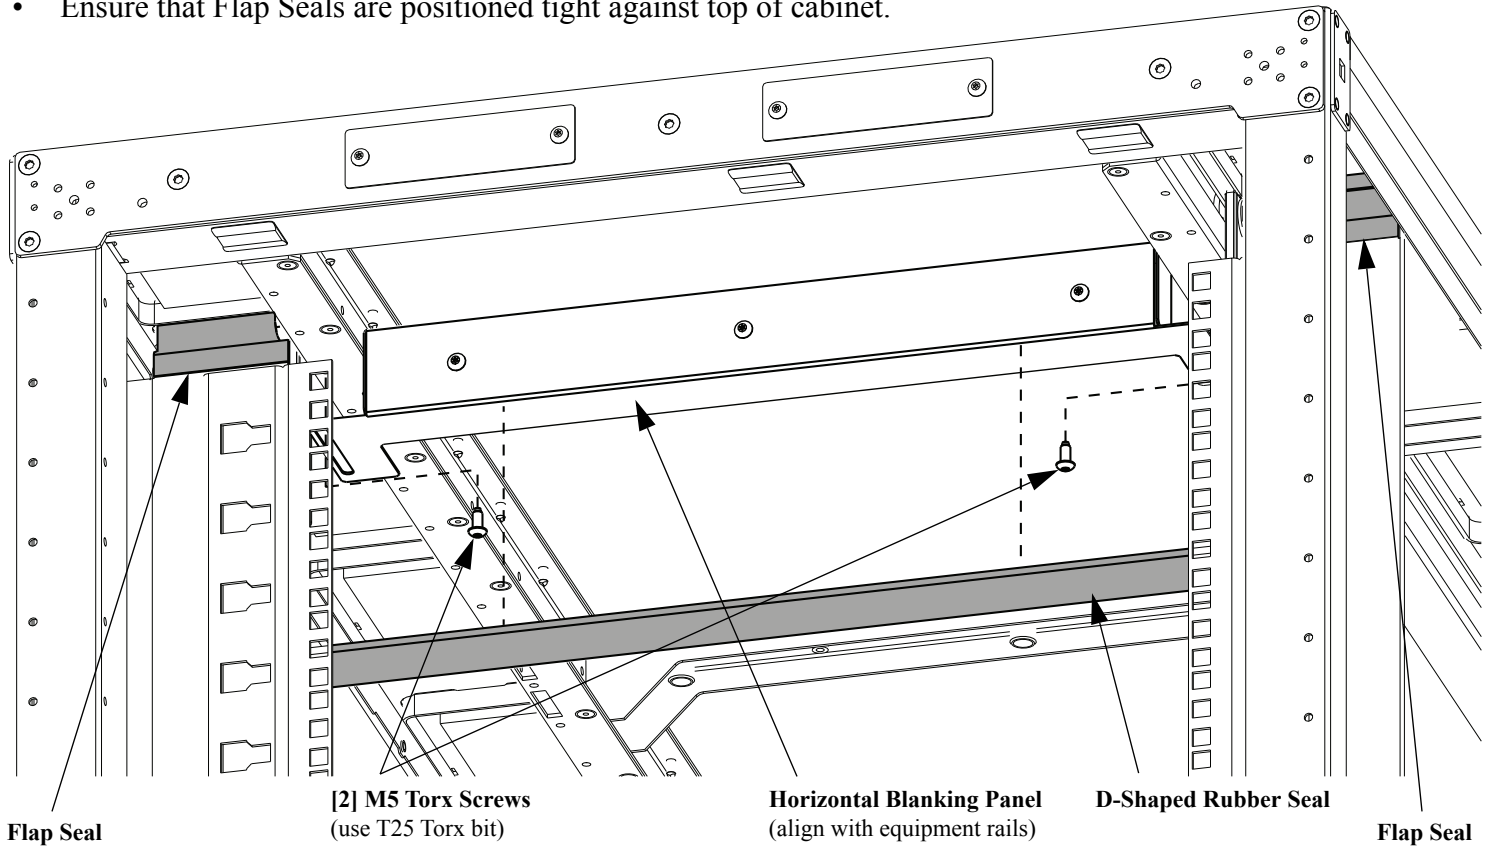


## Top Blanking Panel (*Integral Cabinet Top Cable Routing System - ONLY*)

- Adjust width of Top Blanking Panel
- Apply Adhesive Seal to top edge of Top Blanking Panel (cut to length)
- Loosen [3] screws on front face of Horizontal Blanking Panel
- Position keyholes of Top Blanking Panel over [3] screws, and slide panel downward
- Tighten [3] screws once Top Blanking Panel is in place

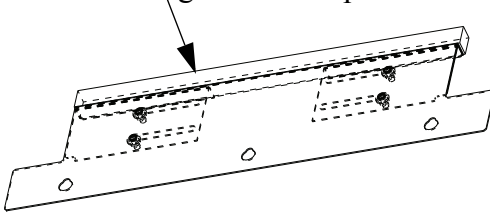


Top Blanking Panel

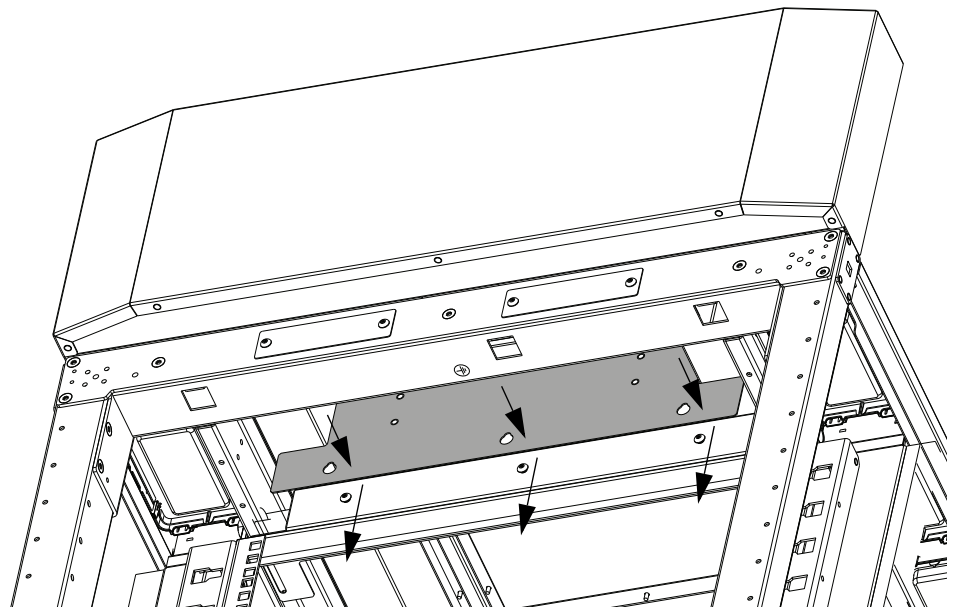


## Vertical Blanking Panels (*Side Seals*)

- Attach 3/8" Bulb Seals to vertical edges of Blanking Panels by sliding Seal channel over Blanking Panel flange. - Trim Seal length if necessary

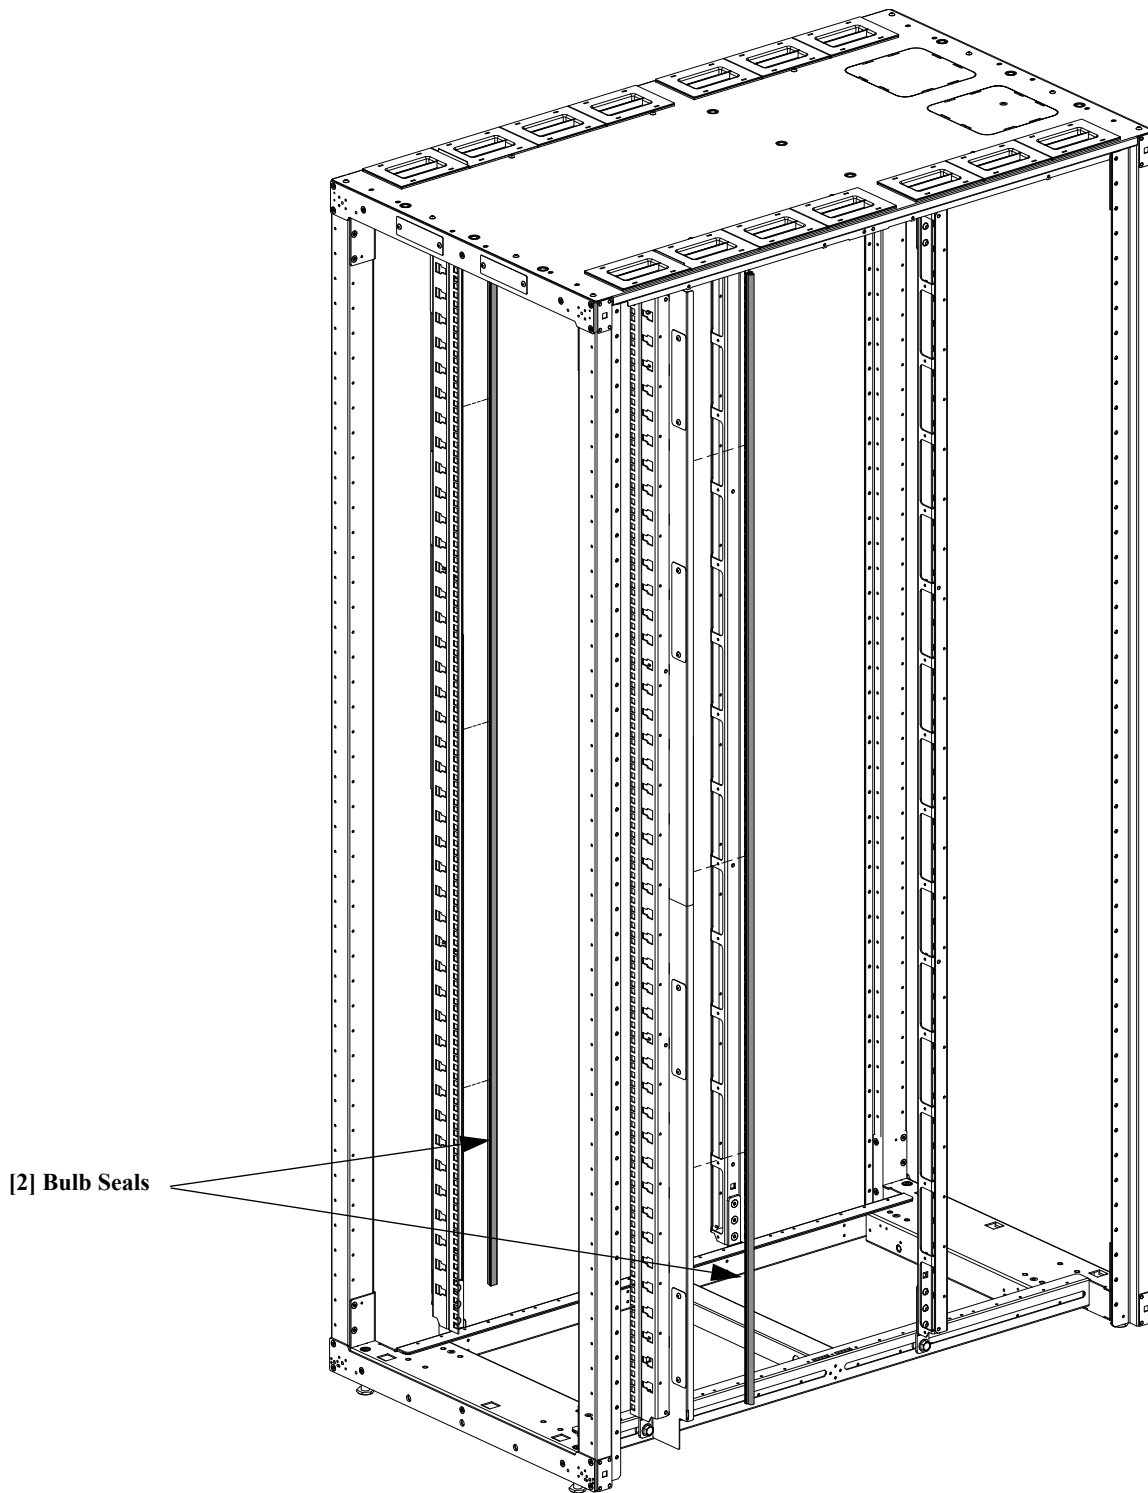


### Vertical Blanking Panels (*Floor Seals*)

- Align front face of Horizontal Blanking Panel with Equipment Rails and install to the lower front to back beams using [2] M5 Torx screws.
- Install [2] Bottom Seal Brackets (Left Bracket is noted by diamond cutout) using [2] M5 Torx Screws
- Attach D-shaped Rubber Seal to Horizontal Blanking Panel.
- Attach 25mm x 50mm Foam Seals to bottoms of Horizontal Blanking Panel and [2] Bottom Seal Brackets
- Attach 13mm x 25mm Foam Seals to outer edge of [2] Bottom Seal Brackets.

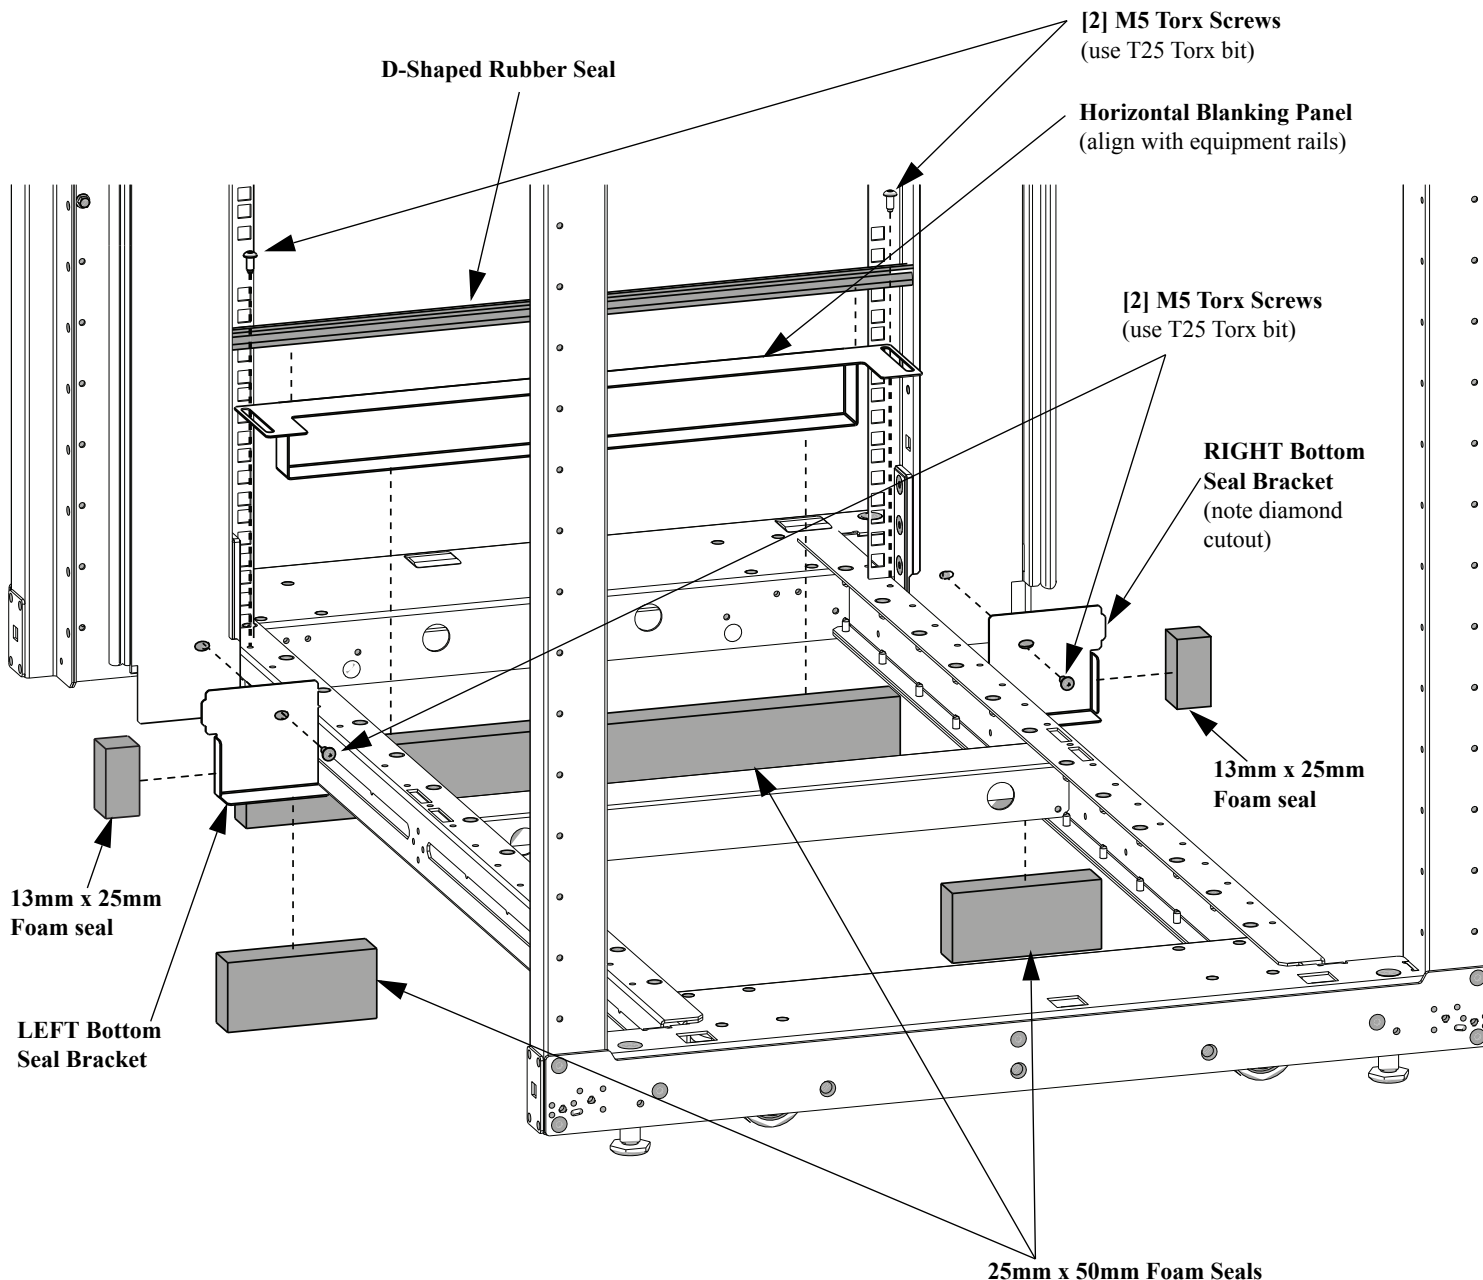


### Cabinet to Cabinet Seal

- Align Between Cabinet Bracket so the front face overlaps the front face of the Blanking panels.
- While holding Between Cabinet Bracket, attach Seal Cover to the Between Cabinet Bracket using M5 Torx Screw.
- Attach 25mm x 50mm Foam Seal to the bottom of the Seal Cover.

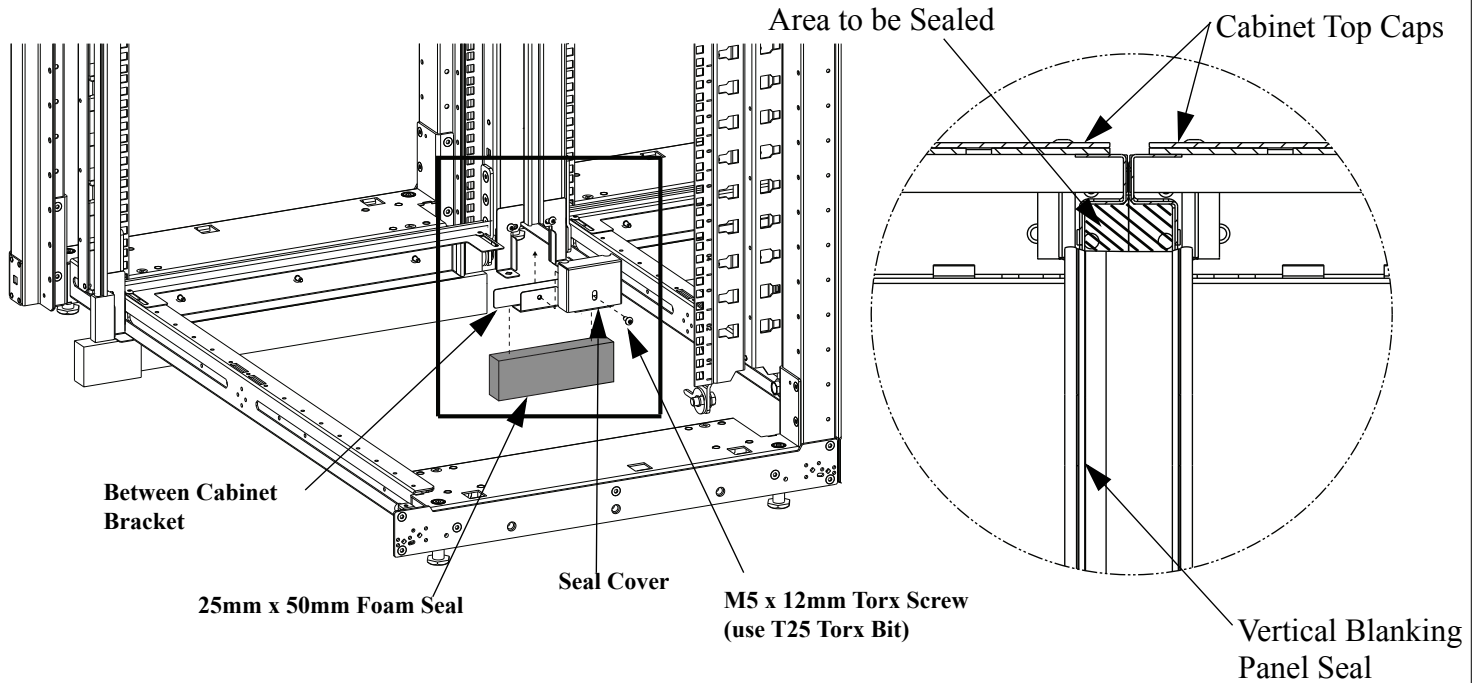


**Top Cabinet to Cabinet Gap Sealing Installation**  
 -Air Gap between top cap and Blanking Panels should be sealed with Blanking Foam Seal


Step 1:

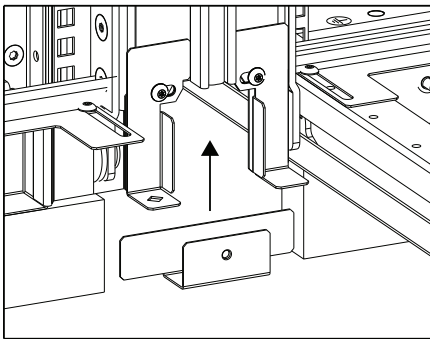

Step 2:

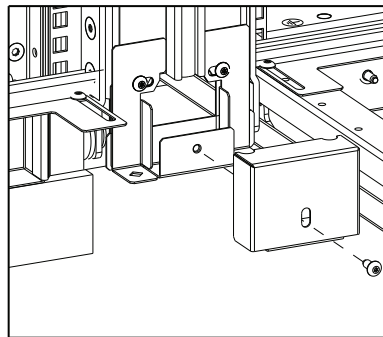

Step 3:

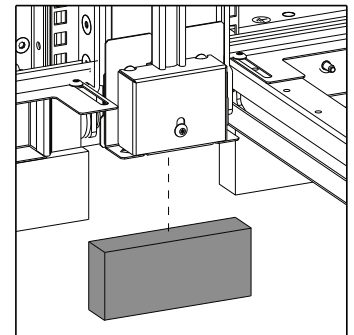

For Instructions in Local Languages  
 and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)



[www.panduit.com](http://www.panduit.com)

E-mail:  
[techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone:  
 866-405-6654