


Installation guide

Solenoid valve


Type EV258B

032R9283


032R9283

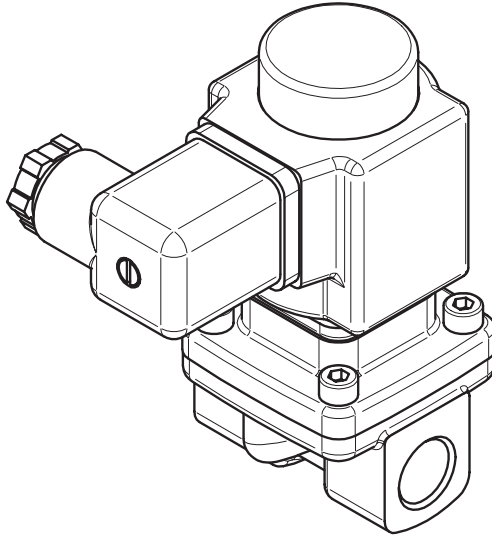


1

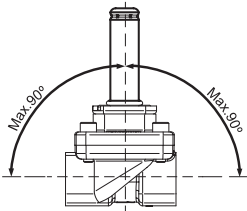


2

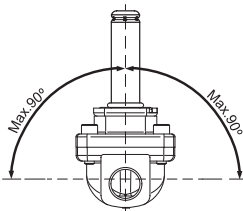


3

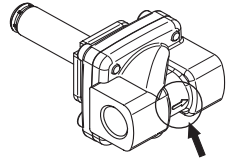

4

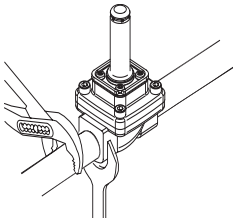

5

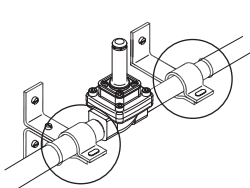

6

