



Duct System for a Cabinet Mounted Cisco 6504E (CNLTD52A2)

© Panduit Corp. 2012

INSTALLATION INSTRUCTIONS


CM514B

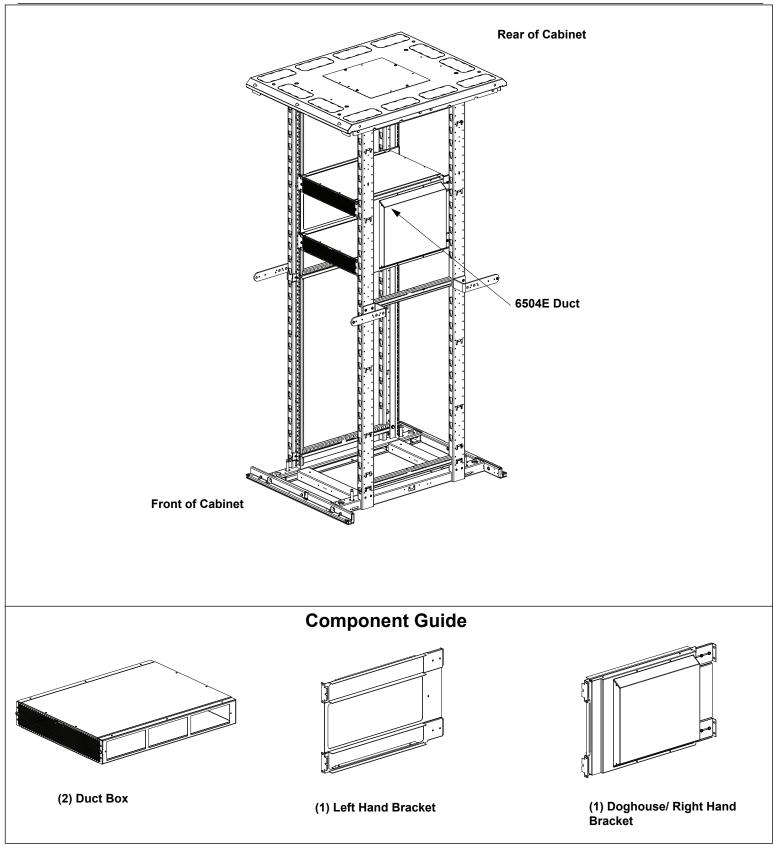

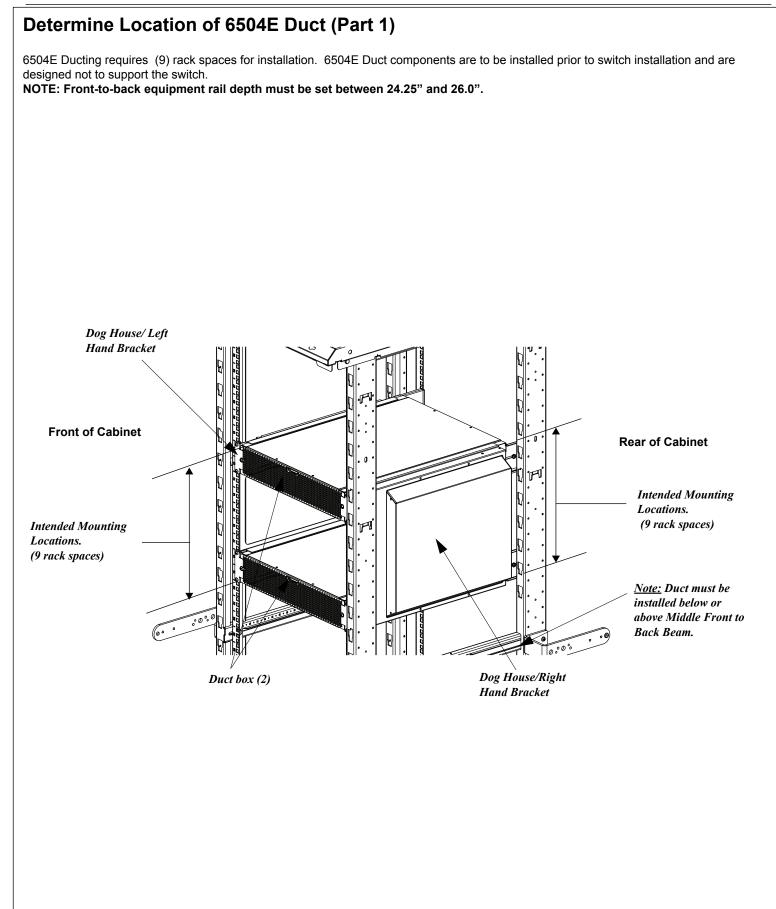


Device Placement

- Due to physical constraints posed by the front-to-back beams on the legacy Net-Access cabinet, there are certain areas of the cabinet that the device cannot be mounted when used in conjunction with this inlet duct.
- For new Net-Access switch cabinets (N***), there are no device keep-out areas. The only restriction on device is that 2 RU must be left open above and below the switch.
- NOTE: Numbers-up RU numbering (#1 at bottom) assumed.

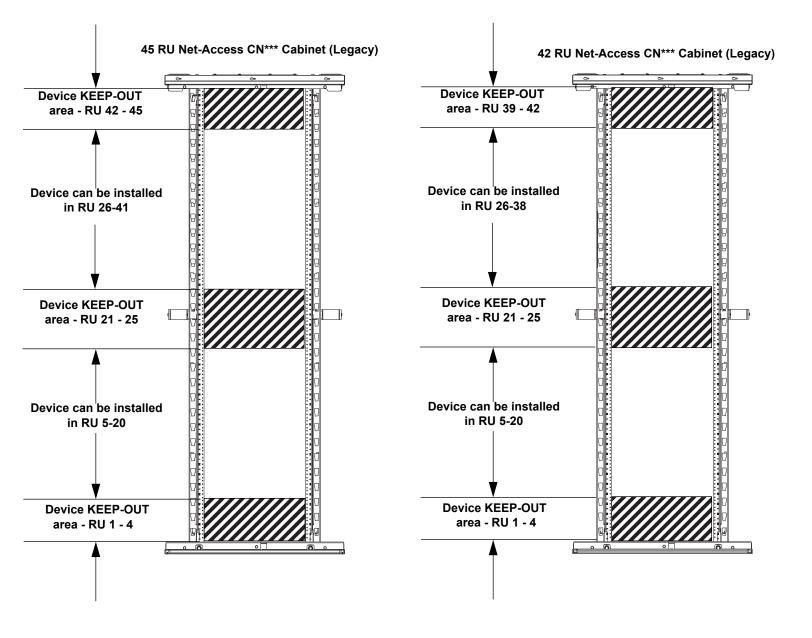

Install Cage Nuts

Insert (4) cage nuts per equipment rail at 6504E component mounting locations (*16 total cage nuts are to be installed*). (1) grounding cage nut (green) **must be** installed in each equipment rail. The view below depicts cage nut locations for (1) intended mounting location.

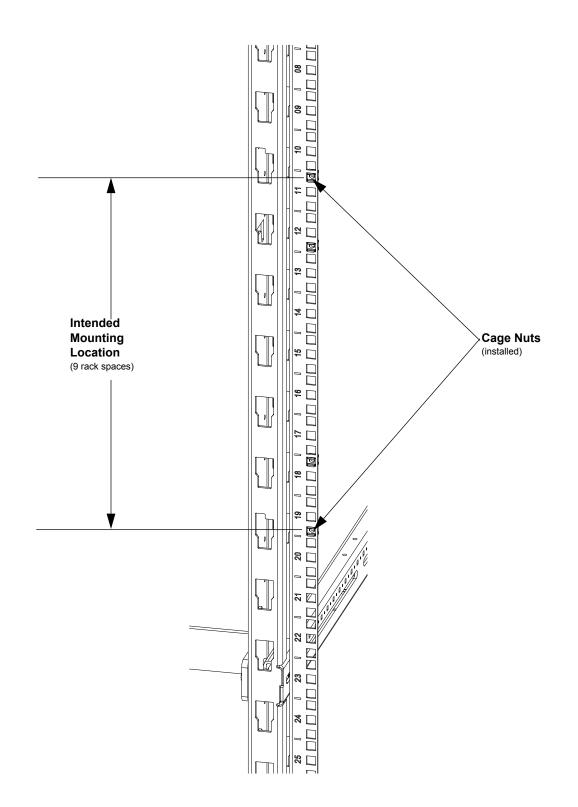


Left Hand Bracket Installation

Loosen the four nuts for the adjustment brackets and adjust the brackets to match the distance between the front and rear rails of the Server Cabinet. Align the Left Hand Bracket with the desired rack space, fasten the bracket using (4) #12-24 in the front rail and (4) in the rear rail. Tighten nuts on adjustment rail to lock in place. -Repeat previous steps for Right hand bracket.

Adjustment Brackets #12-24 screw (4) **Rear of Cabinet** #12-24 screw (4) Left Hand Bracket **Front of Cabinet** Adjustment Brackets Rear of Cabinet #12-24 screw (4) #12-24 screw (4) **<u>Note:</u>** Green Grounding Screw must go in Green Grounding Cage Nut. **Front of Cabinet Right hand bracket**

Duct Box Installation

Insert lower duct box into Left Hand Bracket and Right Hand Bracket by sliding duct box along the lower flange. Push in until stop has reached, secure box with (4) #12-24 and (4) #12 external tooth lock washer. -Repeat previous steps for upper duct box.

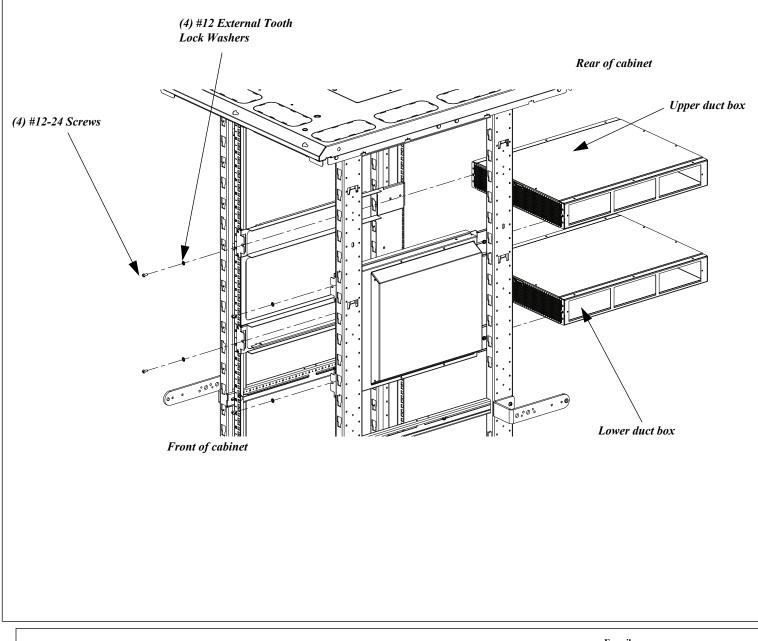

For Instructions in Local Languages and Technical Support: www.panduit.com/resources/install_maintain.asp



E-mail: techsupport@panduit.com Phone: 866-405-6654